

# FS-FlightControl Manual

### **Instructor Operator Station**

for Microsoft Flight Simulator, Prepar3D and X-Plane



2025-08-20 16:48 ii/ii

# **Table of Contents**

MOTION		1
Control Loading		1
_		
Hardware Status		2
	Pilot	
	Copilot	
Motion Device Status	General	3
Legend		3

2025-08-20 16:48 1/3


#### **MOTION**

Operate and monitor motion as well as control loading devices by **Brunner Elektronik**.

This way you remote control the software CLS2Sim provided by Brunner Elektronik that all everyday tasks can directly be monitored and controlled from within FS-FlightControl.


Only for in-depth profile changes you still need to use CLS2Sim directly.

# **Control Loading**

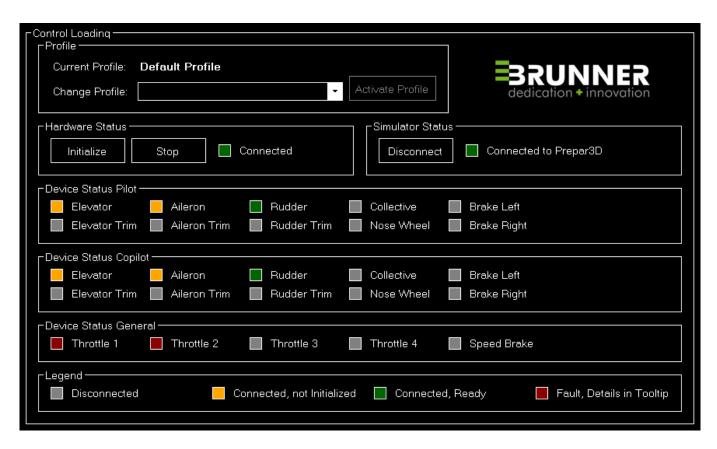

The second section is about your control loading devices.

#### **Profile**

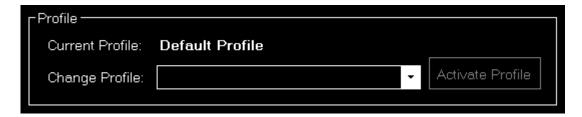

First the currently active profile is displayed.

Additionally you have the option here to select a different profile and active it.

2025-08-20 16:48 2/3

#### **Hardware Status**



The hardware status shows if CLS2Sim is currently connected to the motion and control loading devices.

If that is the case you can use the buttons Initialize, Stop and in case of current problems also Fault Reset to trigger corresponding actions regarding the devices.

#### **Simulator Status**



The simulator status shows if CLS2Sim is currently connected to a flight simulator. This also includes the name of the flight simulator.

You can use the button showing Connect or Disconnect accordingly.

#### **Motion Device Status Pilot**



Here you see the current status of all motion devices related to the pilot position.

## **Motion Device Status Copilot**



Here you see the current status of all motion devices related to the copilot position.

2025-08-20 16:48 3/3

#### **Motion Device Status General**



Here you see the current status of the remaining motion devices not related to a pilot position.

## Legend



Finally the color legend of the status color is shown here.

