



FS  
**FLIGHT**  
CONTROL  
[www.fs-flightcontrol.com](http://www.fs-flightcontrol.com)

# FS-FlightControl Manual

## **Instructor Operator Station**

for Microsoft Flight Simulator, Prepar3D and X-Plane



**FS-FlightControl · AB-Tools GmbH**

E-mail: [info@fs-flightcontrol.com](mailto:info@fs-flightcontrol.com) · Internet: [www.fs-flightcontrol.com](http://www.fs-flightcontrol.com)

Marsstraße 78, 80335 München, Germany · Phone: +49 89 38898588 · Fax: +49 89 38898589

Bank Account: Grenke Bank AG · IBAN: DE 49 20130400 0060270139 · BIC: GREBDEH1XXX

Register: Amtsgericht München, HRB 202859 · Finance Office: München für Körperschaften · VAT ID DE273587389

# Table of Contents

- STATISTICS** ..... 1
- General Statistics** ..... 1
- Airspeed ..... 1
- Altitude ..... 1
- Vertical Speed ..... 2
- Attitude ..... 2
- Change Displayed Data ..... 3
- Recording and Playback ..... 3
- Import and Export ..... 4
- Print Charts ..... 4
- Export to Google Earth ..... 4
- Approach Statistics** ..... 4
- Approach Details ..... 5
- Landing Report ..... 5
- Localizer Deviation ..... 6
- Glideslope Deviation ..... 6
- Print Approach Statistics ..... 6
- Reset ..... 7

# STATISTICS

 
Keep all important graphs on one view due to detailed approach graphs and landing report with export and replay functions including Google Earth export.

## General Statistics

In this section you get an overview about all important aircraft parameters.


You can click with the left mouse button on each of the graphs to show it maximized. Click on it again to revert it to normal size.

## Airspeed

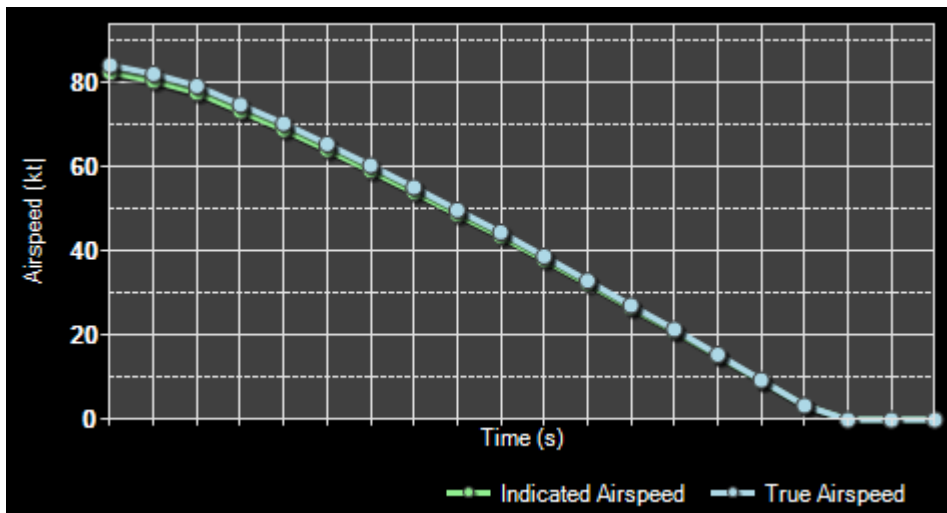


The first graph shows the current indicated and true airspeed.

## Altitude

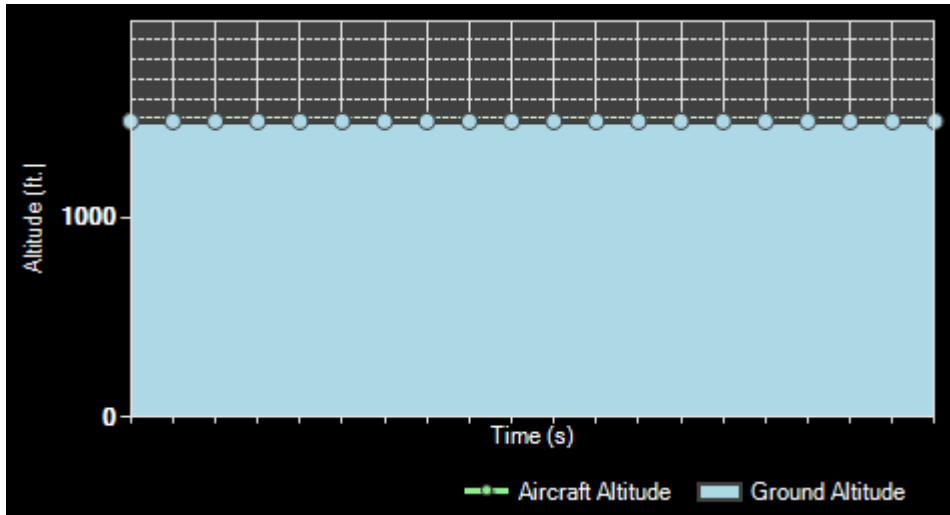 

Here the aircraft altitude above mean sea level (MSL) as well as above ground is displayed.

## Vertical Speed

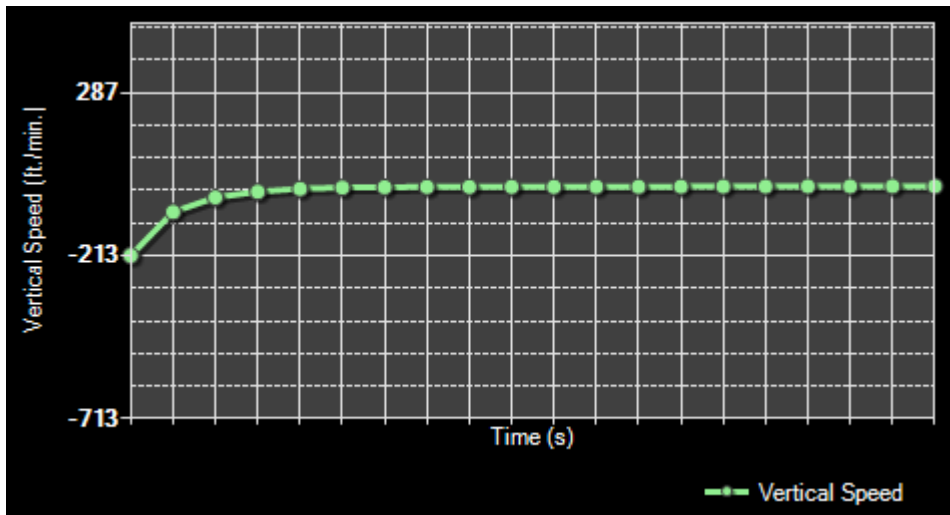 


This graph shows the current vertical speed per minute.

## Attitude



 And finally here the aircraft attitude is shown as bank and pitch angle.

### Change Displayed Data

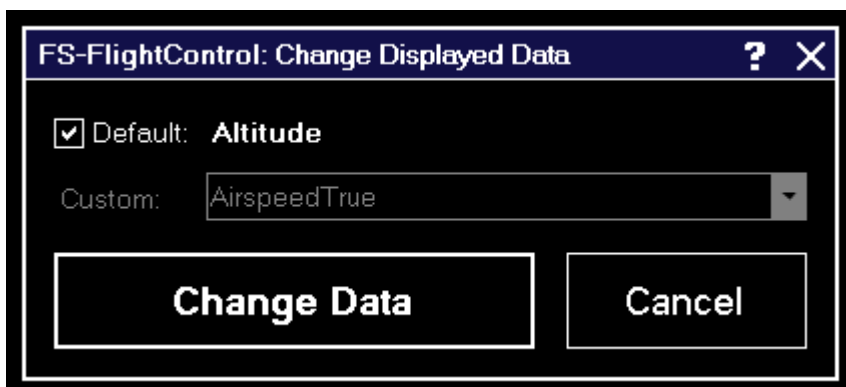

When you right-click on one of those graphs above you can change the data being displayed in this graphs.

The data points you can select here depend on the recording options defined in the **Settings** module.

### Recording and Playback



At the bottom left you will find the recording and playback controls.

You can start and stop the live recording of aircraft data at any time. While the recording is stopped you can use the playback controls to go through the recorded data easily. If you want to delete all recorded data and start all over again use the button **Clear All Flight Data**.

## Import and Export



Additionally you can import and export the flight data from respectively to a CSV file.

## Print Charts




You can also print the displayed charts by clicking on the Print Charts button.

## Export to Google Earth

 


Also an export to Google Earth is possible.

You can even choose if VORs, NDBs or waypoints should be exported as place marks additionally.

 Note: The range around the flight path where VORs, NDBs and waypoints are included can be adjusted in the **Settings** module.

After pressing the button Export to Google Earth you can directly start Google Earth with the exported data as long as Google Earth is installed on the current computer.

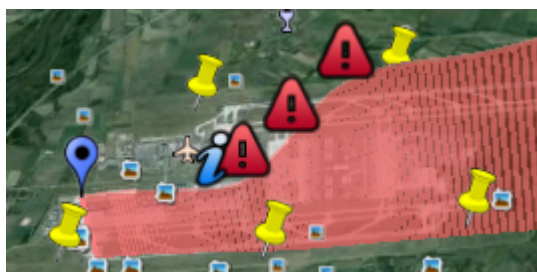

Here you can see how your flight data will look like then when it is shown in Google Earth.

## Approach Statistics

After you started an approach in the **Position** module in this section your approach will be tracked.

**The approach statistics starts automatically after the aircraft has been positioned on an approach with the Position module.**

But you can enable the approach statistics also by choosing the airport you are currently approaching manually:

**EDDM**


**ETSE**

**EDNX**

**EDML**

**EDMD**

Additionally you have the option to select a near airport directly by just clicking on the ICAO code of the airport that you want to approach.

 **Note:** Selecting an airport here does not change your aircraft position. This just provides you with the option to activate the approach statistics if you approach an airport manually without positioning your aircraft on an approach position first.

## Approach Details

Approach Details	
Airport: <b>Munich (EDDM)</b>	Runway: <b>08R</b>
Visibility: <b>54.0 NM</b>	Wind: <b>0 kt from 0°</b>
Temp.: <b>15°C</b>	Dew Point: <b>5°C</b>

 
This section shows some details about the current approach like the airport, runway and some visibility information.

## Landing Report

Landing Report	
Distance: <b>677.78 ft.</b>	G-Force: <b>1.0 G</b>
Deviation: <b>144.39 ft. left</b>	Pitch Angle: <b>2.24° up</b>
Vertical Speed: <b>-717 ft./min.</b>	Bank Angle: <b>9.63° left</b>

After the approach has been completed and the aircraft is landed, this landing report shows detailed information about how well the landing was.


## Localizer Deviation

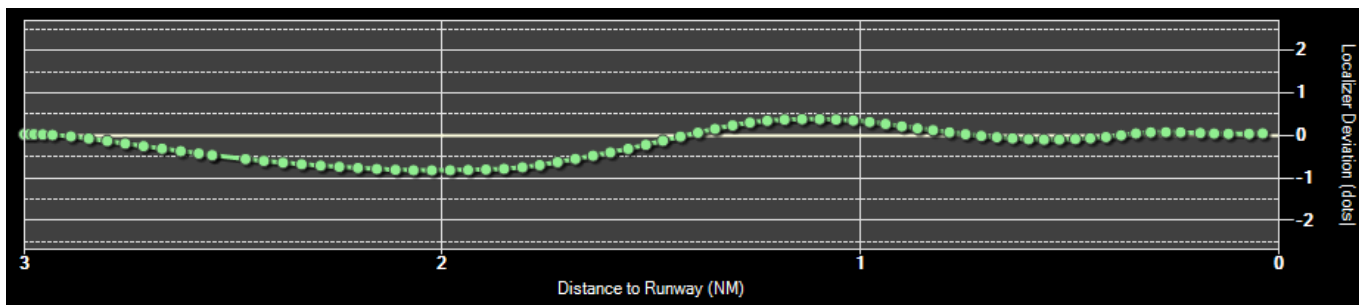

The localizer deviation graph shows the horizontal deviation from the runway localizer on your approach.

If the graph line goes to the top of the graph the aircraft is left from the localizer and if the line goes to the bottom the aircraft is right from the localizer.

## Glideslope Deviation

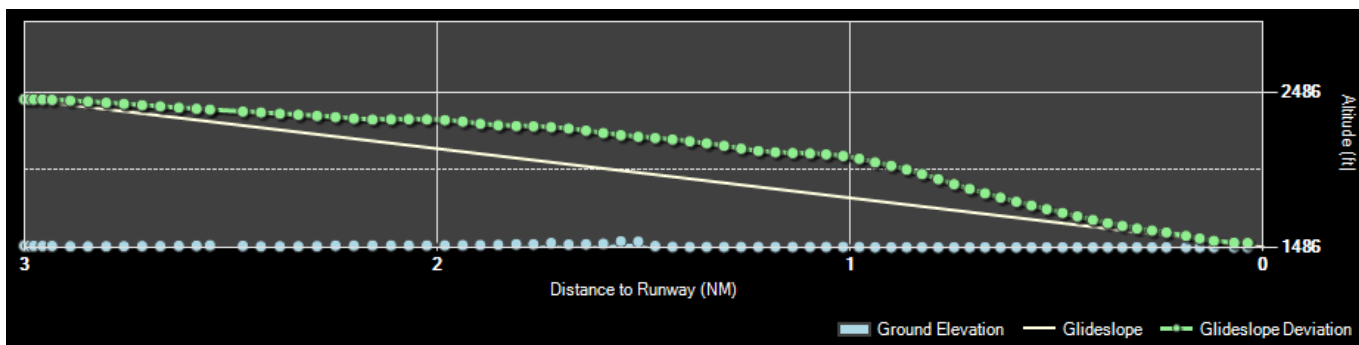 

On the lower approach graph the current aircraft altitude above mean sea level (MSL) as well as the ground altitude is shown.

The yellow straight line shows the ideal glideslope.

If the runway is ILS enabled the correct runway-specific glideslope degree will be used. Otherwise the default of 3° will be used.

## Print Approach Statistics



The whole approach statistics can be printed with the button `Print Approach Statistics`.

## Reset



Use the button Reset to reset the approach statistics again.

**FS-FlightControl Manual:**

<https://www.fs-flightcontrol.com/en/manual/>

**PDF Generated on:**

2026-05-14 02:03