

Table of Contents

Settings	1
Aircraft Related Settings	1
Aircraft Profile	1
Profile Settings	1
Position	2
Final Position	2
Vectors Position	3
Base Position	3
Downwind Position	3
Airworks	3
Options on Position Change	4
Map Colors	4
Colors and Text Settings	4
Map Other	9
Auto Zoom	9
Aircraft Display	9
Reposition	10
Compass Rose	10
Other	11
Pushback	11
Speed Options	11
Failures	11
Failures Source	11
Aircraft	12
Aircraft Warnings	12
Aircraft-Specific Options	13
Other	13
Statistics	13
Google Earth Export	13
Not Aircraft Related Settings	13
Position	14
General	14
Flight Situation Presets	14
Map	14
Data Update Rate	14
Grid and Minimum Sector Altitude (MSA) Display	15
Print Options	15
Display Options	16
Online Networks	16
Flight Plan	16
Flight Plan Folder	17
Conditions	17
Weather Engine	17
Real-Time Weather Source	17
ILS Visibility	17
Failures	18
Color Settings	18
Other	18

Statistics	19
Color Settings	19
Print Options	20
Network	20
FS-FlightControl Client	20
Program Close Options	21
Status Page for Web Display	21
SimConnect	23
SimConnect Library	23
SimConnect Network Access	24
Database Rebuild	24
Database Synchronization	24
Navigation Data Update	24
Mobile Devices	24
Android and iOS Client	24
Third Party	25
ProSim	25
AST	25
Project Magenta	26
Flight Sim Labs	26
Brunner Elektronik	26
Active Sky	26
PFPX	27
Aerosoft Airbus	27
Wilco Airbus	27
Mindstar	27
Flight1	28
General	28
Other Settings	28
Units	28
Color Settings	30
Input and Help	30
Program Startup Options	30

Settings

Customize this program to your needs with detailed, even aircraft-specific settings. Change map colors, SimConnect settings and many more options available.

But although a lot of very detailed customization options are available in this modules, FS-FlightControl is designed in a way that you do not have to touch anything here to just use the program.

It is perfectly usable with the default settings and only if you need something special then this is the right place to look at.

Aircraft Related Settings

All settings in this area will be saved together with the corresponding aircraft profile if aircraft related settings are enabled.

Aircraft Profile



By default aircraft related settings are disabled as this is not needed for many users, especially also if you only use FS-FlightControl with one specific aircraft type.

But if you want to use FS-FlightControl together with very different aircraft types it makes sense to enable aircraft related settings here.

Profile Settings

Profile Settings

Profile Name:

Delete Profile

Assign Aircraft to this Profile:

AgustaWestland EH101

AgustaWestland EH101 1

AgustaWestland EH101 10

AgustaWestland EH101 11

AgustaWestland EH101 12

AgustaWestland EH101 2

AgustaWestland EH101 3

AgustaWestland EH101 4

AgustaWestland EH101 5

AgustaWestland EH101 6

AgustaWestland EH101 7

AgustaWestland EH101 8

AgustaWestland EH101 9

Airbus A321

Airbus A321 Paint2

Airbus A321 Paint4

Airbus A321 Paint5

Aircreation582SL

Aircreation582SL Blue

Aircreation582SL red

Aircreation582SL yellow, white and red

Bell 206B JetRanger

→

←

Copy All Settings from Profile:

Copy

Reset Profile to Default Settings

Currently Assigned Aircraft:

Beech Baron 58

Beech Baron 58 Paint1

Beech Baron 58 Paint2

Beech Baron 58 Paint3

Beech Baron 58 w G1000

Beech King Air 350

Beech King Air 350 Paint1

Beech King Air 350 Paint2

Beech King Air 350 Paint3

Cessna Grand Caravan

Cessna Grand Caravan Paint1

Cessna Grand Caravan Paint2

Cessna Grand Caravan Paint3

Cessna Skyhawk 172SP

Cessna Skyhawk 172SP G1000

Cessna Skyhawk 172SP Paint1

Cessna Skyhawk 172SP Paint2

Cessna Skyhawk 172SP Paint3

Cessna Skyhawk 172SP Paint4

Extra 300S

Extra 300S Paint1

Extra 300S Paint2

If aircraft related settings are enabled the profile settings section gets enabled as well.

You can edit or create new aircraft profiles here and change the flight simulator aircrafts that are assigned to the current aircraft profile.

Additionally you can copy all settings from another profile or revert all settings to default.

Position

These settings are related to the [position](#) module.

Final Position

Final Position

Short Final: NM

Long Final: NM

Vertical Offset to Glideslope (+higher, -lower): ft

Horizontal Offset to Glideslope (-left, +right): ft

Here you can define the distance of the short and long final approach as well as a vertical and horizontal offset to the glideslope if you want.

FS-FlightControl Steam Products Manual - <https://www.fs-flightcontrol.com/en/steam/manual/>

Vectors Position

Vectors Position		
Vector Leg Distance:	<input type="text" value="2"/>	NM
Final Leg Distance:	<input type="text" value="6"/>	NM
Final Intercept Angle:	<input type="text" value="30"/>	°

The distances for the vector positions can be changed here as well as the final intercept angle.

Base Position

Base Position		
Base Leg Distance:	<input type="text" value="4"/>	NM
Final Leg Distance:	<input type="text" value="6"/>	NM

Define here the distances for the base positions.


Downwind Position

Downwind Position		
Distance Back:	<input type="text" value="1"/>	NM
Lateral Distance to Runway:	<input type="text" value="4"/>	NM
Altitude Above Ground:	<input type="text" value="2,000"/>	ft

Here you can define the lateral distance to the runway for the downwind positions.

In contrast to the other positions where the altitude is calculated based on the runway glideslope automatically, the altitude for the downwind positions can be customized here.


Airworks

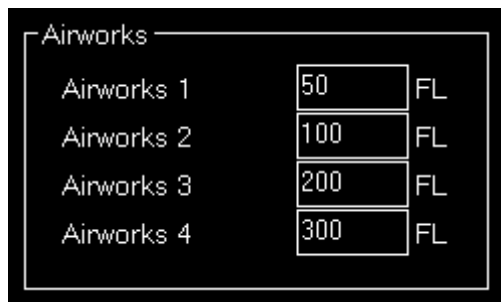

Airworks		
Airworks 1	50	FL
Airworks 2	100	FL
Airworks 3	200	FL
Airworks 4	300	FL

You can define the flight levels of the four airworks buttons here.

Options on Position Change

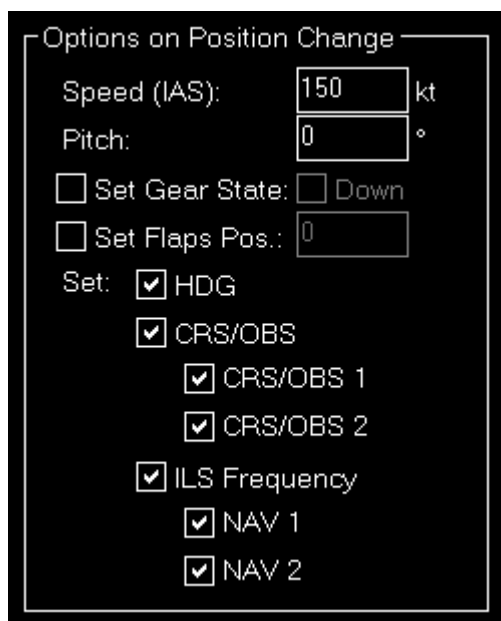

Options on Position Change	
Speed (IAS):	150 kt
Pitch:	0 °
<input type="checkbox"/> Set Gear State:	<input type="checkbox"/> Down
<input type="checkbox"/> Set Flaps Pos.:	0
Set:	<input checked="" type="checkbox"/> HDG
	<input checked="" type="checkbox"/> CRS/OBS
	<input checked="" type="checkbox"/> CRS/OBS 1
	<input checked="" type="checkbox"/> CRS/OBS 2
	<input checked="" type="checkbox"/> ILS Frequency
	<input checked="" type="checkbox"/> NAV 1
	<input checked="" type="checkbox"/> NAV 2

Depending on the aircraft capabilities you can change the parameters that are used when the aircraft is positioned.

This includes whether the heading, course (CRS) respectively omni bearing selector (OBS) or ILS frequency (if the runway is ILS enabled) should be set automatically with the aircraft position change to a certain approach.

Map Colors

These settings are related to the [map](#) module.

Colors and Text Settings

In this area you can highly customize the appearance of the map.

We decided to put this into the aircraft related settings. Although this seems not to be aircraft related at first sight, but this enables you to emphasis certain map parts based on the currently loaded aircraft: For example when using a small aircraft you might want to highlight more the small gates

and do not care a lot about ILS, but when using a big jet the large gates are much more interesting. Same goes for other parts on the map which might be more interesting for certain aircraft types than others.

Select map type: ☒ Normal ☐ Normal for Print ☐ Street Map ☐ Satellite Map ☐ Height Map

All colors and text sizes can be defined per map type.

Therefore please first select the map type.

Colors and Text Sizes for Map Type

Structure Color	Min. Zoom	Text Color	Min. Zoom	Font Size
User Aircraft	<div><div></div></div>	User Aircraft Info	<div><div></div></div>	<div>7</div>
AI Aircraft	<div><div></div></div>	AI Aircraft Info	<div><div></div></div>	<div>7</div>
VATSIM Aircraft	<div><div></div></div>	VATSIM Airc. Info	<div><div></div></div>	<div>7</div>
VATSIM Airport	<div><div></div></div>	(Used to draw APP, TWR and GND cycles.)		
VATSIM FIR/UIR	<div><div></div></div>	VAT. FIR/UIR Info	<div><div></div></div>	<div>10</div>
IVAO Aircraft	<div><div></div></div>	IVAO Aircraft Info	<div><div></div></div>	<div>7</div>
IVAO Airport	<div><div></div></div>	(Used to draw APP, TWR and GND cycles.)		
IVAO FIR/UIR	<div><div></div></div>	IVA. FIR/UIR Info	<div><div></div></div>	<div>10</div>
PilotEdge Aircraft	<div><div></div></div>	PilotEdge Aircraft	<div><div></div></div>	<div>7</div>
PilotEdge Airport	<div><div></div></div>	(Used to draw APP, TWR and GND cycles.)		
PilotEdge FIR	<div><div></div></div>	PilotE. FIR Info	<div><div></div></div>	<div>10</div>
Airport	<div><div></div></div>	Airport Name	<div><div></div></div>	<div>10</div>
Runway	<div><div></div></div>	Runway Ident	<div><div></div></div>	<div>8</div>
ILS	<div><div></div></div>	ILS Ident	<div><div></div></div>	<div>8</div>
Axis	<div><div></div></div>			
Marker	<div><div></div></div>	Marker Type	<div><div></div></div>	<div>8</div>
Taxi Path	<div><div></div></div>	Taxi Point Name	<div><div></div></div>	<div>8</div>
Taxi Center Line	<div><div></div></div>			
Taxi Holding Point	<div><div></div></div>			
Tower	<div><div></div></div>			
VOR	<div><div></div></div>	VOR Name	<div><div></div></div>	<div>8</div>
NDB	<div><div></div></div>	NDB Name	<div><div></div></div>	<div>8</div>
Airspace	<div><div></div></div>	Airspace Name	<div><div></div></div>	<div>8</div>
Airway	<div><div></div></div>	Airway Name	<div><div></div></div>	<div>8</div>
Waypoint	<div><div></div></div>	Waypoint Ident	<div><div></div></div>	<div>8</div>
Wayp. SID/STAR	<div><div></div></div>	Waypoint Ident	<div><div></div></div>	<div>10</div>
Weather Station	<div><div></div></div>	Weath. St. Name	<div><div></div></div>	<div>8</div>
User POI	<div><div></div></div>	User POI Name	<div><div></div></div>	<div>10</div>
Compass Rose	<div><div></div></div>			
Weather Info	<div><div></div></div>	Weather Info	<div><div></div></div>	<div>8</div>
Map Info	<div><div></div></div>	Map Info Text	<div><div></div></div>	<div>8</div>
Holding	<div><div></div></div>	Holding Info	<div><div></div></div>	<div>8</div>
Measure	<div><div></div></div>	Measure Info	<div><div></div></div>	<div>8</div>
Trace Aircraft	<div><div></div></div>			
Flight Plan Path	<div><div></div></div>			
SID/STAR Path	<div><div></div></div>			
Country	<div><div></div></div>	Country	<div><div></div></div>	<div>12</div>
Country Border	<div><div></div></div>			
Ocean	<div><div></div></div>			
Lake	<div><div></div></div>	Lake	<div><div></div></div>	<div>8</div>
River	<div><div></div></div>	River	<div><div></div></div>	<div>8</div>
Grid	<div><div></div></div>	MSA	<div><div></div></div>	<div>14</div>

Here all currently defined colors and text sizes are displayed for the selected map type.

The **Structure Color** is always the color of the item itself, like the runway surface of the runway, whereas **Text Color** the color of the corresponding text is, like the runway idents of the runway.

The **Min. Zoom** next to the **Structure Color** defines the minimum map zoom level needed that this structure (like the runway surface) is shown. Accordingly the second **Min. Zoom** next to the **Text Color** defines the minimum map zoom level needed that the corresponding text (like the runway idents) is shown.

Font Size, the last column, enables you to define the size of the displayed text.

Parking

Parking

Color Default

Color Gate

Color Ramp

Name Prefix for Type:	Font Size Gate/Ramp:
Fuel: <input type="text" value="F"/>	Default: <input type="text" value="8"/>
Cargo: <input type="text" value="C"/>	Small: <input type="text" value="7"/>
Military: <input type="text" value="M"/>	Medium: <input type="text" value="8"/>
	Large: <input type="text" value="10"/>

Min. Zoom:

This area lets you define colors and text sizes for the different parking types like gates and ramps depending on their sizes.

Additionally you can define text prefixes to be used for a certain type like fuel, cargo or military.

Tooltip

Tooltip

Color Text

Color Background

Max. Zoom:

Font Size:


When hovering over certain map elements like an airport a tooltip is displayed shown the full name of the airport.

In this section you can define the appearance of this tooltip as well as the maximum map zoom level until that the tooltip should be displayed.

Map Other

These settings are related to the [map](#) module.

Auto Zoom

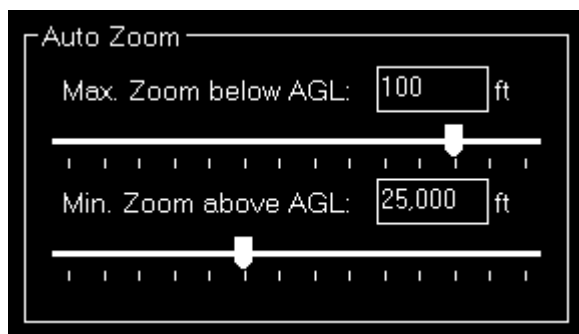


The [map](#) module also features an auto zoom function which will zoom the map in and out according to the current aircraft altitude.

You can configure this feature here by first entering the maximum zoom level (fully zoomed in) that should be reached if the aircraft is below the entered altitude above ground.

Then, for the upper end, you define the minimum zoom level (fully zoomed out) that should be reached above the entered altitude.

Between these two altitudes the zoom will be equally divided automatically.

Aircraft Display

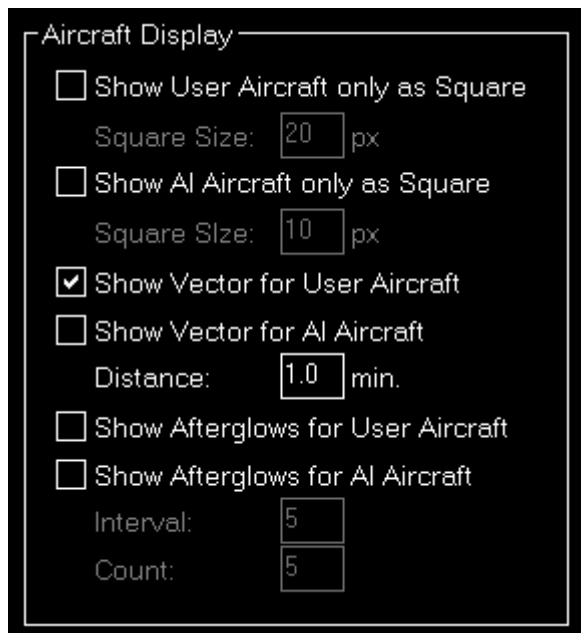


Here you can choose from certain options related to the display of the aircraft on the map.

First you can define if the user and/or AI aircraft are only shown as squares instead of an aircraft image. In this case you can also enter a size for the squares.

Furthermore you can enable or disable a distance vector being displayed in front of each user and/or AI aircraft. In this case you can enter the length of the vector in minutes.


Additionally so called afterglows - dots behind the aircraft - can be enabled or disabled for user and/or AI aircraft. In this case you can enter an interval as well as the number of dots that should be displayed.

Reposition

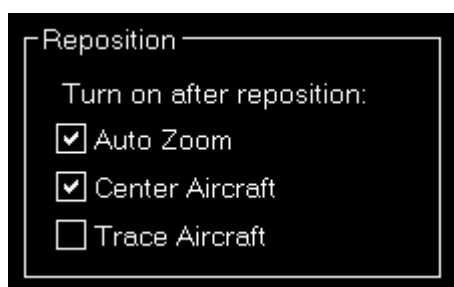


In this section you can define if certain map features are automatically turned on after the map reposition function was used.

Compass Rose

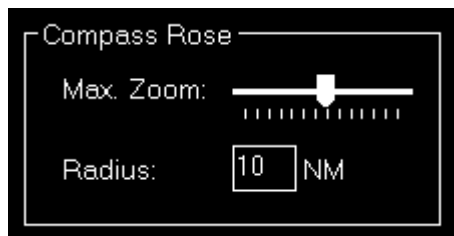


Use these settings to define the maximum zoom level up to the compass rose (when this function is enabled) should be displayed and how wide its radius should be.

Other

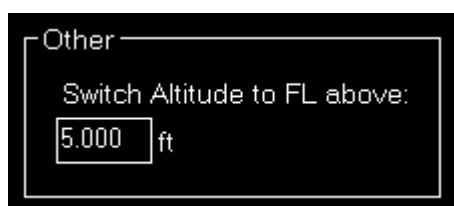


Here you can define at which altitude the display should switch from precise altitude display to flight level.

 Note: Above this altitude it will also switch from show MSL altitude to indicated altitude.

Pushback

These settings are related to the [pushback](#) module.

Speed Options

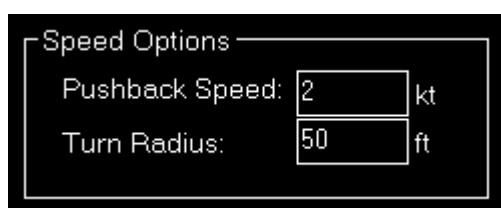

Here you can define the pushback speed as well as the turn radius.


Failures

These settings are related to the [failures](#) module.

Failures Source




Here you can choose the source of the failures that are displayed in the [failures](#) module.

 Note: For some options additional parameters need to be entered in the [Third Party](#) settings first.

Aircraft

These settings are related to the [aircraft](#) module.

Aircraft Warnings

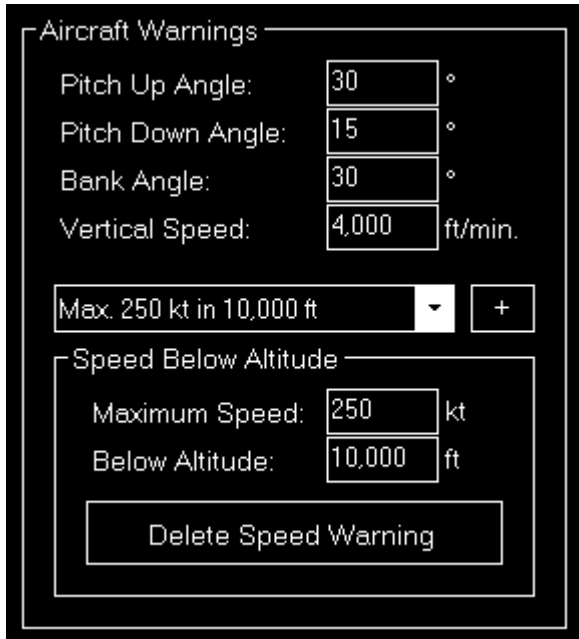

Aircraft Warnings

Pitch Up Angle: °

Pitch Down Angle: °

Bank Angle: °

Vertical Speed: ft/min.

Max. 250 kt in 10,000 ft


Speed Below Altitude

Maximum Speed: kt

Below Altitude: ft

Here you can set limits for some parameters like pitch or bank angle for the aircraft.

Speed Below Altitude

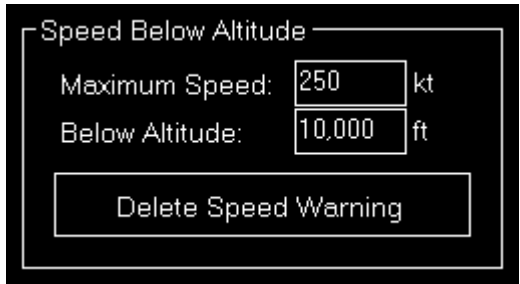

Speed Below Altitude

Maximum Speed: kt

Below Altitude: ft


Additionally you can define maximum speeds below certain altitudes above mean sea level (MSL).

These settings are used to change the color of the corresponding value to red on the [aircraft](#) module and also to shown warning indicators when exporting graph data to Google Earth on the [statistics](#) module.


Aircraft-Specific Options



For some third-party add-ons there are some additional options available. You can enable this support here.

 Note: Some third-party add-ons require additional parameters to be entered in the [Third Party](#) settings first.

Other

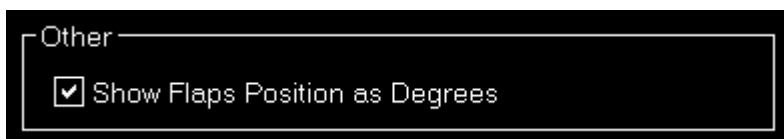

Other


☒ Show Flaps Position as Degrees

Here you can define if flap positions should be shown as degree number.

Statistics

These settings are related to the [statistics](#) module.

Google Earth Export



Google Earth Export

Interval Between Flight Track Points: sec.

Range to Include VORs, NDBs and Waypoints: NM

Define all Google Earth export related settings in this area.

Every certain time interval a flight track point is shown in Google Earth with detailed flight information. You can set this time interval here.

Additionally you can define the range for including VORs, NDBs and waypoints if their export is enabled.


Not Aircraft Related Settings

All settings in this area are not aircraft related and will be saved globally.

Position

These settings are related to the [position](#) module.

General

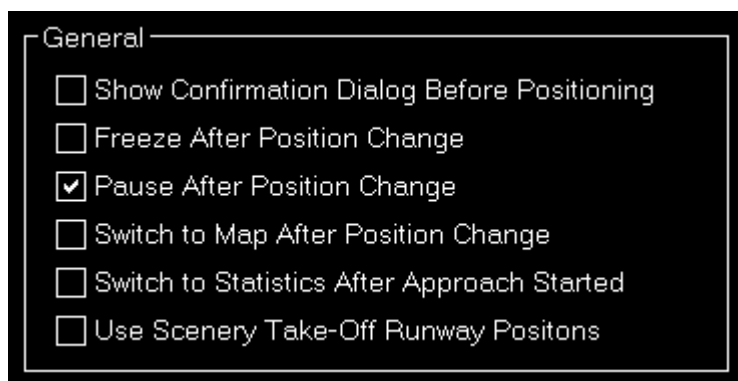


You can enable or disable some automatizations after an aircraft position is changed.


First choose if position freeze or pause should be enabled after aircraft move.

Additionally you can define if the program should automatically switch to the [map](#) module after a position change respectively to the [statistics](#) module when an approach is started.

Finally you can choose if the scenery should be reloaded after a position is changed.

 **Note:** The forced scenery reload is enabled by default as disabling it may lead to unexpected results (like aircraft crash) especially if the new location is far away from the old one.

Flight Situation Presets

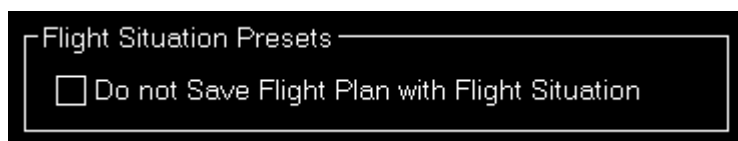

You can choose here to not automatically save the flight plan together with a flight situation preset.

Map

These settings are related to the [map](#) module.

Data Update Rate



You can define here how often the map view gets updated.


By default that is set to once per second.

Custom Update Rate




If you uncheck the Default Update Rate checkbox you can define the update rate yourself.

The slider then ranges from very low (every 60 visual frames on flight simulator) to very high (every single visual frame).

 Note: Please keep in mind that setting the data update rate to very high may lead to performance issues.

Grid and Minimum Sector Altitude (MSA) Display

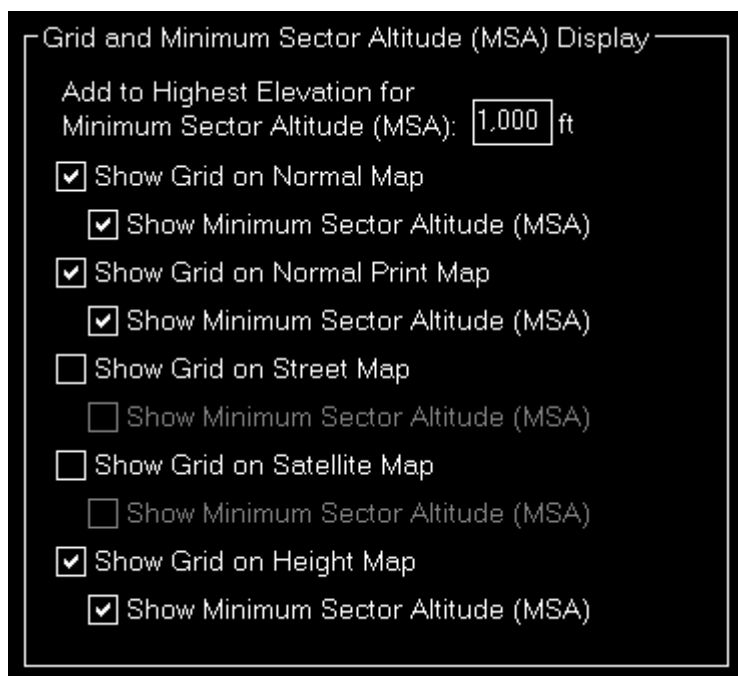

First you can define here the altitude that is added to the highest elevation in each sector when calculating the Minimum Sector Altitude (MSA).

Additionally you can choose when the map grid including the Minimum Sector Altitude (MSA) is displayed in the first place.

Print Options




For map printing you can define here which printer should be used.

Additionally, if you own a commercial license, you can also change the footer text or remove it completely.

Within the footer text you may use the placeholders {date} and {time} to insert the current date and time.

Display Options

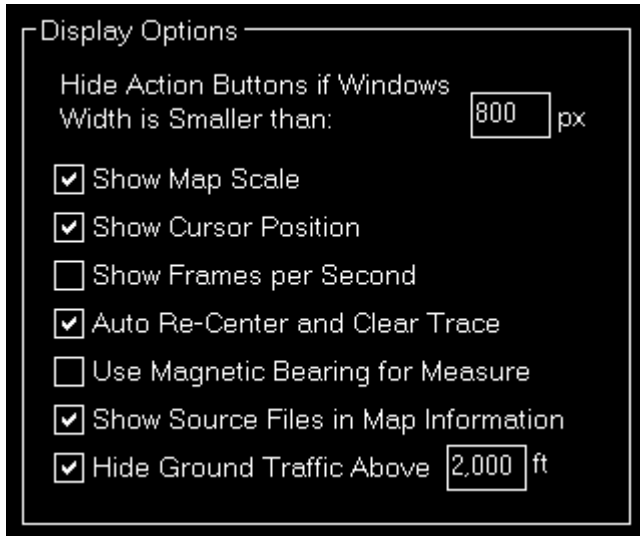


The screenshot shows a settings panel titled "Display Options". It contains the following settings:

- Hide Action Buttons if Windows Width is Smaller than: px
- ☒ Show Map Scale
- ☒ Show Cursor Position
- ☐ Show Frames per Second
- ☒ Auto Re-Center and Clear Trace
- ☐ Use Magnetic Bearing for Measure
- ☒ Show Source Files in Map Information
- ☒ Hide Ground Traffic Above ft

You can define several display options here.

First you can set a window width below that the left and right action buttons are hidden.

 **Note:** This is only used for detached map windows.

Below that you can choose if you want the map scale, cursor position and frames per second displayed on the bottom of the map view or not.

Online Networks



The screenshot shows a settings panel titled "Online Networks". It contains the following settings:

- Enter User ID to Hide User Aircraft:
- VATSIM:
- IVAO:
- PilotEdge:

If you enter here your user ID of the available online networks your own user aircraft will not appear additionally as AI aircraft.

Flight Plan

These settings are related to the [Flight Plan](#) module.

Flight Plan Folder



Here you can change the path to the saved flight plans of flight simulator.

Conditions

These settings are related to the [conditions](#) module.


Weather Engine



Let FS-FlightControl know here which software is used as weather engine to ensure all features of the [conditions](#) module work properly.

 Note: For Active Sky additional parameters need to be entered in the [Third Party](#) settings first.

Real-Time Weather Source

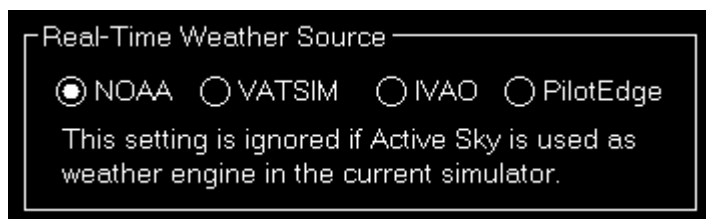

Define here the real-time weather source that should be used for receiving weather METAR data if this is not provided by flight simulator directly.

In this connection you can choose from NOAA (National Oceanic and Atmospheric Administration), VATSIM (Virtual Air Traffic Simulation) and IVAO (International Virtual Aviation Organization).

ILS Visibility

ILS Visibility

	Decision Height	Runway Visibility
CAT I	<input type="text" value="200"/> ft	<input type="text" value="550"/> m
CAT I LTS	<input type="text" value="200"/> ft	<input type="text" value="400"/> m
CAT II	<input type="text" value="100"/> ft	<input type="text" value="300"/> m
CAT IIIa	<input type="text" value="50"/> ft	<input type="text" value="180"/> m
CAT IIIb	<input type="text" value="30"/> ft	<input type="text" value="46"/> m
CAT IIIc	<input type="text" value="0"/> ft	<input type="text" value="10"/> m

In this section the ILS Visibility presets can be customized.

You can define the decision height as well as the runway visibility for each ILS category.

Failures

These settings are related to the [failures](#) module.

Color Settings

Color Settings

No Failure

Failure Armed

Failed

Reset to Defaults

Use this area to change the colors.

You can also use the button **Reset to Defaults** to revert all your color changes.

Other

Other

☐ Automatically Re-Enable Random Failures After Program Restart (if enabled before)

Choose here if random failures should be automatically re-enabled on program start if they were enabled before.

Statistics

These settings are related to the [statistics](#) module.

Color Settings

In this area you can customize all colors used to draw the statistics graphs.

Display Type: ☒ Normal ☐ Print

All colors can be defined per display type.

Therefore please first select if you want to change the colors for the normal in program display or for printout.

Revert to Defaults

Revert to Defaults

You can easily revert all colors to their defaults by using the Revert to Defaults button.

Colors for Display Type

Colors for Display Type: **Normal**

General:

Background	Grid	Line Border
------------	------	-------------

General Charts:

First Data Line
Second Data Line

Localizer Chart:

Line Localizer
Line Localizer Deviation

Glideslope Chart:

Line Glideslope
Line Glideslope Deviation
Area Glideslope Ground

Here all currently defined colors are displayed for the selected display type.

Click on any of the button to select a different color.

Print Options



For statistics printing you can define here which printer should be used.

Additionally, if you own a commercial license, you can also change the footer text or remove it completely.

Within the footer text you may use the placeholders {date} and {time} to insert the current date and time.


Network

These settings are related to the [network](#) module.


FS-FlightControl Client

The screenshot shows the 'FS-FlightControl Client' settings window. It has a dark background with white text and controls. At the top, the title 'FS-FlightControl Client' is followed by a horizontal line. Below this, the 'Network Client Port' is set to '2047' in a text box. There are two radio buttons: 'Use Default Start Waiting Screen' (selected) and 'Customize Start Waiting Screen'. The 'Customize Start Waiting Screen' option is expanded, showing a 'Background Image' section with a 'Choose Image' button. Below this, there are 'Progress Colors' and 'Other' sections. 'Progress Colors' has three text boxes labeled 'Background', 'Current', and 'Text'. 'Other' has a text box labeled 'Text'. Below these are three text boxes for 'Connecting Text:', 'Loading Text:', and 'Waiting Text:'. At the bottom of the window is a large button labeled 'Build Client Executable'.

First you can change the network client port here that defaults to 2047, but can be changed to any other port number if needed.

 **Note:** If you change the port you need to re-build the network client executable.

Customize Start Waiting Screen

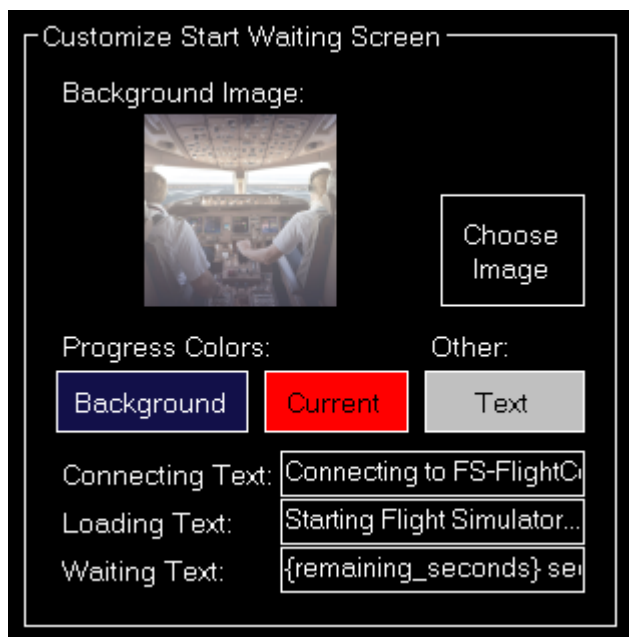


If you own a commercial license you can completely customize the start waiting screen that is shown on the network client computers.

You can select a background image as well as customize the colors and the shown texts.

In the Remaining Text input field you can use the placeholder `{remaining_seconds}` to insert the remaining seconds.

Program Close Options

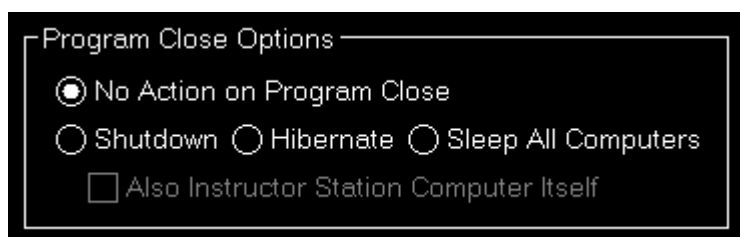

You can define here if a shutdown, hibernate or sleep action should be sent to all connected network computers when the FS-FlightControl software is closed.

Additionally you can decide if the same action should be executed on the computer running the instructor station itself.

Status Page for Web Display

Status Page for Web Display

Status Page Method:

☒ Output Directly as Web Server

Port: 80

☐ Save as HTML File

Update Interval: 10 sec.

File Path: Browse

☐ Upload to FTP Server

Update Interval: 30 sec.

Server Host:

Port: 21 ☐ Passive

User Name:

Password:

Remote File:

In this area you can define the method that should be used for the status page output.

Output Directly as Web Server

Output Directly as Web Server

Port: 80

If this method is selected FS-FlightControl will listen on the defined port for HTTP web requests and will reply with the status page accordingly.

Save as HTML File


Save as HTML File

Update Interval: 10 sec.

File Path: C:\xampp\htdocs\index.html Browse

This method will save the status page as HTML file to a certain directory location in the defined time interval.

Upload to FTP Server

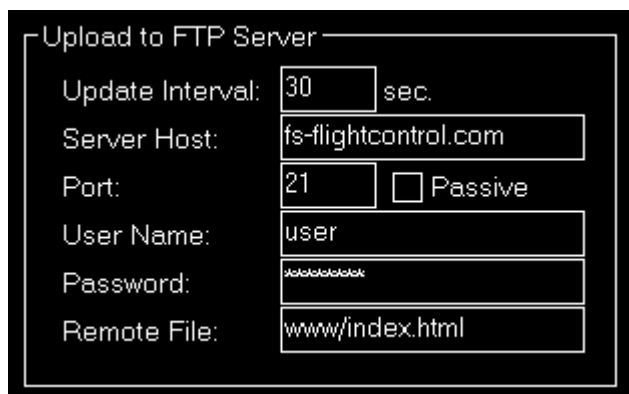

Update Interval:	30	sec.
Server Host:	fs-flightcontrol.com	
Port:	21	<input type="checkbox"/> Passive
User Name:	user	
Password:	xoxoxoxoxox	
Remote File:	www/index.html	

You can also enable this method to automatically upload the status page to a FTP server.

Then you need to define again the update interval as well as all parameters that are needed for FTP server access.

SimConnect

SimConnect is the flight simulator integrated connection method for external application.

Also FS-FlightControl uses this technology to connect to flight simulator.

In this section you can define corresponding parameters.

SimConnect Library



This section enables you to control which SimConnect library is used to connect to flight simulator.

Choose SimConnect Version Automatically




By default the SimConnect version is detected automatically and just for information the used DLL library is shown here.

Force Using this SimConnect DLL



If for whatever reasons that should be necessary you can define a path to a certain SimConnect DLL library here.

This disables the automatic detection completely.

 **Note:** This really should only be done if the automatic detection fails. Normally it should not be necessary to change anything manually here!

SimConnect Network Access



If you want FS-FlightControl to access a flight simulator installation that is not located on the same computer as FS-FlightControl itself, these SimConnect Network Access parameters need to be defined.

They are directly written to the global `SimConnect.cfg` file. To reset everything to its defaults you can just delete this file again completely.

 **Note:** To make this configuration as easy as possible you can use the [SimConnect Network Wizard](#).

Database Rebuild

This section is related to the main program database.

Database Synchronization



The database synchronization is explained in the [Database Build](#) installation section.

Navigation Data Update




This area is explained in the [Navigation Data Update](#) dialog section.

Mobile Devices

This section is related to the mobile devices support.

Android and iOS Client

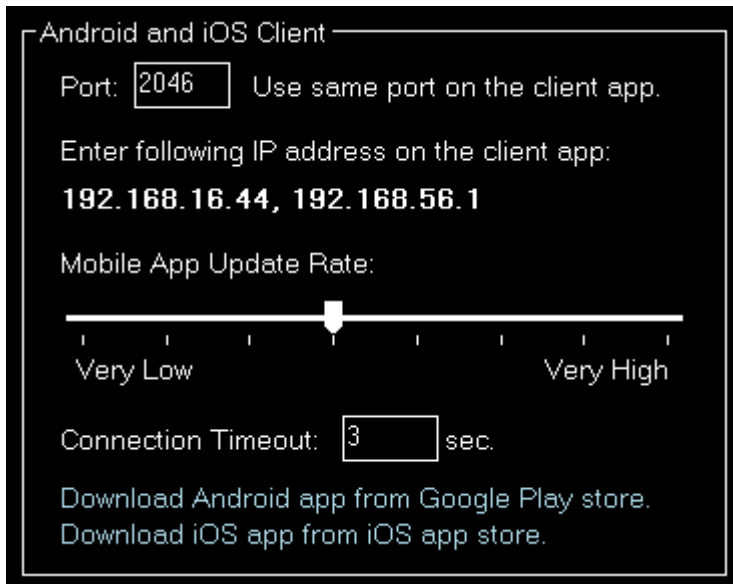

Android and iOS Client

Port: Use same port on the client app.

Enter following IP address on the client app:
192.168.16.44, 192.168.56.1

Mobile App Update Rate:

Very Low Very High


Connection Timeout: sec.

[Download Android app from Google Play store.](#)
[Download iOS app from iOS app store.](#)

There is an Android client app that makes it possible to use FS-FlightControl also with your Android Tablet device.

You can define the port here that should be used for the connection. It defaults to 2046.

In the following you can see the IP address that you need to enter in the Android app once for connection.

 **Note:** It rases cases it is possible that there is more than one IP address displayed here. In this case you just need to try which one works.

If you should see a Windows Firewall message popping up - normally on program start - asking you to give FS-FlightControl access please confirm that. Only with this approval you will be able to connect with your mobile device.

You can directly download the Android app from the [Google Play store](#) as well as the iOS-App from the [iOS App Store](#).

Third Party

Here you can define necessary parameters to connect to third party products supported by FS-FlightControl.

ProSim



The host or IP as well as the port that should be used to connect to ProSim can be entered here. The ProSim connection then can be used in the [flight-plan](#) and [failures](#) modules.

AST



AST

Host or IP: localhost

Port: 16105

The host or IP as well as the port that should be used to connect to AST (Aircraft Simulation Technology) can be entered here. The AST connection then can be used in the [failures](#) module.

Project Magenta



Project Magenta

Path to "NetDir" Folder: D:\NetDir\ Browse

The path to the NetDir of Project Magenta can be entered here. The Project Magenta connection then can be used in the [flight-plan](#) module; the [failures](#) module uses FSUIPC to connect to Project Magenta.

Flight Sim Labs



Flight Sim Labs

Path to "FSLabs" Folder: C:\ProgramFiles(x86)\LockheedMartin\ Browse

The path to the FSLabs directory of Flight Sim Labs below the flight simulator directory can be entered here. The direct Flight Sim Labs connection then can be used in the [flight-plan](#) module.

Brunner Elektronik



The host or IP as well as the port that should be used to connect to the CLS2Sim software by Brunner Elektronik can be entered here. The Brunner Elektronik connection then can be used in the [motion](#) module.

Active Sky

The screenshot shows a window titled "Active Sky". Inside, there are two input fields. The first is labeled "Host or IP:" and contains the text "localhost". The second is labeled "Port:" and contains the text "19285".

The host or IP as well as the port that should be used to connect to Active Sky 16 (SP1 required) can be entered here. The Active Sky connection then can be used in the [conditions](#) module.

PFPX




You can enter the path to the PFPX documents directory here. The PFPX connection then can be used in the [flight-plan](#) module.

Aerosoft Airbus

The screenshot shows a window titled "Aerosoft Airbus". Inside, there is a text input field labeled "Folder of 'MCDUFPL[N]Data*.txt':" containing the path "C:\Users\A-bre\Documents\Aerosoft\Air". To the right of the input field is a button labeled "Browse".


Now you can enter the path to the Aerosoft Airbus documents directory (also the older Extended Version is supported) here. The Aerosoft Airbus connection then can be used in the [flight-plan](#) module.

Wilco Airbus

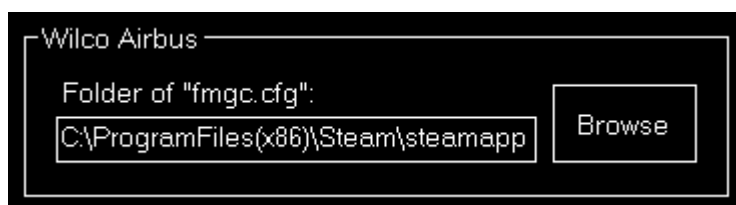The screenshot shows a window titled "Wilco Airbus". Inside, there is a text input field labeled "Folder of 'fmgc.cfg':" containing the path "C:\ProgramFiles(x86)\Steam\steamapp". To the right of the input field is a button labeled "Browse".

You can enter the path to the Wilco/FeelThere Airbus directory here. The Wilco Airbus connection then can be used in the [flight-plan](#) module.

Mindstar

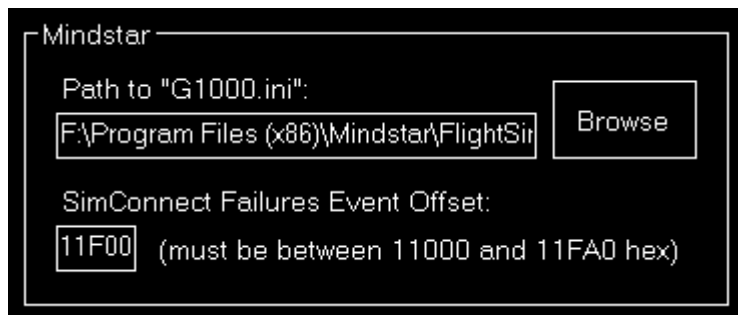


You can enter the path to the Mindstar G1000 .ini file here. The Mindstar connection then can be used in the [failures](#) module.

Additionally the offset for the SimConnect event IDs need to be specified as hex value. Starting from this ID the SimConnect events will be assigned to the Mindstar G1000 failures.

Flight1



The host or IP as well as the port that should be used to connect to Flight1 VISPRO flight simulator plug-in can be entered here. The Flight1 connection then can be used in the [failures](#) module.

 **Note:** To be able to trigger the Flight1 G1000 failures from FS-FlightControl not only the Flight1 G1000 plug-in needs to be installed in flight simulator, but also the Flight1 VISPRO plug-in.

General



Additional you can define the time interval for third party synchronization here.

Other Settings

In this section all other settings are located that do not fit anywhere else.

Units



Here all units for input as well as output used across the whole program can be defined.

Altitude Unit

Choose if feet (ft) or meters (m) should be used for altitude values.

Temperature Unit

Choose if Fahrenheit (°F) or Celcius (°C) should be used for temperature values.

Atmospheric Pressure

Choose if Hektopascals (hPa) or Inches of Mercury (inHg) should be used for atmospheric pressure values.

Short Distance Unit

Choose if feet (ft) or meters (m) should be used for short distance values.

Far Distance Unit

Choose if nautical miles (NM) or kilometers (km) should be used for far distance values.

Weight Unit

Choose if kilograms (kg) or pounds (lbs) should be used for weight values.

Speed Unit

Choose if knots (kt), miles per hour (mph) or kilometers per hour (km/h) should be used for speed values.

Liquid/Fuel Unit



Choose if kilograms (kg), pounds (lbs) or US gallons (gal.) should be used for liquid and fuel values.

Visibility Unit



Choose if feet (ft), meters (m), kilometers (km) or statute miles (M) should be used for visibility values.


Color Settings




Use this area to change colors used all over the software.

You can also use the button **Reset to Defaults** to revert all your color changes.

Input and Help

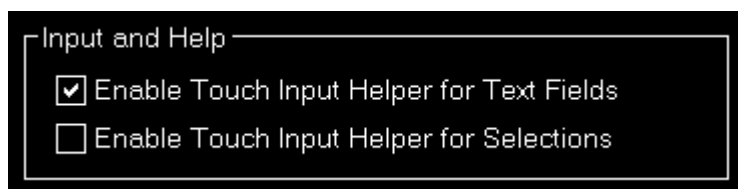


Here you can define if a touch input helper should be used for text and selection input fields.

 **Note:** While the Android or iOS app is connected both touch input helpers are activated automatically.

Additionally you can choose if the small help icons should be displayed in the top right corner of all sections.

Furthermore you can make the FS-FlightControl window to stay always on top of all other applications.

Program Startup Options

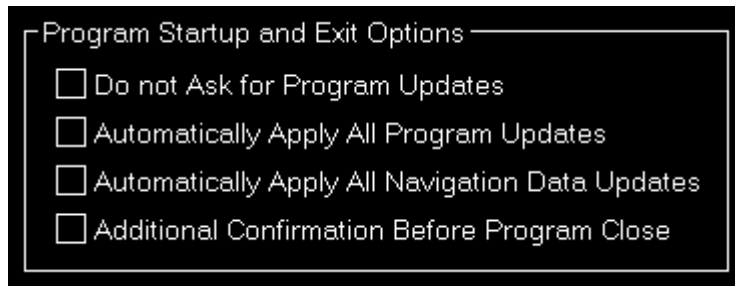

To allow a program start without user interaction you can define here that program updates as well as navigation data updates should always be applied without confirmation by the user.

Alternatively you can also disable the question regarding an update completely.

FS-FlightControl Steam Products Manual:

<https://www.fs-flightcontrol.com/en/steam/manual/>

**PDF Generated on:**

2025/08/20 12:16