



FS  
**FLIGHT**  
CONTROL  
[www.fs-flightcontrol.com](http://www.fs-flightcontrol.com)

# FS-FlightControl Manual

**Instructor Operator Station**  
for Microsoft Flight Simulator, Prepar3D and X-Plane




**FS-FlightControl · AB-Tools GmbH**  
E-mail: [info@fs-flightcontrol.com](mailto:info@fs-flightcontrol.com) · Internet: [www.fs-flightcontrol.com](http://www.fs-flightcontrol.com)  
Marsstraße 78, 80335 München, Germany · Phone: +49 89 38898588 · Fax: +49 89 38898589  
Bank Account: Grenke Bank AG · IBAN: DE 49 20130400 0060270139 · BIC: GREBDEH1XXX  
Register: Amtsgericht München, HRB 202859 · Finance Office: München für Körperschaften · VAT ID DE273587389

# Table of Contents

- AIRCRAFT** ..... 1
- Aircraft Gauges** ..... 1
  - Six Pack Gauges ..... 1
  - Primary Flight Display (PFD) ..... 2
  - Detach ..... 2
- Aircraft Status** ..... 3
  - Speed ..... 3
  - Altitude ..... 3
  - Attitude ..... 3
  - Drags and Brakes ..... 4
  - Electrical System ..... 4
  - Pressurization System ..... 4
  - Exit Doors ..... 5
  - Glider Towing ..... 5
- Engines** ..... 5
  - Engine Status ..... 5
  - Engine Control ..... 6
  - Engine Switches ..... 7
- Radio, Navigation and Autopilot** ..... 8
  - Radio and Navigation ..... 8
  - Autopilot Control ..... 9
- Lights and Switches** ..... 9
  - Lights ..... 9
  - Switches ..... 10
- TCAS Traffic** ..... 10
- ATC Control** ..... 11
- Change Aircraft** ..... 11
- Custom Buttons** ..... 12

# AIRCRAFT


Get an overview of all important aircraft data and control parts like engines, gear, flaps and spoilers, even auto pilot and radio control panel directly.

 Note: Please keep in mind that all functionality in this module is highly aircraft dependent. These functions should work fine with all default aircrafts of Prepar3D and FSX, but we cannot guarantee that they will all work with other third party aircrafts. **Read more about this.**

## Aircraft Gauges


Some generic aircraft gauges are displayed on this page.

### Six Pack Gauges

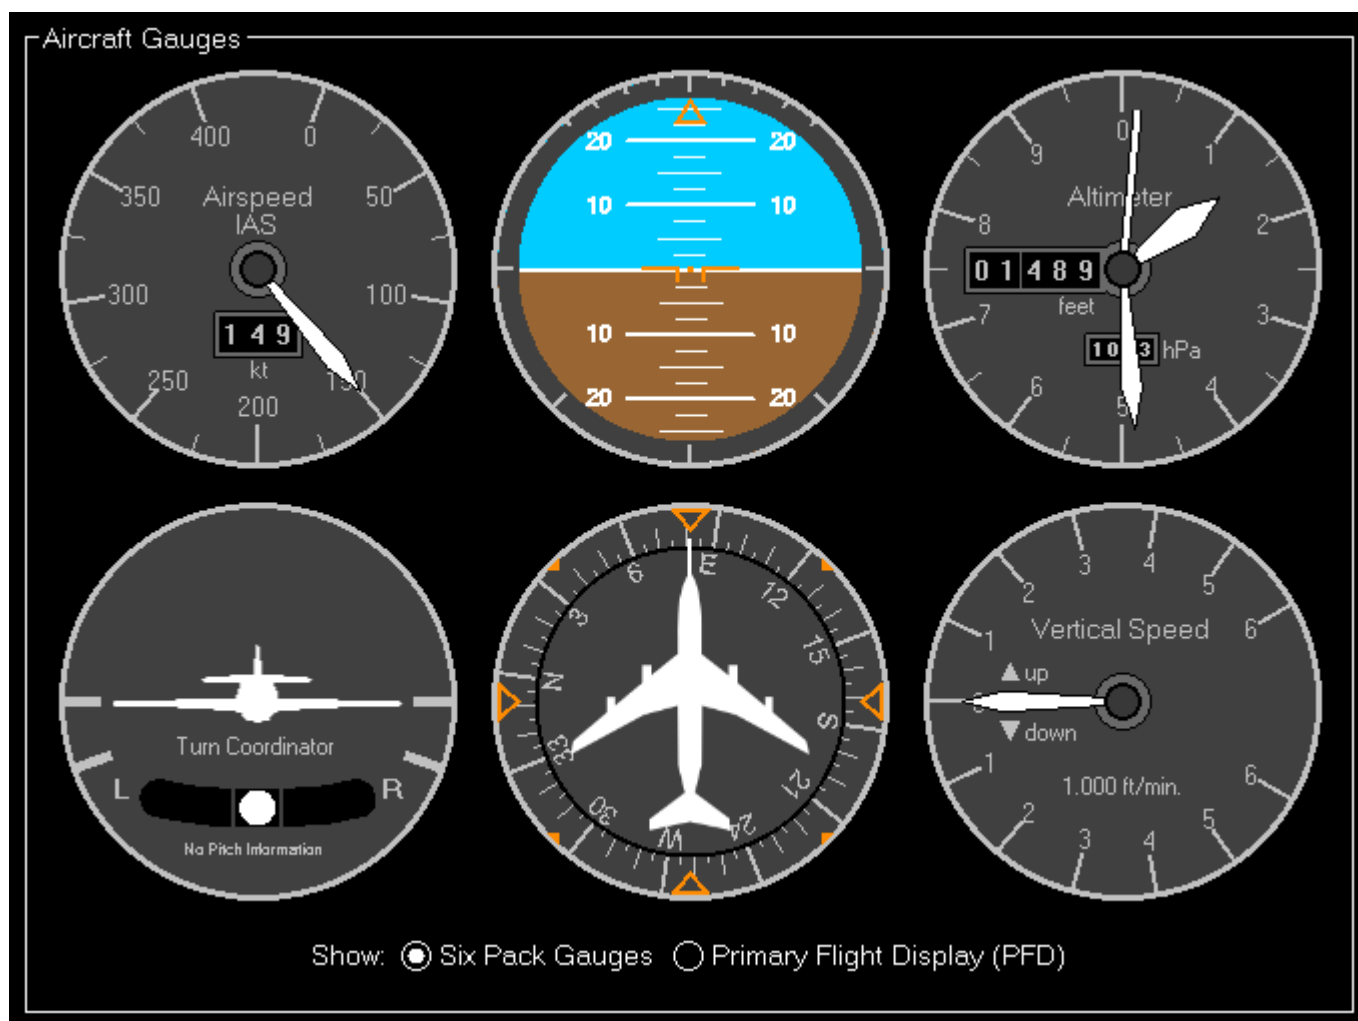


This displays the six default gauges available in aircraft with analogue avionics.

# Primary Flight Display (PFD)

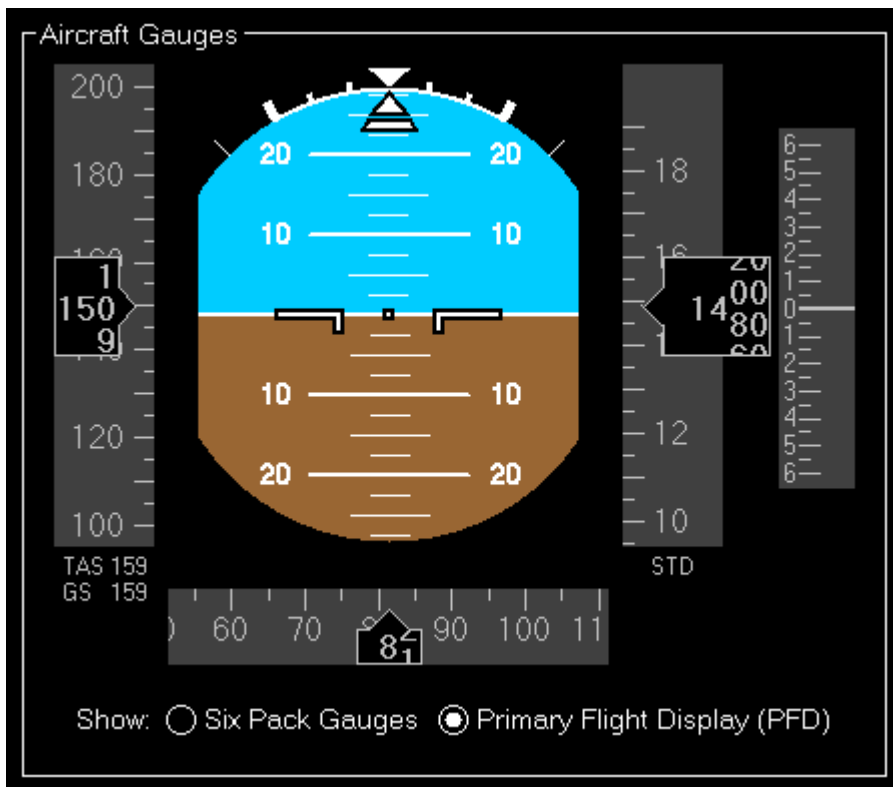

And here you see a generic Primary Flight Display (PFD).

## Detach

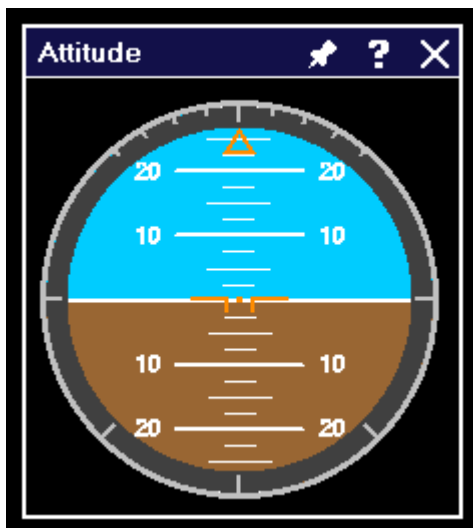

You can click on each of those gauges to detach them into a separate window.

Use the little pin icon in the title bar to keep the gauge window always on top.

# Aircraft Status

This aircraft status page will get you an overview about all relevant aircraft parameters.

## Speed




A screenshot of the 'Speed' panel in a flight simulator. The panel has a black background with white text. It displays three speed values: 'Indicated: 150 kt', 'True: 159 kt (M 0,245)', and 'Ground: 159 kt'. The text is arranged in a list-like format.

Here you can see the indicated and true airspeed of the aircraft.

Additionally the ground and mach speed is displayed as well.

## Altitude

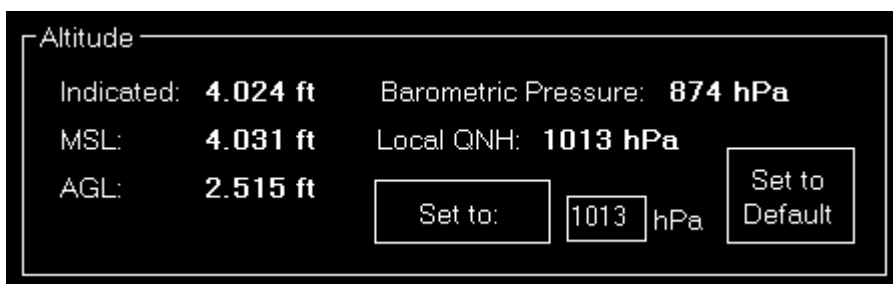


A screenshot of the 'Altitude' panel. It shows 'Indicated: 4.024 ft', 'MSL: 4.031 ft', and 'AGL: 2.515 ft'. To the right, it displays 'Barometric Pressure: 874 hPa' and 'Local QNH: 1013 hPa'. Below the QNH, there is a 'Set to:' label, a text input field containing '1013', and an 'hPa' unit label. A 'Set to Default' button is also present.

In the altitude section the current indicated altitude, the altitude above mean sea level (MSL) as well as the altitude above ground level (AGL) is displayed.

Additionally you can see the barometric pressure and the local QNH as well as set it.

## Attitude

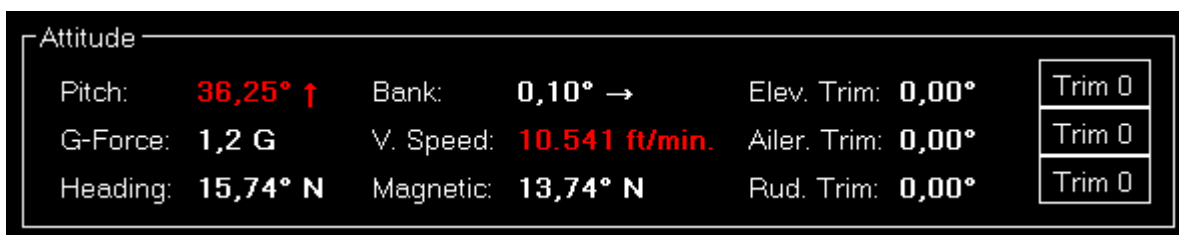


A screenshot of the 'Attitude' panel. It displays several parameters: 'Pitch: 36,25° ↑', 'Bank: 0,10° →', 'Elev. Trim: 0,00°', 'G-Force: 1,2 G', 'V. Speed: 10.541 ft/min.', 'Ailer. Trim: 0,00°', 'Heading: 15,74° N', 'Magnetic: 13,74° N', and 'Rud. Trim: 0,00°'. On the right side, there are three 'Trim 0' buttons stacked vertically.

Here the current aircraft pitch and bank angle, the G-force, vertical speed, heading and trims is displayed.


You can also reset the all three trims back to zero with just one click on the button.

## Drags and Brakes

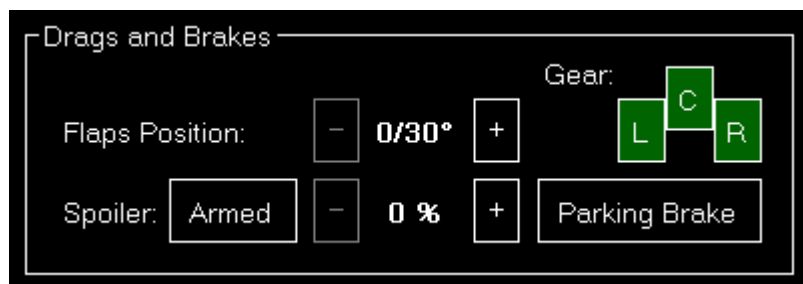


Use this section to see and change the current flaps, gear, spoiler and parking brake status.

## Electrical System

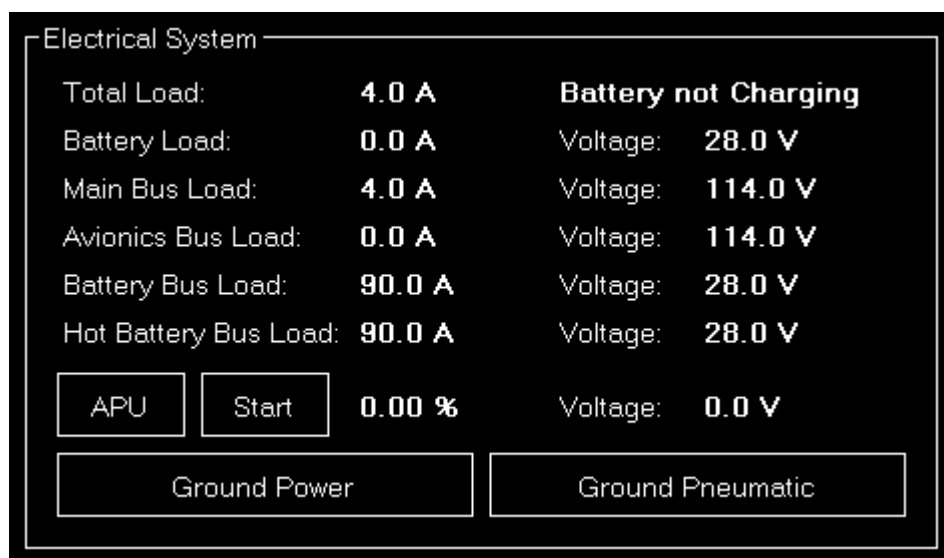


Here you get an overview of the whole electrical system of the aircraft.

You see the current load and voltage of all electrical bus system, see if the battery is currently charging or not and can trigger the APU or external/ground power if needed.

 Note: Some options are only available with certain third party aircraft options enabled.

## Pressurization System

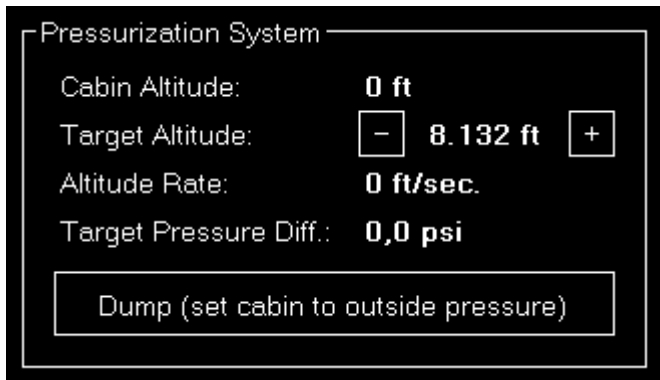

If the aircraft has a pressurization system available you can see its status here.

You can also adjust the target cabin altitude and enable the dump switch.

## Exit Doors




Here you can open and close again the exit doors of your aircraft.

## Glider Towing



Control glider towing and release in this section.

 Note: The winch option is only available with X-Plane.

## Engines

In the engines area all engine specific information and functions are available.

## Engine Status

Engine Status - Type: <b>Piston</b>				
	Engine 1	Engine 2	Engine 3	Engine 4
Manifold Pressure:	22.6 psi	22.6 psi	22.6 psi	22.6 psi
Brake Power:	944,416 ft. lb.	944,416 ft. lb.	944,416 ft. lb.	944,416 ft. lb.
Propeller Trust:	3,437.2 lb.	3,437.2 lb.	3,437.2 lb.	3,437.2 lb.
Propeller RPM:	<b>2,867</b>	<b>2,867</b>	<b>2,867</b>	<b>2,867</b>
Exhaust Gas Temp. (EGT):	596.2°C	596.2°C	596.2°C	596.2°C
Turbine Inlet Temp. (TIT):	555.3°C	555.3°C	555.3°C	555.3°C
Carburettor Temperature:	3.5°C	3.5°C	3.5°C	3.5°C
Engine Mixture Ratio:	0.09	0.09	0.09	0.09
Engine Cylinder Temp.:	187.5°C	187.5°C	187.5°C	187.5°C
Engine Torque:	4,047 ft. lb.	4,047 ft. lb.	4,047 ft. lb.	4,047 ft. lb.
Hydraulic Pressure:	972.4 psi	951.5 psi	962.5 psi	966.7 psi
Hydraulic Quantity:	99.28 %	97.15 %	98.28 %	98.70 %
Generator Bus Load:	15.0 A	15.0 A	15.0 A	15.0 A
Generator Bus Voltage:	28.0 V	28.0 V	28.0 V	28.0 V
Oil Temperature:	95.1°C	95.1°C	95.1°C	95.1°C
Oil Pressure:	60.0 psi	60.0 psi	60.0 psi	60.0 psi
Oil Quantity:	100.00 %	100.00 %	100.00 %	100.00 %
Fuel Available:	Yes	Yes	Yes	Yes
Fuel Flow:	1,153.8 lb./h	1,153.8 lb./h	1,153.8 lb./h	1,153.8 lb./h
Fuel Pressure:	20.0 psi	20.0 psi	20.0 psi	20.0 psi

This section will show you very detailed information about the current status of all aircraft engines.

We will not explain the individual engine parameters in details here and they also will differ depending on the specific engine type (in the screenshot above it is a piston engine type for example).

## Engine Control

Engine Control

Throttle Lever: 75.00 ↵

All:	0 %	25 %	50 %	75 %	100 %	Reverse Thrust	Quick Start
Engine 1:	0 %	25 %	50 %	75 %	100 %	Reverse Thrust	Quick Start
Engine 2:	0 %	25 %	50 %	75 %	100 %	Reverse Thrust	Quick Start
Engine 3:	0 %	25 %	50 %	75 %	100 %	Reverse Thrust	
Engine 4:	0 %	25 %	50 %	75 %	100 %	Reverse Thrust	

Propeller Lever: 99.86 ↵


Mixture Lever: 99.86 ↵

All:	0 %	25 %	50 %	75 %	100 %	0 %	25 %	50 %	75 %	100 %
Engine 1:	0 %	25 %	50 %	75 %	100 %	0 %	25 %	50 %	75 %	100 %
Engine 2:	0 %	25 %	50 %	75 %	100 %	0 %	25 %	50 %	75 %	100 %
Engine 3:	0 %	25 %	50 %	75 %	100 %	0 %	25 %	50 %	75 %	100 %
Engine 4:	0 %	25 %	50 %	75 %	100 %	0 %	25 %	50 %	75 %	100 %


Not only that you can check the current status of the engines, you can also control them in this section.

You can control either all aircraft engine levers at once or separately.

There are quick access buttons for 0 %, 25 %, 75 % and 100 %, but you can also enter any specific percentage you want. Also reverse thrust can be enabled for a specific or all engines by clicking on the button Reverse Thrust if the engine supports that.

 Note: The engine quick start options are only available with certain third party aircraft options enabled.

## Engine Switches

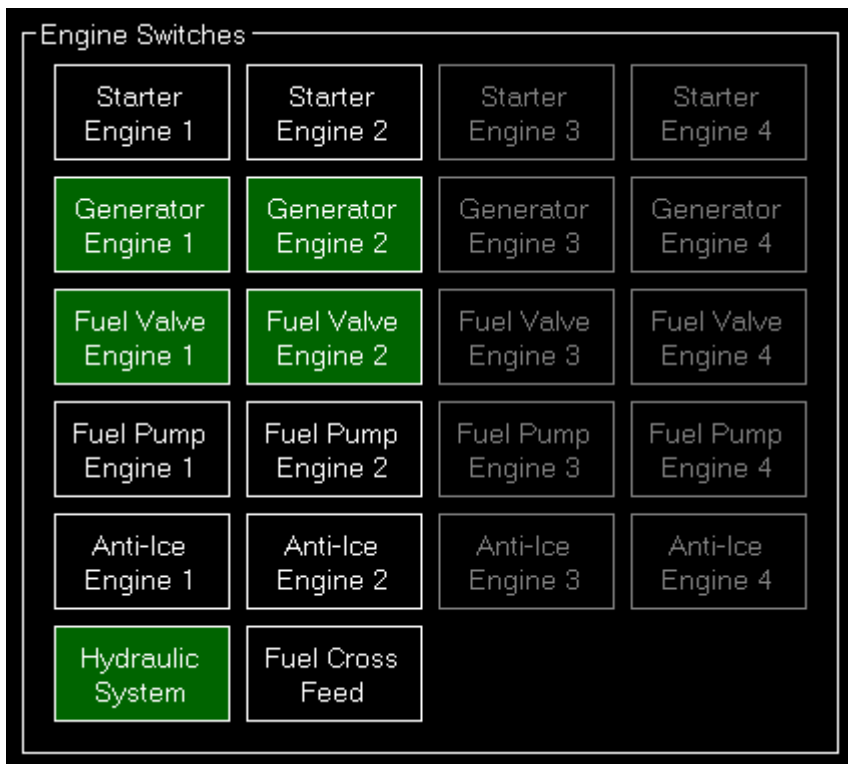

You can find in this section all relevant engine switches.

## Radio, Navigation and Autopilot

This section let you control the aircraft radio and autopilot panels.

### Radio and Navigation



Here the complete radio and navigation panel can be controlled.


You can set all frequencies including OBS (CRS) and XPDR (Transponder).

## Autopilot Control



Use this area to control the autopilot of the aircraft.


You can toggle the different autopilot modes and also control airspeed, altitude, vertical speed as well as heading that the autopilot should hold.

 Note: Please keep in mind that only autopilot functions that are implemented in your current aircraft autopilot will work. FS-FlightControl just “sends” the command to the aircraft autopilot - the same as you would press the corresponding button in the cockpit.

## Lights and Switches


This section give you control over all aircraft lights and other switches.

### Lights

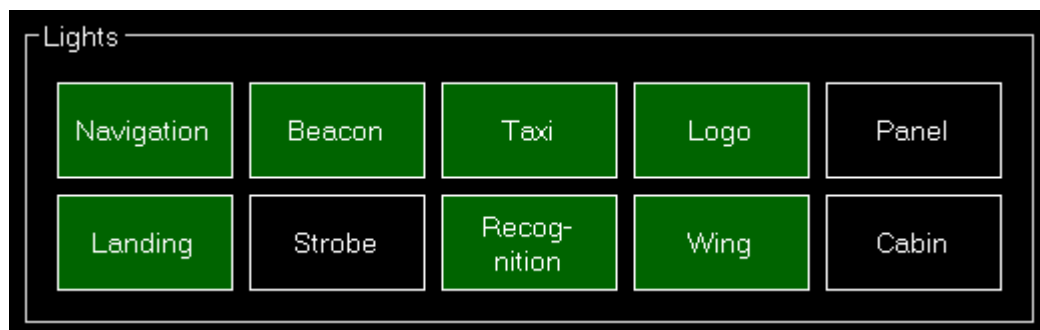


Use these buttons to control the aircraft lights.

## Switches

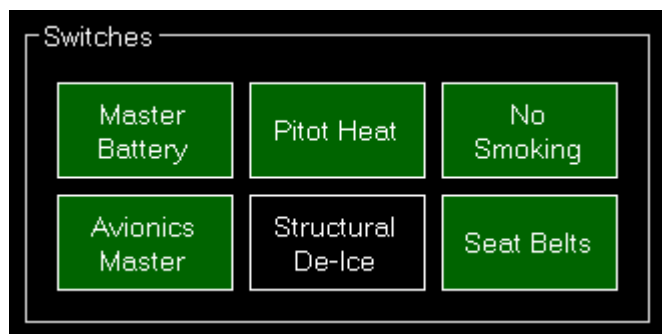

And use these buttons to control even more aircraft switches.

## TCAS Traffic

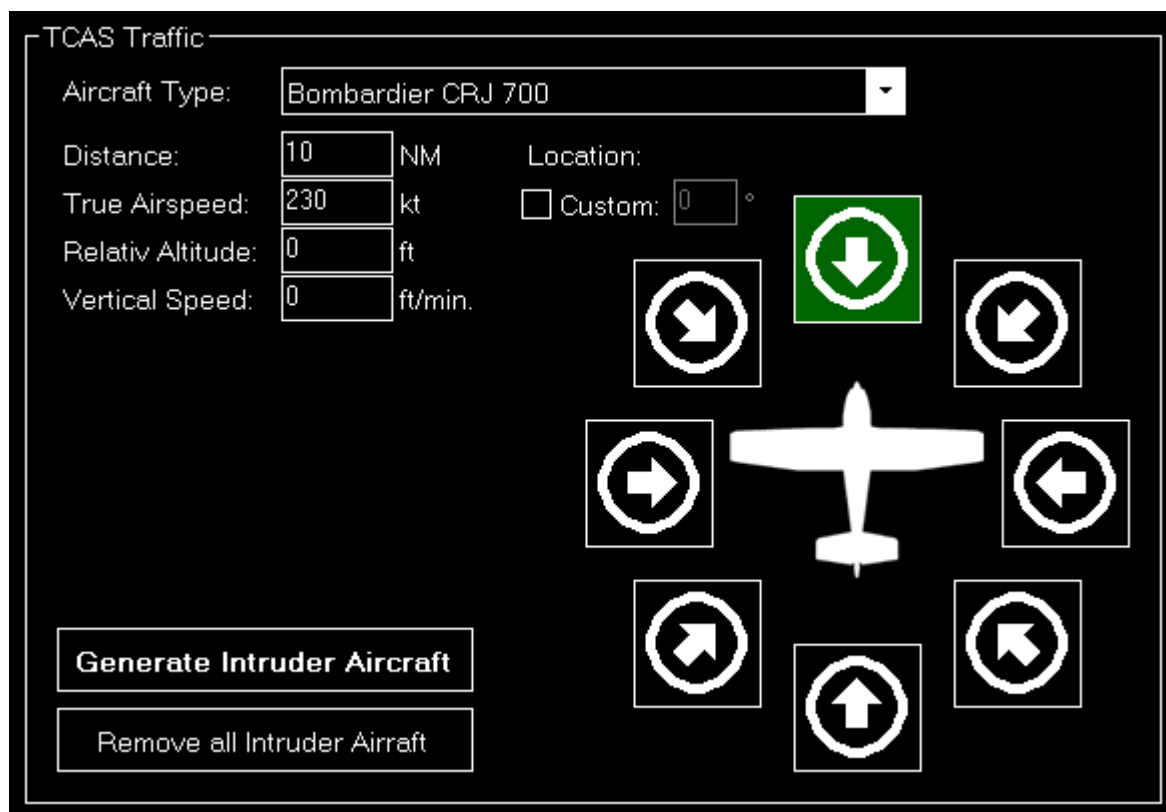

Here you can generate an aircraft that will trigger a TCAS alert.

First choose the aircraft type that should be generated. By default this is the aircraft you are currently flying.


Next you can define the location where the aircraft is being generated. You can either select one of the pre-defined location or enter a custom degree (in relation to the current aircraft heading).

Now enter the distance to the generated aircraft and the true airspeed it will be flying towards you.


You can also define a relative altitude (by default it is generated exactly at the altitude your aircraft is

currently at) and a vertical speed.


Finally trigger the aircraft generation with the button `Generate Intruder Aircraft` and remove all previously generated aircraft with the button `Remove all Intruder Aircraft` again.

 **Note:** The intruder aircraft type and vertical speed cannot be set if X-Plane is used. Also only one intruder at the same time is supported for X-Plane.

## ATC Control

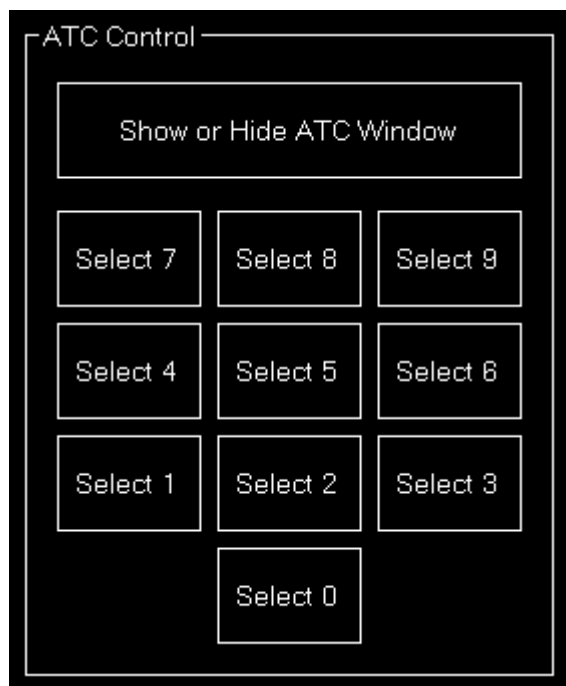

Use these buttons to show or hide the ATC window and choose from the shown menu options.

 **Note:** If X-Plane is used you can only show or hide the ATC window here.

## Change Aircraft




To change your aircraft in the simulator first select the new aircraft from the list and then click on the button **Change Aircraft**.

With a commercial license you can restrict the aircraft available for selection in this dialog in the **Settings** module or disable this function altogether.

 Note: The simulator does not provide a preview image for all aircraft.

## Custom Buttons

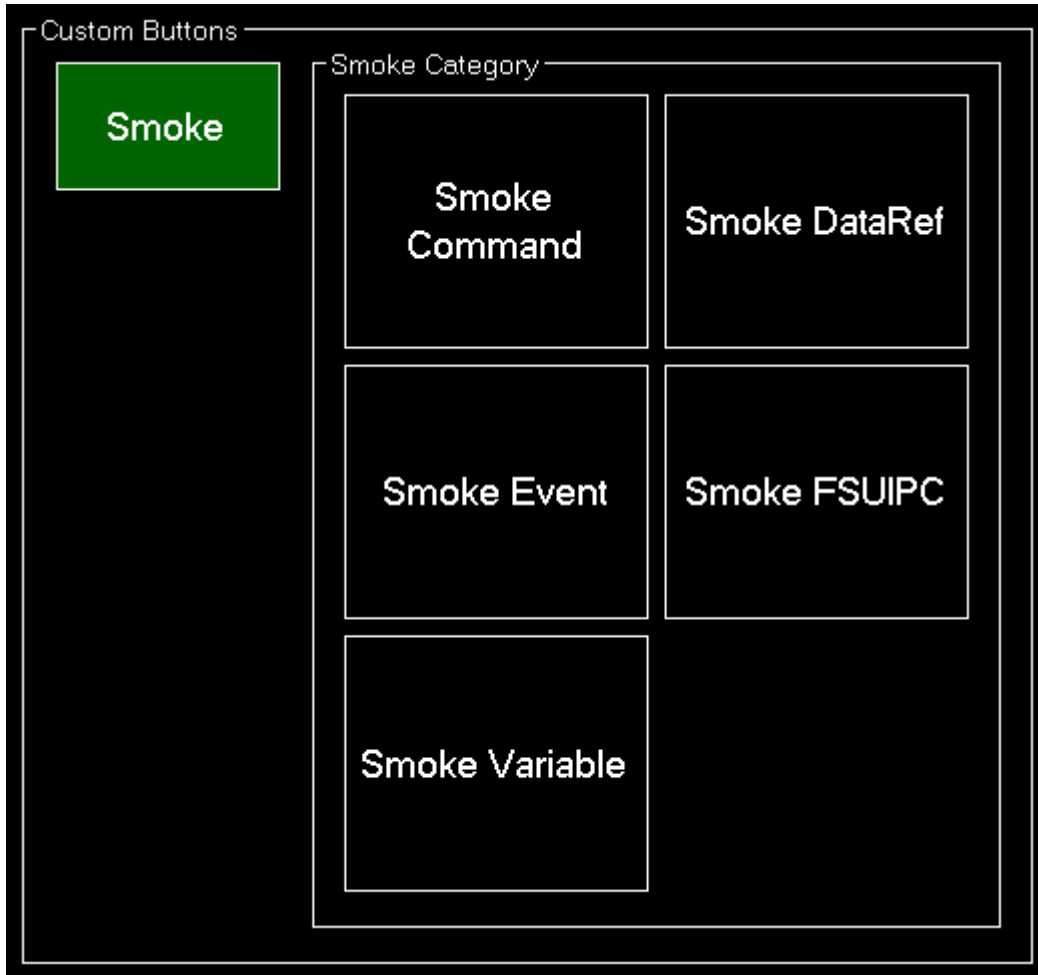

This section will be available when you have created custom bottoms in the **Settings** module.

The buttons shown above are the result of the **examples here**.

**FS-FlightControl Manual:**  
<https://www.fs-flightcontrol.com/en/manual/>



**PDF Generated on:**  
2026-05-13 22:40