



FS
FLIGHT
CONTROL
www.fs-flightcontrol.com

FS-FlightControl

Manual

Instructor Operator Station

for Microsoft Flight Simulator, Prepar3D and X-Plane



FS-FlightControl · AB-Tools GmbH

E-mail: info@fs-flightcontrol.com · Internet: www.fs-flightcontrol.com

Marsstraße 78, 80335 München, Germany · Phone: +49 89 38898588 · Fax: +49 89 38898589

Bank Account: Grenke Bank AG · IBAN: DE 49 20130400 0060270139 · BIC: GREBDEH1XXX

Register: Amtsgericht München, HRB 202859 · Finance Office: München für Körperschaften · VAT ID DE273587389

Table of Contents

FAILURES

Core Systems

Panel Failures

Fuel Leaks

Failure Conditions

Random Failures

1

1


1

1

2

FAILURES

Fail any aircraft component with just one click manually or define detailed failure conditions like fail if aircraft is above a specific altitude or airspeed.

 Note: Initially the flight simulator default failures are shown here, but FS-FlightControl does have support for extended aircraft failures of several third party products. You can choose the failure source in the **Settings** module.

Core Systems



In this area you can fail all core aircraft systems like engines, electrical system or brakes.

Panel Failures




Fail one or more panels here to force the pilot to get along with the situation also without that specific panel systems.

Fuel Leaks



Produce fuel leaks in all or individual tanks with this section.

Failure Conditions

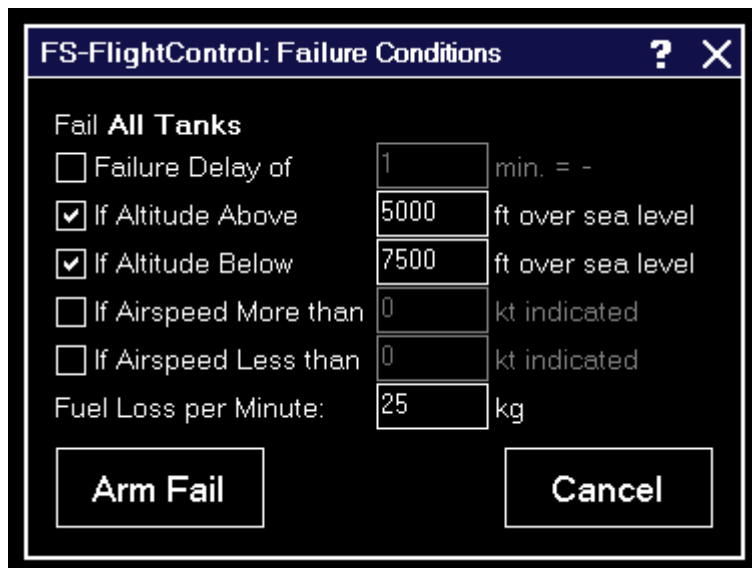

The screenshot shows a dialog box titled "FS-FlightControl: Failure Conditions" with a question mark icon and a close button (X). The dialog is for configuring failure conditions for "All Tanks". It contains several options, each with a checkbox and a text input field. The "Failure Delay of" option is set to "1" minute. The "If Altitude Above" option is checked and set to "5000" ft over sea level. The "If Altitude Below" option is checked and set to "7500" ft over sea level. The "If Airspeed More than" option is unchecked and set to "0" kt indicated. The "If Airspeed Less than" option is unchecked and set to "0" kt indicated. The "Fuel Loss per Minute" option is set to "25" kg. At the bottom, there are two buttons: "Arm Fail" and "Cancel".

Option	Value	Unit
Failure Delay of	1	min. = -
If Altitude Above	5000	ft over sea level
If Altitude Below	7500	ft over sea level
If Airspeed More than	0	kt indicated
If Airspeed Less than	0	kt indicated
Fuel Loss per Minute	25	kg

After clicking on a failure button in one of the sections above, these failure condition options will be displayed. Enable the check box before a condition to enable it.

First you can define if the failure should be in effect immediately or delayed for a certain amount of minutes.


Then you can choose a minimum and maximum altitude (MSL). If you enable one or both of these conditions the failure will be only in effect within this altitude range.

Additionally you can make sure that the failure will only occur within a certain (indicated) airspeed range.

In case the failure is a fuel leak you will see another option where you need to enter the amount of fuel that is lost per minute.

To enable a failure click on the **Enable** button. If you click on an already active failure you can disable it here again with the **Disable** button, too.

Random Failures

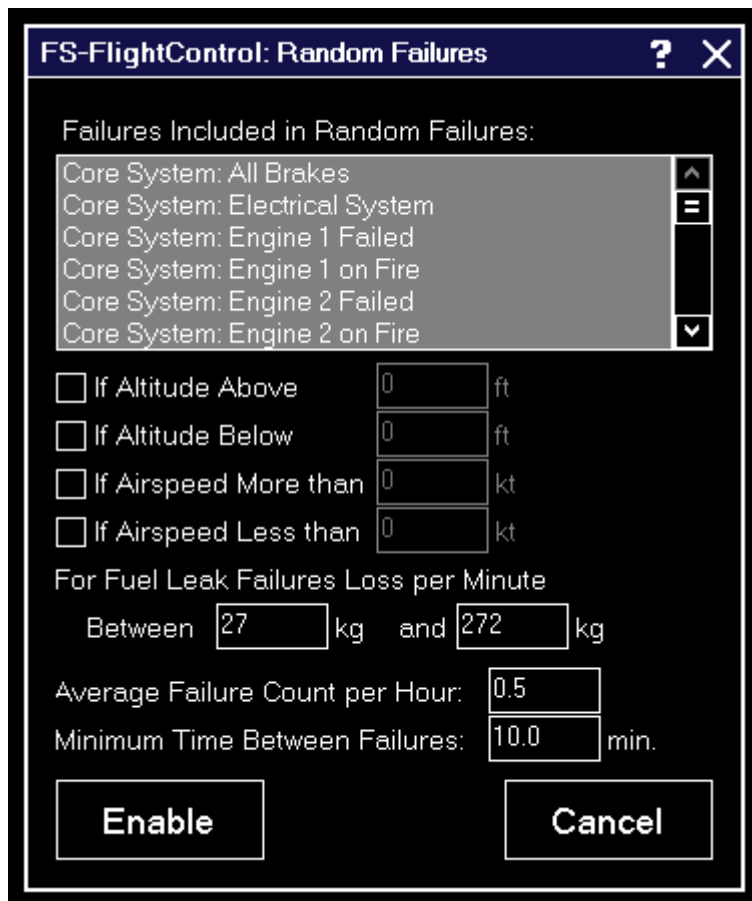


Beside triggering specific failures directly there is also an option to let FS-FlightControl generate random failures.

Therefore first select all failures that should be included in the random failures.

After that you can define the conditions when random failures may occur. The condition settings are the same as for the normal failure conditions above.

For fuel leaks you can additionally define a range of fuel loss per minute. The exact value then will again be chosen randomly within the defined range.

Finally you have to define the average number of failures that should occur per hour and the minimum time between two occurred random failure.

 **Note:** Keep in mind that failures number per hour is just an average value - everything is still random. You can also use decimal number (smaller than one) to get even less failures.

FS-FlightControl Manual:

<https://www.fs-flightcontrol.com/en/manual/>

PDF Generated on:

2025-12-14 22:54

