



FS
FLIGHT
CONTROL
www.fs-flightcontrol.com

FS-FlightControl

Manual

Instructor Operator Station

for Microsoft Flight Simulator, Prepar3D and X-Plane



FS-FlightControl · AB-Tools GmbH

E-mail: info@fs-flightcontrol.com · Internet: www.fs-flightcontrol.com

Marsstraße 78, 80335 München, Germany · Phone: +49 89 38898588 · Fax: +49 89 38898589

Bank Account: Grenke Bank AG · IBAN: DE 49 20130400 0060270139 · BIC: GREBDEH1XXX

Register: Amtsgericht München, HRB 202859 · Finance Office: München für Körperschaften · VAT ID DE273587389

Table of Contents

SETTINGS	1
<i>Aircraft Related Settings</i>	1
Aircraft Profile	1
Profile Settings	1
Position	2
Final Position	2
Vectors Position	3
Base Position	3
Downwind Position	3
Airworks	3
Options on Position Change	4
Map Colors	4
Colors and Text Settings	4
Map Other	9
Auto Zoom	9
Aircraft Display	9
Reposition	10
Compass Rose	10
Other	11
Pushback	11
Speed Options	11
Failures	11
Failures Source	11
Aircraft	12
Aircraft Warnings	12
Aircraft-Specific Options	13
Other	13
Statistics	13
Google Earth Export	13
<i>Not Aircraft Related Settings</i>	13
Simulator	14
Select Simulator Type	14
Simulator Settings for Prepar3D/FSX/FSW	14
Simulator Settings for X-Plane	17
Position	20
General	20
Flight Situation Presets	20
Map	20
Data Update Rate	20
Grid and Minimum Sector Altitude (MSA) Display	21
Print Options	21
Display Options	22
Online Networks	22
Flight Plan	22
Flight Plan Folder	22
Conditions	23
Weather Engine	23
Real-Time Weather Source	23

ILS Visibility	23
Failures	24
Color Settings	24
Other	24
Statistics	25
Color Settings	25
Print Options	26
Network	26
FS-FlightControl Client	26
Program Close Options	27
Status Page for Web Display	27
Mobile Devices	29
Android and iOS Client	29
Third Party	30
ProSim	30
AST	30
Project Magenta	30
Flight Sim Labs	31
Brunner Elektronik	31
Active Sky	31
PFPX	31
Aerosoft Airbus	31
Wilco Airbus	32
Mindstar	32
Flight1	32
General	32
Other Settings	33
Units	33
Color Settings	34
Input and Help	34
Program Startup Options	35

SETTINGS

Customize this program to your needs with detailed, even aircraft-specific settings. Change map colors, SimConnect settings and many more options available.

But although a lot of very detailed customization options are available in this modules, FS-FlightControl is designed in a way that you do not have to touch anything here to just use the program.

It is perfectly usable with the default settings and only if you need something special then this is the right place to look at.

Aircraft Related Settings

All settings in this area will be saved together with the corresponding aircraft profile if aircraft related settings are enabled.

Aircraft Profile

☒ Enable Aircraft Related Settings (if disabled same profile for all aircraft is used)

Edit Profile:

Prop. Aircraft

▼

Create New Profile

By default aircraft related settings are disabled as this is not needed for many users, especially also if you only use FS-FlightControl with one specific aircraft type.

But if you want to use FS-FlightControl together with very different aircraft types it makes sense to enable aircraft related settings here.

Profile Settings

Profile Settings

Profile Name:

Assign Aircraft to this Profile:

- AgustaWestland EH101
- AgustaWestland EH101 1
- AgustaWestland EH101 10
- AgustaWestland EH101 11
- AgustaWestland EH101 12
- AgustaWestland EH101 2
- AgustaWestland EH101 3
- AgustaWestland EH101 4
- AgustaWestland EH101 5
- AgustaWestland EH101 6
- AgustaWestland EH101 7
- AgustaWestland EH101 8
- AgustaWestland EH101 9
- Airbus A321
- Airbus A321 Paint2
- Airbus A321 Paint4
- Airbus A321 Paint5
- Aircreation582SL
- Aircreation582SL Blue
- Aircreation582SL red
- Aircreation582SL yellow, white and red
- Bell 206B JetRanger

Currently Assigned Aircraft:

- Beech Baron 58
- Beech Baron 58 Paint1
- Beech Baron 58 Paint2
- Beech Baron 58 Paint3
- Beech Baron 58 w G1000
- Beech King Air 350
- Beech King Air 350 Paint1
- Beech King Air 350 Paint2
- Beech King Air 350 Paint3
- Cessna Grand Caravan
- Cessna Grand Caravan Paint1
- Cessna Grand Caravan Paint2
- Cessna Grand Caravan Paint3
- Cessna Skyhawk 172SP
- Cessna Skyhawk 172SP G1000
- Cessna Skyhawk 172SP Paint1
- Cessna Skyhawk 172SP Paint2
- Cessna Skyhawk 172SP Paint3
- Cessna Skyhawk 172SP Paint4
- Extra 300S
- Extra 300S Paint1
- Extra 300S Paint2

Copy All Settings from Profile:

If aircraft related settings are enabled the profile settings section gets enabled as well.

You can edit or create new aircraft profiles here and change the flight simulator aircrafts that are assigned to the current aircraft profile.

Additionally you can copy all settings from another profile or revert all settings to default.

Position

These settings are related to the **Position** module.

Final Position

Final Position

Short Final: NM

Long Final: NM

Vertical Offset to Glideslope (+higher, -lower): ft

Horizontal Offset to Glideslope (-left, +right): ft

Here you can define the distance of the short and long final approach as well as a vertical and horizontal offset to the glideslope if you want.

Vectors Position

Vectors Position	
Vector Leg Distance:	2 NM
Final Leg Distance:	6 NM
Final Intercept Angle:	30 °

The distances for the vector positions can be changed here as well as the final intercept angle.

Base Position

Base Position	
Base Leg Distance:	4 NM
Final Leg Distance:	6 NM

Define here the distances for the base positions.


Downwind Position

Downwind Position	
Distance Back:	1 NM
Lateral Distance to Runway:	4 NM
Altitude Above Ground:	2,000 ft

Here you can define the lateral distance to the runway for the downwind positions.

In contrast to the other positions where the altitude is calculated based on the runway glideslope automatically, the altitude for the downwind positions can be customized here.


Airworks

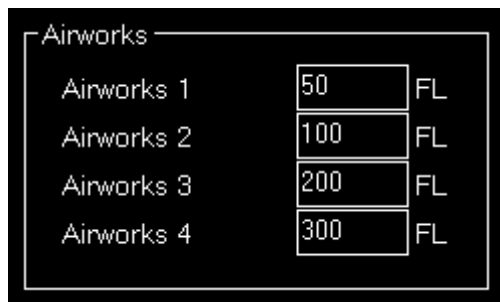

Airworks		
Airworks 1	50	FL
Airworks 2	100	FL
Airworks 3	200	FL
Airworks 4	300	FL

You can define the flight levels of the four airworks buttons here.

Options on Position Change

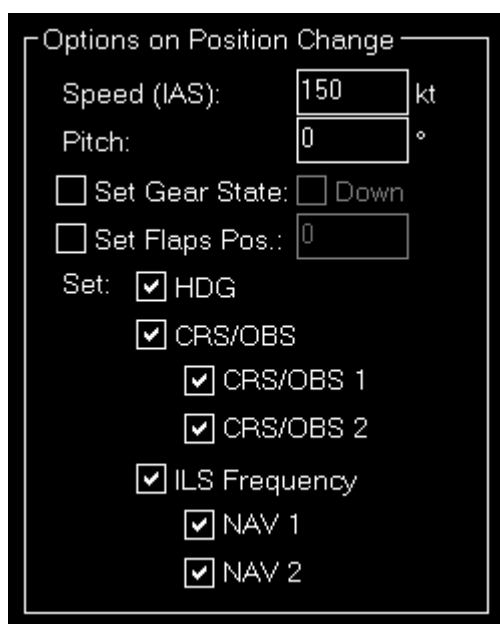

Options on Position Change	
Speed (IAS):	150 kt
Pitch:	0 °
☐ Set Gear State:	☐ Down
☐ Set Flaps Pos.:	0
Set:	☒ HDG
	☒ CRS/OBS
	☒ CRS/OBS 1
	☒ CRS/OBS 2
	☒ ILS Frequency
	☒ NAV 1
	☒ NAV 2

Depending on the aircraft capabilities you can change the parameters that are used when the aircraft is positioned.

This includes whether the heading, course (CRS) respectively omni bearing selector (OBS) or ILS frequency (if the runway is ILS enabled) should be set automatically with the aircraft position change to a certain approach.

Map Colors

These settings are related to the **Map** module.

Colors and Text Settings

In this area you can highly customize the appearance of the map.

We decided to put this into the aircraft related settings. Although this seems not to be aircraft related at first sight, but this enables you to emphasis certain map parts based on the currently loaded aircraft: For example when using a small aircraft you might want to highlight more the small gates

and do not care a lot about ILS, but when using a big jet the large gates are much more interesting. Same goes for other parts on the map which might be more interesting for certain aircraft types than others.

Select map type: ☒ Normal ☐ Normal for Print ☐ Street Map ☐ Satellite Map ☐ Height Map

All colors and text sizes can be defined per map type.

Therefore please first select the map type.

Colors and Text Sizes for Map Type

Structure Color	Min. Zoom	Text Color	Min. Zoom	Font Size
User Aircraft	<input type="range"/>	User Aircraft Info	<input type="range"/>	7
AI Aircraft	<input type="range"/>	AI Aircraft Info	<input type="range"/>	7
VATSIM Aircraft	<input type="range"/>	VATSIM Airc. Info	<input type="range"/>	7
VATSIM Airport	<input type="range"/>	(Used to draw APP, TWR and GND cycles.)		
VATSIM FIR/UIR	<input type="range"/>	VAT. FIR/UIR Info	<input type="range"/>	10
IVAO Aircraft	<input type="range"/>	IVAO Aircraft Info	<input type="range"/>	7
IVAO Airport	<input type="range"/>	(Used to draw APP, TWR and GND cycles.)		
IVAO FIR/UIR	<input type="range"/>	IVA. FIR/UIR Info	<input type="range"/>	10
PilotEdge Aircraft	<input type="range"/>	PilotEdge Aircraft	<input type="range"/>	7
PilotEdge Airport	<input type="range"/>	(Used to draw APP, TWR and GND cycles.)		
PilotEdge FIR	<input type="range"/>	PilotE. FIR Info	<input type="range"/>	10
Airport	<input type="range"/>	Airport Name	<input type="range"/>	10
Runway	<input type="range"/>	Runway Ident	<input type="range"/>	8
ILS	<input type="range"/>	ILS Ident	<input type="range"/>	8
Axis	<input type="range"/>			
Marker	<input type="range"/>	Marker Type	<input type="range"/>	8
Taxi Path	<input type="range"/>	Taxi Point Name	<input type="range"/>	8
Taxi Center Line	<input type="range"/>			
Taxi Holding Point	<input type="range"/>			
Tower	<input type="range"/>			
VOR	<input type="range"/>	VOR Name	<input type="range"/>	8
NDB	<input type="range"/>	NDB Name	<input type="range"/>	8
Airspace	<input type="range"/>	Airspace Name	<input type="range"/>	8
Airway	<input type="range"/>	Airway Name	<input type="range"/>	8
Waypoint	<input type="range"/>	Waypoint Ident	<input type="range"/>	8
Wayp. SID/STAR	<input type="range"/>	Waypoint Ident	<input type="range"/>	10
Weather Station	<input type="range"/>	Weath. St. Name	<input type="range"/>	8
User POI	<input type="range"/>	User POI Name	<input type="range"/>	10
Compass Rose	<input type="range"/>			
Weather Info	<input type="range"/>	Weather Info	<input type="range"/>	8
Map Info	<input type="range"/>	Map Info Text	<input type="range"/>	8
Holding	<input type="range"/>	Holding Info	<input type="range"/>	8
Measure	<input type="range"/>	Measure Info	<input type="range"/>	8
Trace Aircraft	<input type="range"/>			
Flight Plan Path	<input type="range"/>			
SID/STAR Path	<input type="range"/>			
Country	<input type="range"/>	Country	<input type="range"/>	12
Country Border	<input type="range"/>			
Ocean	<input type="range"/>			
Lake	<input type="range"/>	Lake	<input type="range"/>	8
River	<input type="range"/>	River	<input type="range"/>	8
Grid	<input type="range"/>	MSA	<input type="range"/>	14

Here all currently defined colors and text sizes are displayed for the selected map type.

The **Structure Color** is always the color of the item itself, like the runway surface of the runway, whereas **Text Color** the color of the corresponding text is, like the runway idents of the runway.

The **Min. Zoom** next to the **Structure Color** defines the minimum map zoom level needed that this structure (like the runway surface) is shown. Accordingly the second **Min. Zoom** next to the **Text Color** defines the minimum map zoom level needed that the corresponding text (like the runway idents) is shown.

Font Size, the last column, enables you to define the size of the displayed text.

Parking

Parking

Color Default

Color Gate Color Ramp

Name Prefix for Type:	Font Size Gate/Ramp:
Fuel: F	Default: 8
Cargo: C	Small: 7
Military: M	Medium: 8
	Large: 10

Min. Zoom:

This area lets you define colors and text sizes for the different parking types like gates and ramps depending on their sizes.

Additionally you can define text prefixes to be used for a certain type like fuel, cargo or military.

Tooltip

Tooltip

Color Text

Color Background

Max. Zoom:

Font Size:


When hovering over certain map elements like an airport a tooltip is displayed shown the full name of the airport.

In this section you can define the appearance of this tooltip as well as the maximum map zoom level until that the tooltip should be displayed.

Map Other

These settings are related to the **Map** module.

Auto Zoom

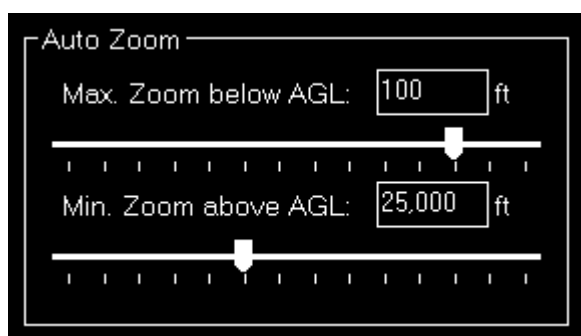


The **Map** module also features an auto zoom function which will zoom the map in and out according to the current aircraft altitude.

You can configure this feature here by first entering the maximum zoom level (fully zoomed in) that should be reached if the aircraft is below the entered altitude above ground.

Then, for the upper end, you define the minimum zoom level (fully zoomed out) that should be reached above the entered altitude.

Between these two altitudes the zoom will be equally divided automatically.

Aircraft Display

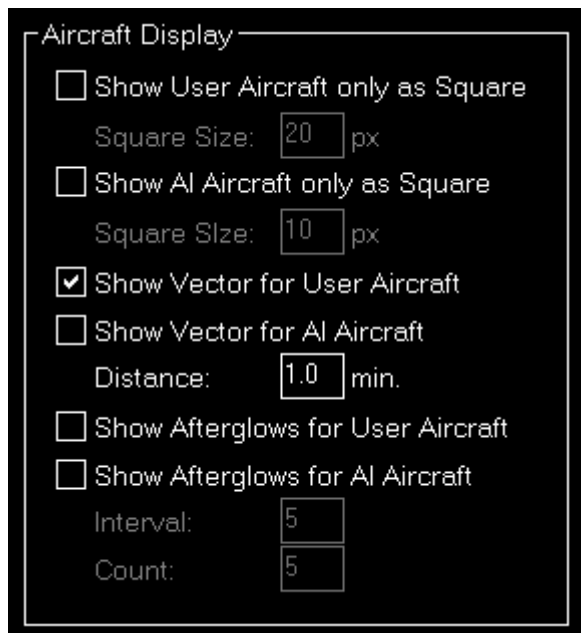

Aircraft Display

- ☐ Show User Aircraft only as Square
Square Size: px
- ☐ Show AI Aircraft only as Square
Square Size: px
- ☒ Show Vector for User Aircraft
- ☐ Show Vector for AI Aircraft
Distance: min.
- ☐ Show Afterglows for User Aircraft
- ☐ Show Afterglows for AI Aircraft
Interval:
Count:


Here you can choose from certain options related to the display of the aircraft on the map.

First you can define if the user and/or AI aircraft are only shown as squares instead of an aircraft image. In this case you can also enter a size for the squares.

Furthermore you can enable or disable a distance vector being displayed in front of each user and/or AI aircraft. In this case you can enter the length of the vector in minutes.

Additionally so called afterglows - dots behind the aircraft - can be enabled or disabled for user and/or AI aircraft. In this case you can enter an interval as well as the number of dots that should be displayed.

Reposition

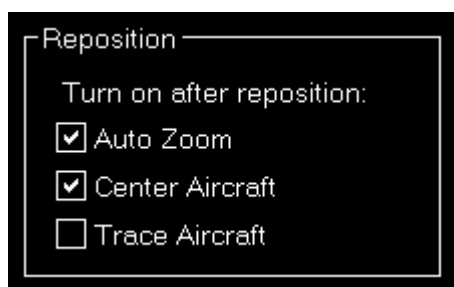


Reposition

Turn on after reposition:

- ☒ Auto Zoom
- ☒ Center Aircraft
- ☐ Trace Aircraft


In this section you can define if certain map features are automatically turned on after the map reposition function was used.

Compass Rose

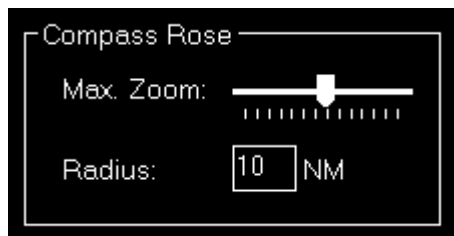

Use these settings to define the maximum zoom level up to the compass rose (when this function is enabled) should be displayed and how wide its radius should be.

Other

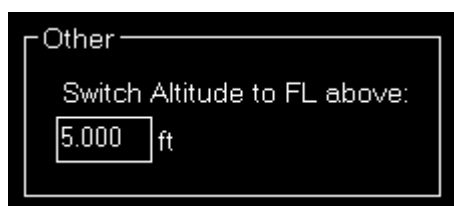


Here you can define at which altitude the display should switch from precise altitude display to flight level.

 Note: Above this altitude it will also switch from show MSL altitude to indicated altitude.

Pushback

These settings are related to the **Pushback** module.

Speed Options

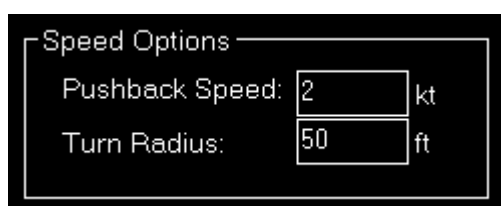

Here you can define the pushback speed as well as the turn radius.

Failures

These settings are related to the **Failures** module.

Failures Source




Here you can choose the source of the failures that are displayed in the **Failures** module.

 Note: For some options additional parameters need to be entered in the **Third Party** settings first.

Aircraft

These settings are related to the **Aircraft** module.

Aircraft Warnings

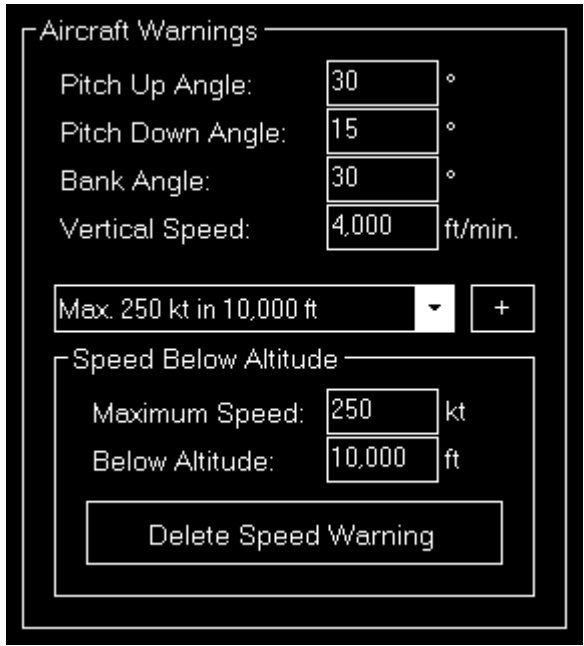

Aircraft Warnings

Pitch Up Angle: °

Pitch Down Angle: °

Bank Angle: °

Vertical Speed: ft/min.

Max. 250 kt in 10,000 ft


Speed Below Altitude

Maximum Speed: kt

Below Altitude: ft

Here you can set limits for some parameters like pitch or bank angle for the aircraft.

Speed Below Altitude

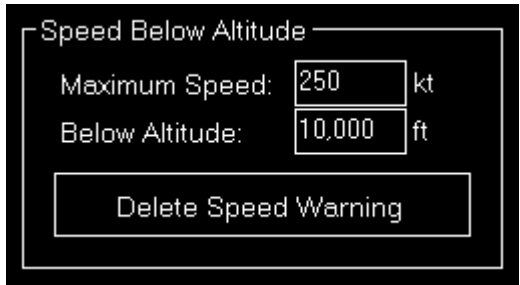

Speed Below Altitude

Maximum Speed: kt

Below Altitude: ft

Additionally you can define maximum speeds below certain altitudes above mean sea level (MSL).

These settings are used to change the color of the corresponding value to red on the **Aircraft** module and also to shown warning indicators when exporting graph data to Google Earth on the **Statistics** module.


Aircraft-Specific Options



For some third-party add-ons there are some additional options available. You can enable this support [here](#).

 Note: Some third-party add-ons require additional parameters to be entered in the **Third Party** settings first.

Other

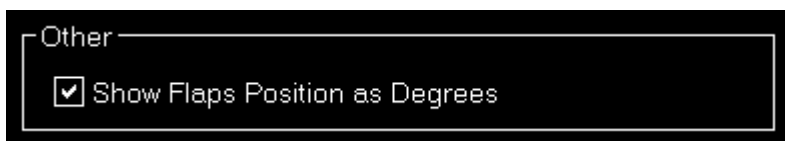

Other

☒ Show Flaps Position as Degrees

Here you can define if flap positions should be shown as degree number.

Statistics

These settings are related to the **Statistics** module.

Google Earth Export



Google Earth Export

Interval Between Flight Track Points: sec.

Range to Include VORs, NDBs and Waypoints: NM

Define all Google Earth export related settings in this area.


Every certain time interval a flight track point is shown in Google Earth with detailed flight information. You can set this time interval here.

Additionally you can define the range for including VORs, NDBs and waypoints if their export is enabled.

Not Aircraft Related Settings


All settings in this area are not aircraft related and will be saved globally.

Simulator



At the very first program start one simulator is automatically created, but you can add more simulators and then switch between them at any time.

Select Simulator Type

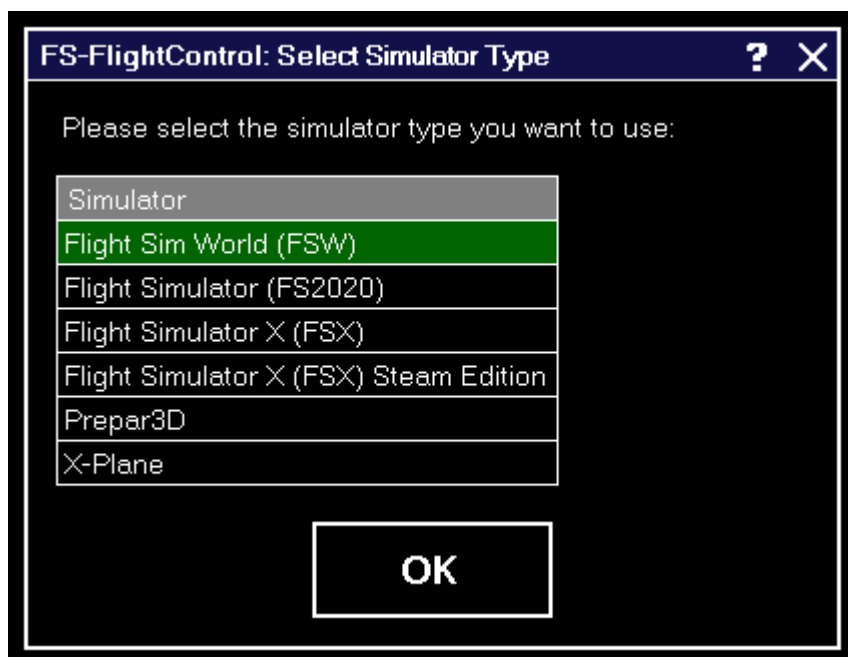

After you have clicked on the button Create New Simulator this dialog will appear asking you which type of simulator you want to create.

Simulator Settings for Prepar3D/FSX/FSW

Simulator Settings		Database Build									
Main Settings											
Simulator Type: Prepar3D		Main Directory of Prepar3D: C:\Program Files\Lockheed Martin\Prep	<button>Browse</button>								
Simulator Name: Prepar3D		AppData Directory of Prepar3D: C:\Users\a-bre\AppData\Roaming\Lock	<button>Browse</button>								
Simulator Documents Folder: C:\Users\a-bre\OneDrive\Documents\Pi	<button>Browse</button>	Path to Prepar3D "scenery.cfg": C:\ProgramData\Lockheed Martin\Prep	<button>Browse</button>								
Activate Simulator Delete Simulator		☐ Use NavAids/Frequencies from Navigation Data Database was built on 3/24/2020 6:38:38 PM.									
Navigation Data Update		Build Database (Open FS-FlightControl data directory in Explorer)									
Navigation Data Expected in Folder: C:\Users\a-bre\AppData\Roaming\FMS-Flight Control\NavData\ <table style="width: 100%;"> <tr> <td style="width: 50%;">Current Data:</td> <td style="width: 50%;">Found Data:</td> </tr> <tr> <td>Provider: Navigraph FMS Data</td> <td>Provider: Navigraph FMS Data</td> </tr> <tr> <td>Cycle: 1901</td> <td>Cycle: 1901</td> </tr> <tr> <td>Revision: 1</td> <td>Revision: 1</td> </tr> </table>		Current Data:	Found Data:	Provider: Navigraph FMS Data	Provider: Navigraph FMS Data	Cycle: 1901	Cycle: 1901	Revision: 1	Revision: 1	SimConnect ☐ Local Flight Simulator Installation ☒ Remote Flight Simulator Installation Host or IP: 192.168.16.21 Port: 2048 Please ensure SimConnect is enabled for network use. Config Wizard	
Current Data:	Found Data:										
Provider: Navigraph FMS Data	Provider: Navigraph FMS Data										
Cycle: 1901	Cycle: 1901										
Revision: 1	Revision: 1										
☐ Use NavAids/Frequencies from Navigation Data Navigation data reload not necessary.											
Reload Navigation Data		Apply Changes and Reconnect									

If a simulator of type Prepar3D, FSX or FSW is selected these settings will be available.

Main

Main Settings

Simulator Type: **Prepar3D**

Simulator Name:

Simulator Documents Folder:

Browse

Activate Simulator


Delete Simulator

Below the not changable simulator type you can define a custom name for this simulator.

Additionally you can choose the simulator documents folder which is automatically detected if the simulator is installed locally.

If the selected simulator is currently not active, you can use the buttons **Activate Simulator** to activate it or **Delete Simulator** to delete it again.

 **Note:** You can change the active simulator also by clicking on the connection status in the **Title**

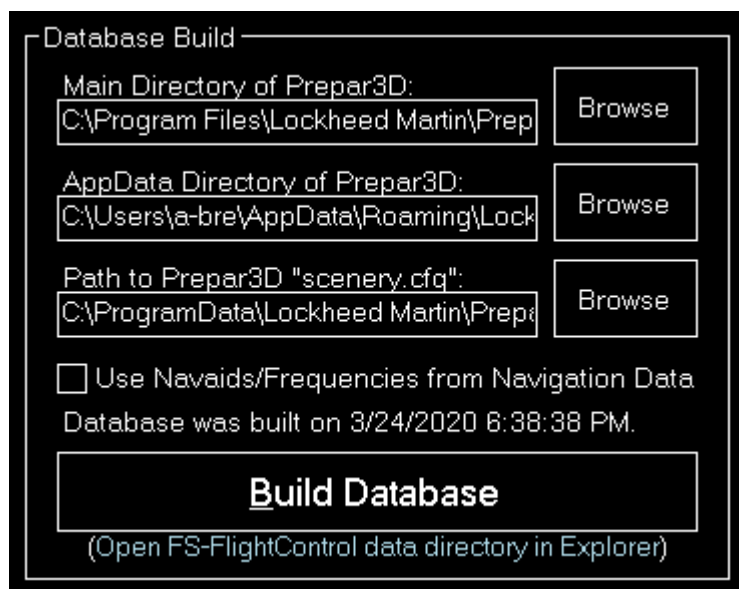Bar.**Database Build**

The screenshot shows the 'Database Build' dialog box. It has a title bar 'Database Build'. Inside, there are three rows of text boxes with 'Browse' buttons to their right. The first row is 'Main Directory of Prepar3D:' with the path 'C:\Program Files\Lockheed Martin\Prep'. The second row is 'AppData Directory of Prepar3D:' with the path 'C:\Users\A-bre\AppData\Roaming\Lock'. The third row is 'Path to Prepar3D "scenery.cfg":' with the path 'C:\ProgramData\Lockheed Martin\Prep'. Below these is a checkbox 'Use Nav aids/Frequencies from Navigation Data' which is unchecked. Below the checkbox is the text 'Database was built on 3/24/2020 6:38:38 PM.' At the bottom is a large button labeled 'Build Database' and a smaller line of text '(Open FS-FlightControl data directory in Explorer)'.

Database Build

Main Directory of Prepar3D:
C:\Program Files\Lockheed Martin\Prep Browse

AppData Directory of Prepar3D:
C:\Users\A-bre\AppData\Roaming\Lock Browse

Path to Prepar3D "scenery.cfg":
C:\ProgramData\Lockheed Martin\Prep Browse


☐ Use Nav aids/Frequencies from Navigation Data

Database was built on 3/24/2020 6:38:38 PM.

Build Database

(Open FS-FlightControl data directory in Explorer)

The database build is explained in the **Database Build** installation section.

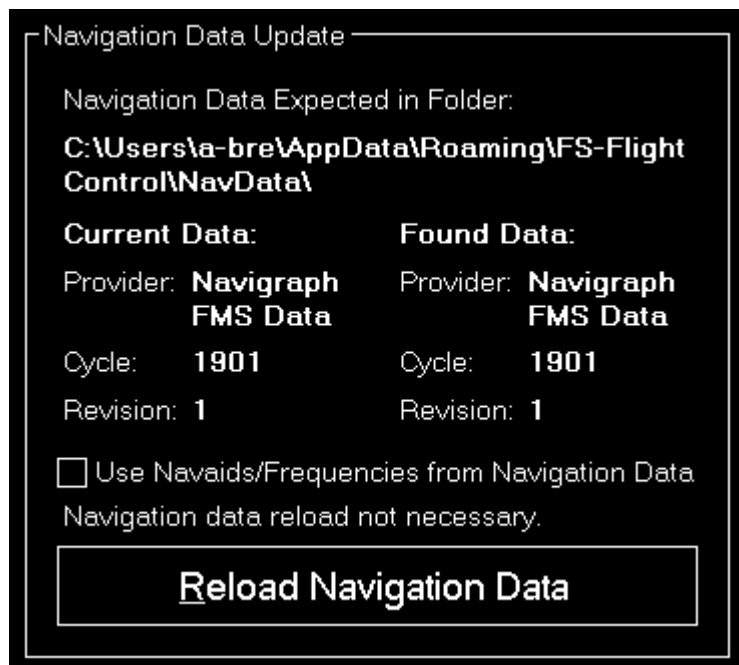Navigation Data Update

The screenshot shows the 'Navigation Data Update' dialog box. It has a title bar 'Navigation Data Update'. Inside, it shows 'Navigation Data Expected in Folder:' followed by the path 'C:\Users\A-bre\AppData\Roaming\FS-Flight Control\NavData\'. Below this is a table comparing 'Current Data' and 'Found Data'. The table has two columns: 'Current Data' and 'Found Data'. The rows are 'Provider: Navigraph FMS Data', 'Cycle: 1901', and 'Revision: 1'. Below the table is a checkbox 'Use Nav aids/Frequencies from Navigation Data' which is unchecked. Below the checkbox is the text 'Navigation data reload not necessary.' At the bottom is a large button labeled 'Reload Navigation Data'.

Navigation Data Update

Navigation Data Expected in Folder:
C:\Users\A-bre\AppData\Roaming\FS-Flight Control\NavData\

Current Data:	Found Data:
Provider: Navigraph FMS Data	Provider: Navigraph FMS Data
Cycle: 1901	Cycle: 1901
Revision: 1	Revision: 1


☐ Use Nav aids/Frequencies from Navigation Data

Navigation data reload not necessary.

Reload Navigation Data

This area is explained in the **Navigation Data Update** dialog section.

SimConnect

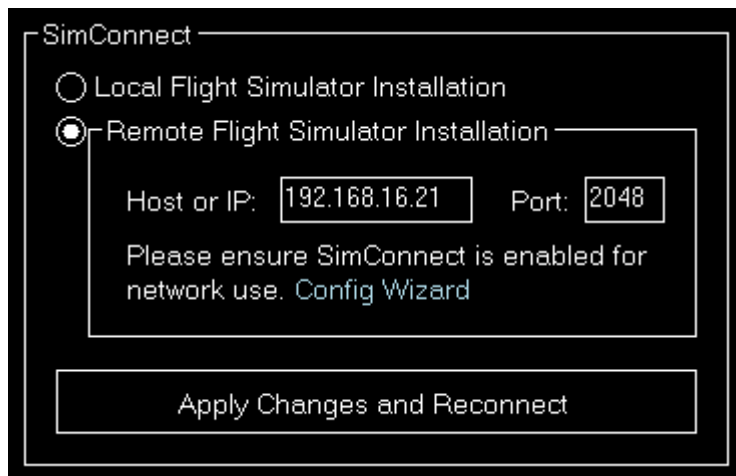

You can choose here if FS-FlightControl should connect to a local or remote flight simulator installation.

Remote Flight Simulator Installation



If you want FS-FlightControl to access a flight simulator installation that is not located on the same computer as FS-FlightControl itself, these SimConnect Network Access parameters need to be defined.

 **Note:** To make this configuration as easy as possible you can use the **SimConnect Network Wizard**.

Simulator Settings for X-Plane

The screenshot shows a 'Simulator Settings' window with two main panels. The 'Main Settings' panel on the left contains 'Simulator Type' set to 'X-Plane', a text field for 'Simulator Name' containing 'X-Plane', and two buttons: 'Activate Simulator' and 'Delete Simulator'. Below this is a 'UDP Connection' section with radio buttons for 'Automatic Detection' and 'Manual Configuration' (which is selected). Under 'Manual Configuration' are text fields for 'IP Address' (192.168.16.64) and 'Port' (49000), followed by an 'Apply Changes and Reconnect' button. The 'Database Build' panel on the right shows the 'Installation Directory of X-Plane' as 'C:\X-Plane 11\' with a 'Browse' button. It also states 'Database was built on 7/18/2017 4:43:41 PM.' and features a large 'Build Database' button with a sub-note: '(Open FS-FlightControl data directory in Explorer)'.

If a simulator of type X-Plane is selected these settings will be available.


Main

This screenshot shows a close-up of the 'Main Settings' section. It displays 'Simulator Type' as 'X-Plane', a text input for 'Simulator Name' with 'X-Plane' entered, and the 'Activate Simulator' and 'Delete Simulator' buttons.

Below the not changable simulator type you can define a custom name for this simulator.


If the selected simulator is currently not active, you can use the buttons `Activate Simulator` to activate it or `Delete Simulator` to delete it again.

Database Build

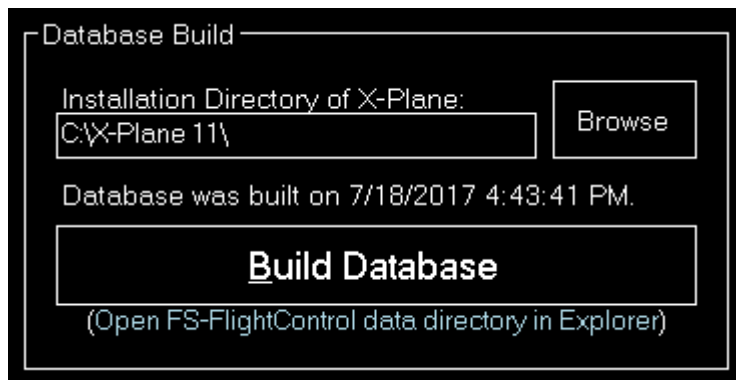

The database build is explained in the **Database Build** installation section.


UDP Connection

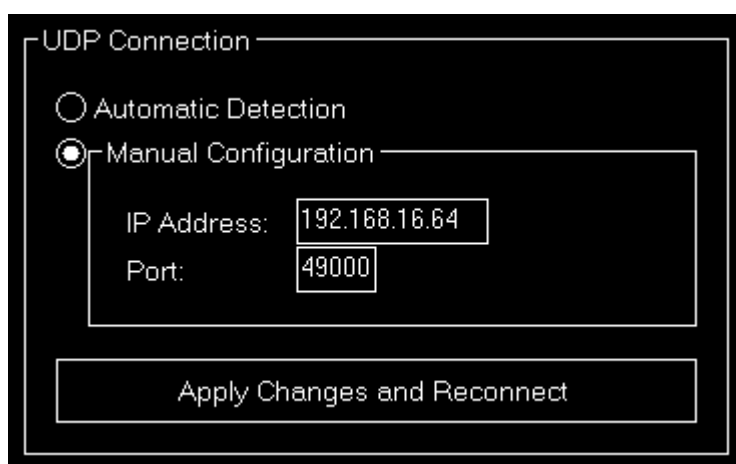

You can choose here if the connection parameters should be detected automatically or you want to set them manually.

In most cases all connection parameters can be automatically detected even if X-Plane does not run on the same computer as FS-FlightControl.

Manual Configuration

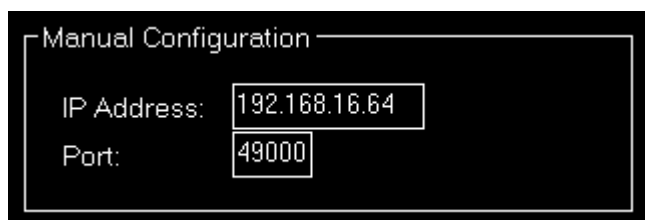


But if the automatic detection does not work for any reason, you can configure the connection manually here.

Position

These settings are related to the **Position** module.

General

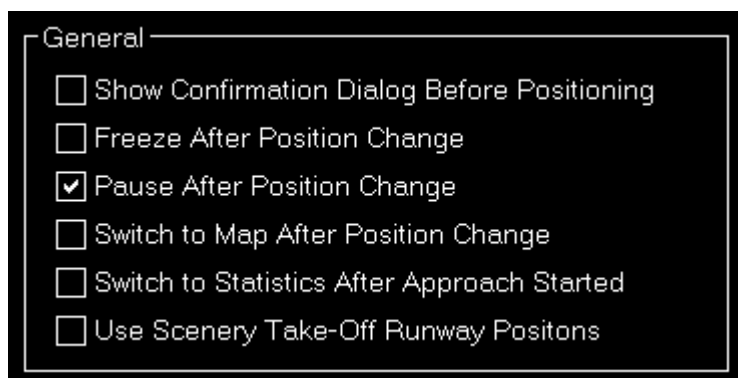

You can enable or disable some automatizations after an aircraft position is changed.


First choose if position freeze or pause should be enabled after aircraft move.

Additionally you can define if the program should automatically switch to the **Map** module after a position change respectively to the **Statistics** module when an approach is started.

Finally you can choose if the scenery should be reloaded after a position is changed.

 **Note:** The forced scenery reload is enabled by default as disabling it may lead to unexpected results (like aircraft crash) especially if the new location is far away from the old one.

Flight Situation Presets

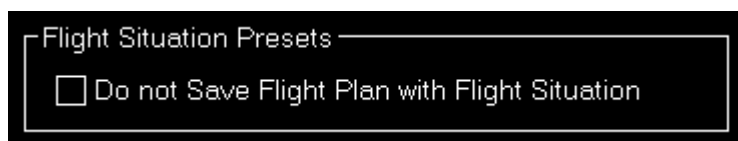

You can choose here to not automatically save the flight plan together with a flight situation preset.

Map

These settings are related to the **Map** module.

Data Update Rate



You can define here how often the map view gets updated.

By default that is set to once per second.

Custom Update Rate




If you uncheck the Default Update Rate checkbox you can define the update rate yourself.

The slider then ranges from very low (every 60 visual frames on flight simulator) to very high (every single visual frame).

 Note: Please keep in mind that setting the data update rate to very high may lead to performance issues.

Grid and Minimum Sector Altitude (MSA) Display

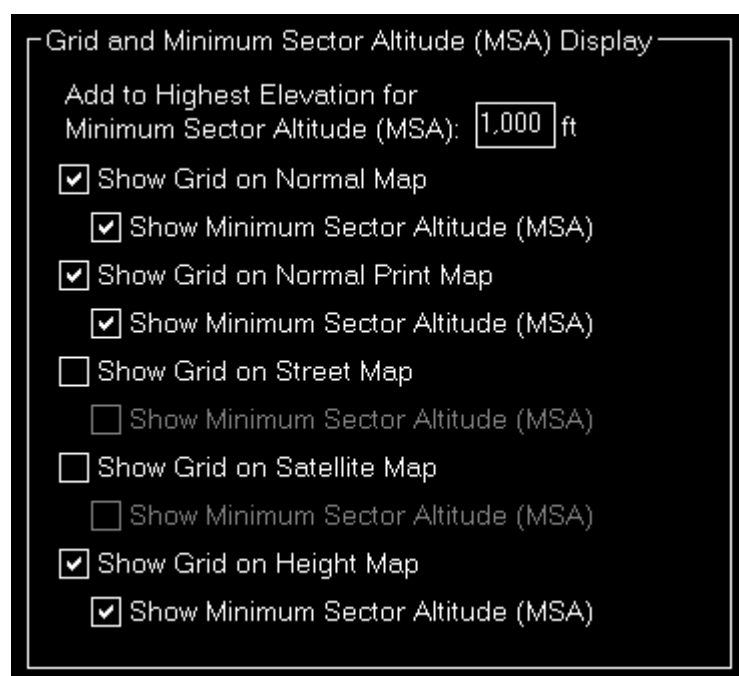

First you can define here the altitude that is added to the highest elevation in each sector when calculating the Minimum Sector Altitude (MSA).

Additionally you can choose when the map grid including the Minimum Sector Altitude (MSA) is displayed in the first place.

Print Options




For map printing you can define here which printer should be used.

Additionally, if you own a commercial license, you can also change the footer text or remove it completely.

Within the footer text you may use the placeholders {date} and {time} to insert the current date and time.

Display Options

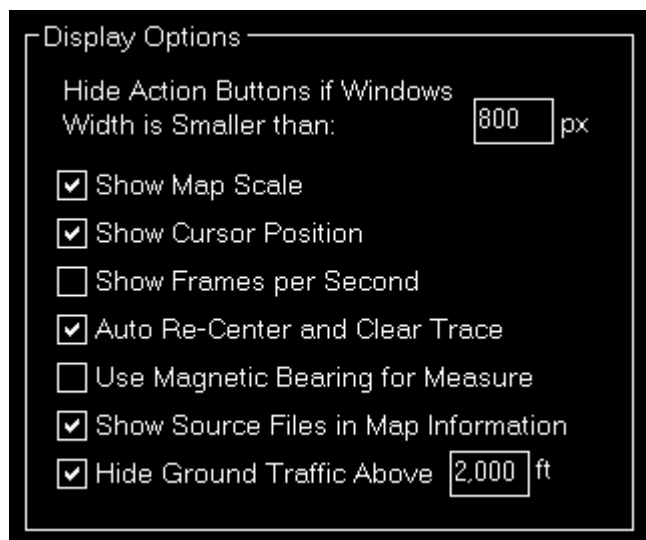

You can define several display options here.

First you can set a window width below that the left and right action buttons are hidden.

 **Note:** This is only used for detached map windows.

Below that you can choose if you want the map scale, cursor position and frames per second displayed on the bottom of the map view or not.

Online Networks



If you enter here your user ID of the available online networks your own user aircraft will not appear additionally as AI aircraft.

Flight Plan

These settings are related to the **Flight Plan** module.

Flight Plan Folder



Here you can change the path to the saved flight plans of flight simulator.

Conditions

These settings are related to the **Conditions** module.


Weather Engine



Let FS-FlightControl know here which software is used as weather engine to ensure all features of the **Conditions** module work properly.

 Note: For Active Sky additional parameters need to be entered in the **Third Party** settings first.

Real-Time Weather Source

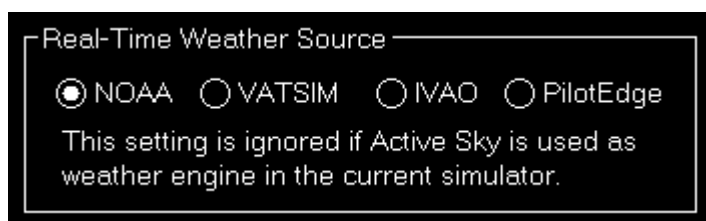

Define here the real-time weather source that should be used for receiving weather METAR data if this is not provided by flight simulator directly.

In this connection you can choose from NOAA (National Oceanic and Atmospheric Administration), VATSIM (Virtual Air Traffic Simulation) and IVAO (International Virtual Aviation Organization).

ILS Visibility

ILS Visibility

	Decision Height	Runway Visibility
CAT I	200 ft	550 m
CAT I LTS	200 ft	400 m
CAT II	100 ft	300 m
CAT IIIa	50 ft	180 m
CAT IIIb	30 ft	46 m
CAT IIIc	0 ft	10 m

In this section the ILS Visibility presets can be customized.

You can define the decision height as well as the runway visibility for each ILS category.

Failures

These settings are related to the *Failures* module.

Color Settings

Color Settings

No Failure

Failure Armed

Failed

Reset to Defaults

Use this area to change the colors.

You can also use the button `Reset to Defaults` to revert all your color changes.

Other

Other

☐ Automatically Re-Enable Random Failures After Program Restart (if enabled before)

Choose here if random failures should be automatically re-enabled on program start if they were enabled before.

Statistics

These settings are related to the **Statistics** module.

Color Settings

In this area you can customize all colors used to draw the statistics graphs.

Display Type: ☒ Normal ☐ Print

All colors can be defined per display type.

Therefore please first select if you want to change the colors for the normal in program display or for printout.

Revert to Defaults

Revert to Defaults

You can easily revert all colors to their defaults by using the Revert to Defaults button.

Colors for Display Type

Colors for Display Type: **Normal**

General:

Background

Grid

Line Border

General Charts:

First Data Line

Second Data Line

Localizer Chart:

Line Localizer

Line Localizer Deviation

Glideslope Chart:

Line Glideslope

Line Glideslope Deviation

Area Glideslope Ground

Here all currently defined colors are displayed for the selected display type.

Click on any of the button to select a different color.

Print Options



For statistics printing you can define here which printer should be used.

Additionally, if you own a commercial license, you can also change the footer text or remove it completely.

Within the footer text you may use the placeholders {date} and {time} to insert the current date and time.

Network

These settings are related to the **Network** module.


FS-FlightControl Client

The screenshot shows the 'FS-FlightControl Client' configuration window. It has a dark background with white text and controls. At the top, the title 'FS-FlightControl Client' is displayed. Below it, the 'Network Client Port' is set to '2047' in a text box. There are two radio buttons: 'Use Default Start Waiting Screen' (selected) and 'Customize Start Waiting Screen'. The 'Customize Start Waiting Screen' option is expanded, showing a 'Background Image' section with a 'Choose Image' button. Below this, there are 'Progress Colors' and 'Other' sections. 'Progress Colors' has three text boxes labeled 'Background', 'Current', and 'Text'. 'Other' has a text box labeled 'Text'. Below these are three text boxes for 'Connecting Text:', 'Loading Text:', and 'Waiting Text:'. At the bottom of the window is a large button labeled 'Build Client Executable'.

First you can change the network client port here that defaults to 2047, but can be changed to any other port number if needed.

 **Note:** If you change the port you need to re-build the network client executable.

Customize Start Waiting Screen

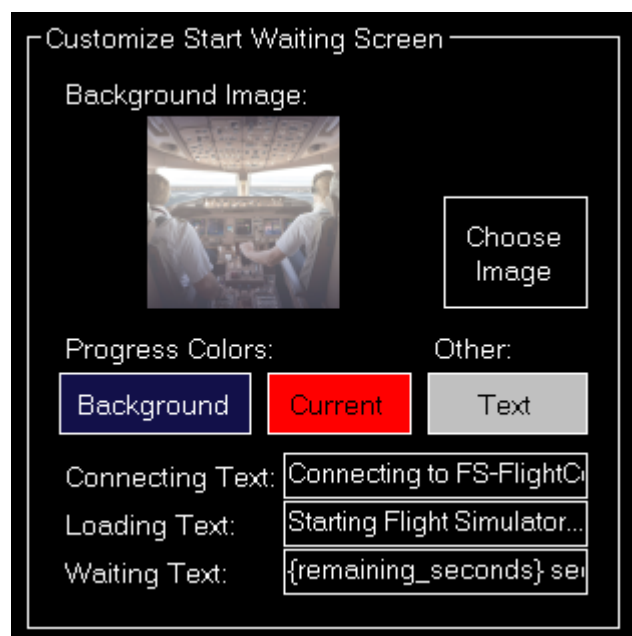


If you own a commercial license you can completely customize the start waiting screen that is shown on the network client computers.

You can select a background image as well as customize the colors and the shown texts.

In the Remaining Text input field you can use the placeholder `{remaining_seconds}` to insert the remaining seconds.

Program Close Options

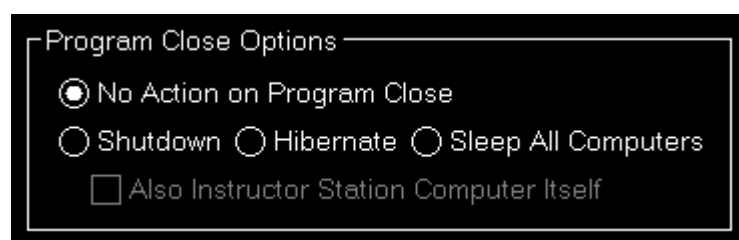

You can define here if a shutdown, hibernate or sleep action should be sent to all connected network computers when the FS-FlightControl software is closed.

Additionally you can decide if the same action should be executed on the computer running the instructor station itself.

Status Page for Web Display

Status Page for Web Display

Status Page Method:

☒ Output Directly as Web Server

Port:

☐ Save as HTML File

Update Interval: sec.

File Path:

☐ Upload to FTP Server

Update Interval: sec.

Server Host:

Port: ☐ Passive

User Name:

Password:

Remote File:

In this area you can define the method that should be used for the status page output.

Output Directly as Web Server

Output Directly as Web Server

Port:

If this method is selected FS-FlightControl will listen on the defined port for HTTP web requests and will reply with the status page accordingly.

Save as HTML File


Save as HTML File

Update Interval: sec.

File Path:

This method will save the status page as HTML file to a certain directory location in the defined time interval.

Upload to FTP Server

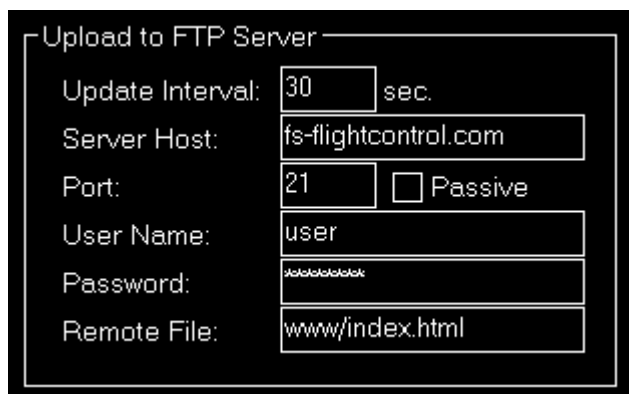

The screenshot shows a configuration window titled "Upload to FTP Server". It contains several input fields and a checkbox:

- Update Interval: 30 sec.
- Server Host: fs-flightcontrol.com
- Port: 21 ☐ Passive
- User Name: user
- Password: [masked]
- Remote File: www/index.html


You can also enable this method to automatically upload the status page to a FTP server.

Then you need to define again the update interval as well as all parameters that are needed for FTP server access.

Mobile Devices

This section is related to the mobile devices support.

Android and iOS Client

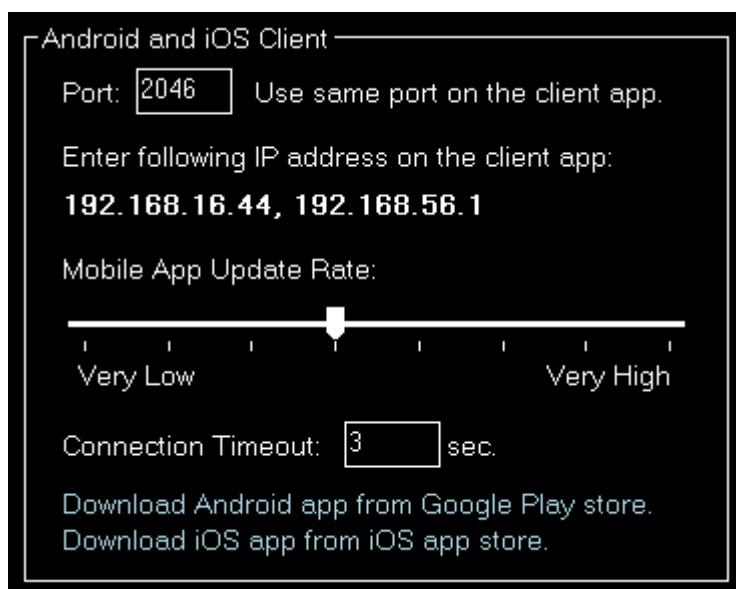

The screenshot shows a configuration window titled "Android and iOS Client". It contains the following settings:

- Port: 2046 Use same port on the client app.
- Enter following IP address on the client app:
192.168.16.44, 192.168.56.1
- Mobile App Update Rate:
A slider bar ranging from "Very Low" to "Very High", with the current value set to the middle.
- Connection Timeout: 3 sec.
- Download Android app from Google Play store.
- Download iOS app from iOS app store.

There is an Android client app that makes it possible to use FS-FlightControl also with your Android Tablet device.

You can define the port here that should be used for the connection. It defaults to 2046.

In the following you can see the IP address that you need to enter in the Android app once for connection.

 **Note:** It rars cases it is possible that there is more than one IP address displayed here. In this case you just need to try which one works.

If you should see a Windows Firewall message popping up - normally on program start - asking you to give FS-FlightControl access please confirm that. Only with this approval you will be able to connect with your mobile device.

You can directly download the Android app from the **Google Play store** as well as the iOS-App from the **iOS App Store**.

Third Party

Here you can define necessary parameters to connect to third party products supported by FS-FlightControl.

ProSim



The host or IP as well as the port that should be used to connect to ProSim can be entered here. The ProSim connection then can be used in the **Flight Plan** and **Failures** modules.

AST



The host or IP as well as the port that should be used to connect to AST (Aircraft Simulation Technology) can be entered here. The AST connection then can be used in the **Failures** module.

Project Magenta



The path to the NetDir of Project Magenta can be entered here. The Project Magenta connection then can be used in the **Flight Plan** module; the **Failures** module uses FSUIPC to connect to Project Magenta.

Flight Sim Labs



The path to the FSLabs directory of Flight Sim Labs below the flight simulator directory can be entered here. The direct Flight Sim Labs connection then can be used in the **Flight Plan** module.

Brunner Elektronik



The host or IP as well as the port that should be used to connect to the CLS2Sim software by Brunner Elektronik can be entered here. The Brunner Elektronik connection then can be used in the **Motion** module.

Active Sky



The host or IP as well as the port that should be used to connect to Active Sky 16 (SP1 required) can be entered here. The Active Sky connection then can be used in the **Conditions** module.

PFPX



You can enter the path to the PFPX documents directory here. The PFPX connection then can be used in the **Flight Plan** module.


Aerosoft Airbus



Now you can enter the path to the Aerosoft Airbus documents directory (also the older Extended Version is supported) here. The Aerosoft Airbus connection then can be used in the **Flight Plan**


module.

Wilco Airbus

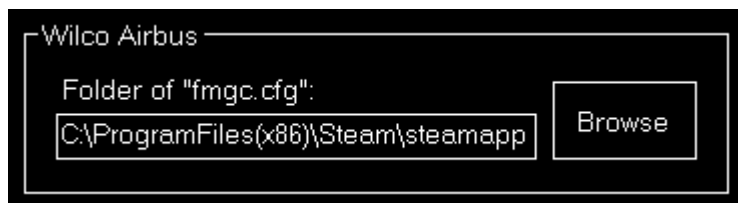

You can enter the path to the Wilco/FeelThere Airbus directory here. The Wilco Airbus connection then can be used in the **Flight Plan** module.


Mindstar

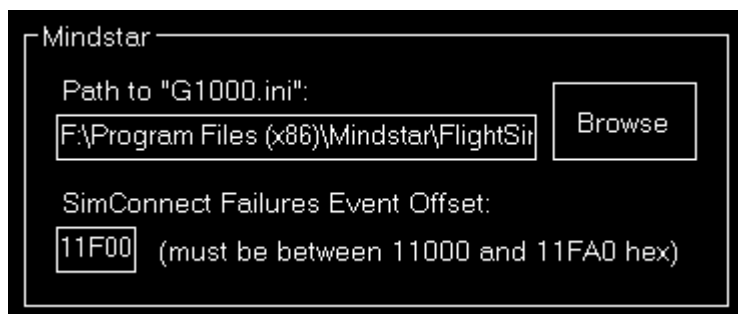

You can enter the path to the Mindstar G1000.ini file here. The Mindstar connection then can be used in the **Failures** module.

Additionally the offset for the SimConnect event IDs need to be specified as hex value. Starting from this ID the SimConnect events will be assigned to the Mindstar G1000 failures.

Flight1

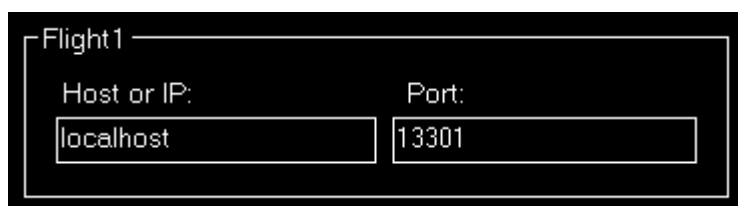

The host or IP as well as the port that should be used to connect to Flight1 VISPRO flight simulator plug-in can be entered here. The Flight1 connection then can be used in the **Failures** module.

 Note: To be able to trigger the Flight1 G1000 failures from FS-FlightControl not only the Flight1 G1000 plug-in needs to be installed in flight simulator, but also the Flight1 VISPRO plug-in.

General



Additional you can define the time interval for third party synchronization here.

Other Settings

In this section all other settings are located that do not fit anywhere else.

Units



Here all units for input as well as output used across the whole program can be defined.

Altitude Unit



Choose if feet (ft) or meters (m) should be used for altitude values.

Temperature Unit



Choose if Fahrenheit (°F) or Celcius (°C) should be used for temperature values.

Atmospheric Pressure



Choose if Hektopascals (hPa) or Inches of Mercury (inHg) should be used for atmospheric pressure values.

Short Distance Unit



Choose if feet (ft) or meters (m) should be used for short distance values.

Far Distance Unit



Choose if nautical miles (NM) or kilometers (km) should be used for far distance values.

Weight Unit



Choose if kilograms (kg) or pounds (lbs) should be used for weight values.

Speed Unit



Choose if knots (kt), miles per hour (mph) or kilometers per hour (km/h) should be used for speed values.

Liquid/Fuel Unit



Choose if kilograms (kg), pounds (lbs) or US gallons (gal.) should be used for liquid and fuel values.

Visibility Unit



Choose if feet (ft), meters (m), kilometers (km) or statute miles (M) should be used for visibility values.


Color Settings



Use this area to change colors used all over the software.

You can also use the button **Reset to Defaults** to revert all your color changes.

Input and Help

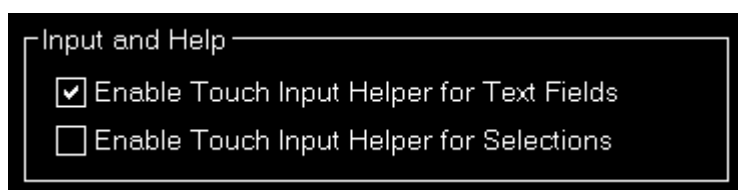


Here you can define if a touch input helper should be used for text and selection input fields.

 **Note:** While the Android or iOS app is connected both touch input helpers are activated automatically.

Additionally you can choose if the small help icons should be displayed in the top right corner of all sections.

Furthermore you can make the FS-FlightControl window to stay always on top of all other applications.

Program Startup Options

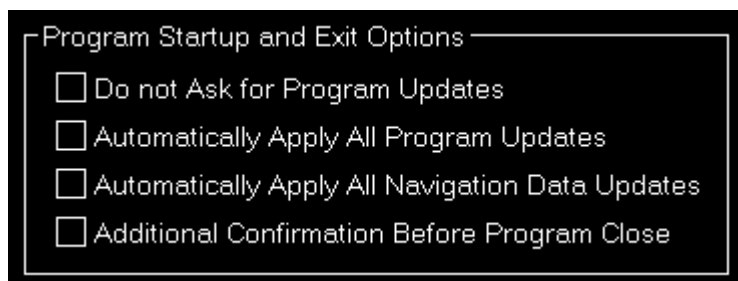

To allow a program start without user interaction you can define here that program updates as well as navigation data updates should always be applied without confirmation by the user.

Alternatively you can also disable the question regarding an update completely.

FS-FlightControl Manual:

<https://www.fs-flightcontrol.com/en/manual/>

PDF Generated on:

2025-09-18 09:21

