



FS
FLIGHT
CONTROL
www.fs-flightcontrol.com

FS-FlightControl

Manual

Instructor Operator Station

for Microsoft Flight Simulator, Prepar3D and X-Plane



FS-FlightControl · AB-Tools GmbH

E-mail: info@fs-flightcontrol.com · Internet: www.fs-flightcontrol.com

Marsstraße 78, 80335 München, Germany · Phone: +49 89 38898588 · Fax: +49 89 38898589

Bank Account: Grenke Bank AG · IBAN: DE 49 20130400 0060270139 · BIC: GREBDEH1XXX

Register: Amtsgericht München, HRB 202859 · Finance Office: München für Körperschaften · VAT ID DE273587389

Table of Contents

SETTINGS	1
<i>Simulator Related Settings</i>	1
Simulator	1
Select Simulator Type	1
Simulator Settings for FS2020/Prepar3D/FSX/FSW	2
Simulator Settings for X-Plane	5
Position	7
General	7
Conditions	7
Weather Engine	7
Aircraft	8
Change Aircraft	8
Motion	8
Brunner Elektronik	8
Third Party	9
JeeHell	9
AST	10
Project Magenta	10
Flight Sim Labs	10
Active Sky	10
Aerosoft Airbus	11
Wilco Airbus	11
Mindstar	11
Flight1	11
<i>Aircraft Related Settings</i>	12
Aircraft Profile	12
Profile Settings	12
Position	13
Final Position	13
Vectors Position	13
Base Position	13
Downwind Position	14
Airworks	14
Options on Position Change	14
Airport/Runway Restriction	15
Map Colors	15
Colors and Text Settings	15
Map Other	20
Auto Zoom	20
Aircraft Display	20
Reposition	21
Compass Rose	21
Other	22
Pushback	22
Speed Options	22
Failures	22
Hide Failures	22
Aircraft	23

Aircraft Warnings	23
Aircraft Gauge Options	24
Custom Buttons	25
Other	27
Statistics	27
Google Earth Export	27
Third Party	27
Use Third Party Aircraft Options	27
Other Settings	28
Position	28
General	28
Flight Situation Presets	29
Map	29
Refresh Rate	29
Grid and Minimum Sector Altitude (MSA) Display	30
Aircraft Information Text	30
Display Options	31
Online Networks	32
Points of Interest (POIs)	32
Holdings	33
Flight Plan	33
Time Remaining	33
PFPX	34
SimBrief	34
Conditions	34
ILS Visibility	34
Sound	35
Real-Time Weather Source	35
Other	35
View/Slew	36
Custom Camera Positions	36
Other	37
Failures	38
Color Settings	38
Other	38
Statistics	38
Color Settings	38
Recording	39
Approach Options	40
Network	40
FS-FlightControl Client	40
Program Close Options	42
Status Page for Web Display	42
Mobile Devices	43
Android and iOS Client	44
Units	44
Altitude Unit	44
Temperature Unit	45
Atmospheric Pressure Unit	45
Other Pressure Unit	45
Weight Unit	45

Short Distance Unit	46
Far Distance Unit	46
Weight Unit	46
Speed Unit	46
Liquid/Fuel Unit	46
Visibility Unit	47
Thrust Unit	47
Torque Unit	47
GEO Position	47
Color	48
Color Settings	48
Access Control	48
Simulator Access Control Settings	49
User Access Control	51
Other	54
Input and Help	54
Display Options	54
Program Startup and Exit Options	54
Online Network Status URLs	55
Main Buttons	55
Unpause Delay	55
Settings Password Protection	56
Print Options	56
Reset Window Location/Size	57
Send GPS Data	57
Other	58

SETTINGS

Customize this program to your needs with detailed, even aircraft-specific settings. Change map colors, SimConnect settings and many more options available.


But although a lot of very detailed customization options are available in these modules, FS-FlightControl is designed in a way that you do not have to touch anything here to just use the program.

It is perfectly usable with the default settings and only if you need something special then this is the right place to look at.

Simulator Related Settings


All settings in this area will be saved together with the corresponding simulator.

Simulator

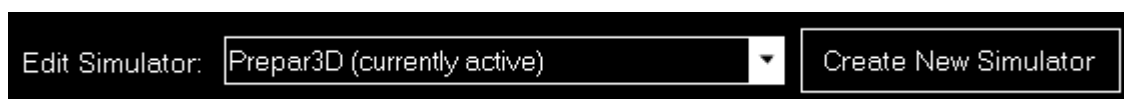

At the very first program start, one simulator is automatically created, but you can add more simulators and then switch between them at any time.


Select Simulator Type

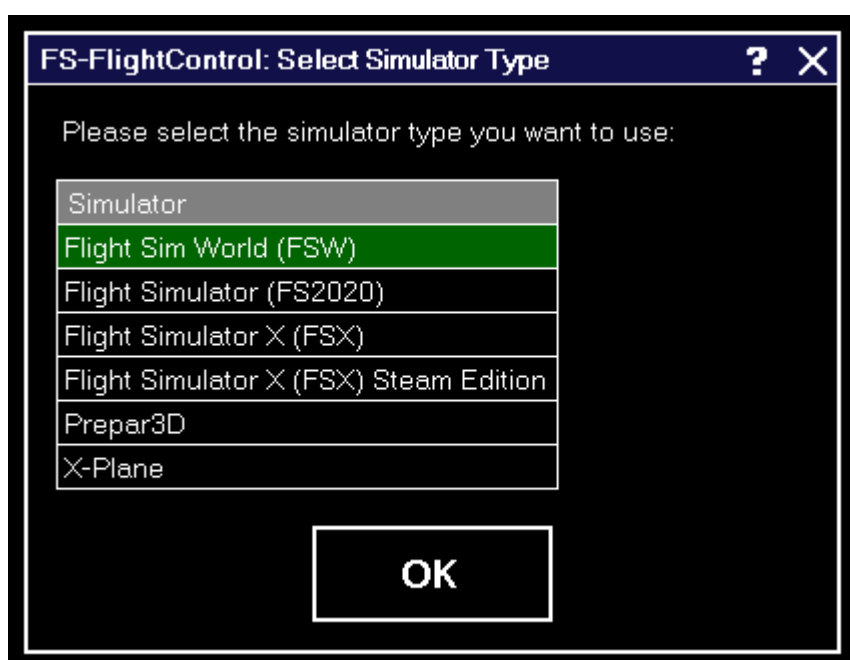


After you have clicked on the button Create New Simulator, this dialog will appear asking you


simulator is installed locally.

If the selected simulator is currently not active, you can use the buttons **Activate Simulator** to activate it or **Delete Simulator** to delete it again.

 **Note:** You can change the active simulator also by clicking on the connection status in the **Title Bar**.

 **Note:** The documents folder is not required for Microsoft Flight Simulator (FS2020) and thus the corresponding field deactivated.

Database Build

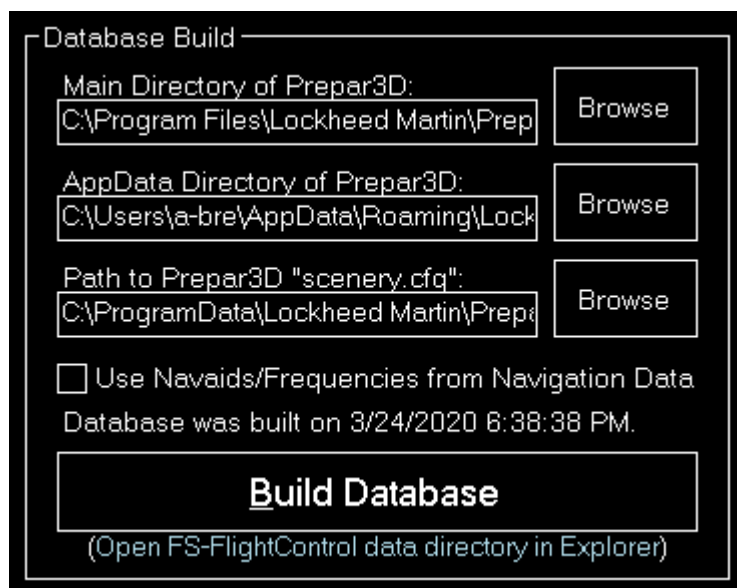

The screenshot shows a 'Database Build' dialog box with a title bar. It contains three rows of text input fields, each followed by a 'Browse' button. The first row is for the 'Main Directory of Prepar3D' with the path 'C:\Program Files\Lockheed Martin\Prep'. The second row is for the 'AppData Directory of Prepar3D' with the path 'C:\Users\j-a-bre\AppData\Roaming\Lock'. The third row is for the 'Path to Prepar3D "scenery.cfg"' with the path 'C:\ProgramData\Lockheed Martin\Prep'. Below these fields is a checkbox labeled 'Use Nav aids/Frequencies from Navigation Data' which is currently unchecked. Under the checkbox, it says 'Database was built on 3/24/2020 6:38:38 PM.' At the bottom of the dialog is a large 'Build Database' button. Below the button, in smaller text, it says '(Open FS-FlightControl data directory in Explorer)'.

Database Build

Main Directory of Prepar3D:
C:\Program Files\Lockheed Martin\Prep Browse

AppData Directory of Prepar3D:
C:\Users\j-a-bre\AppData\Roaming\Lock Browse

Path to Prepar3D "scenery.cfg":
C:\ProgramData\Lockheed Martin\Prep Browse

☐ Use Nav aids/Frequencies from Navigation Data


Database was built on 3/24/2020 6:38:38 PM.

Build Database

(Open FS-FlightControl data directory in Explorer)

The database build is explained in the **Database Build** installation section.

Navigation Data Update

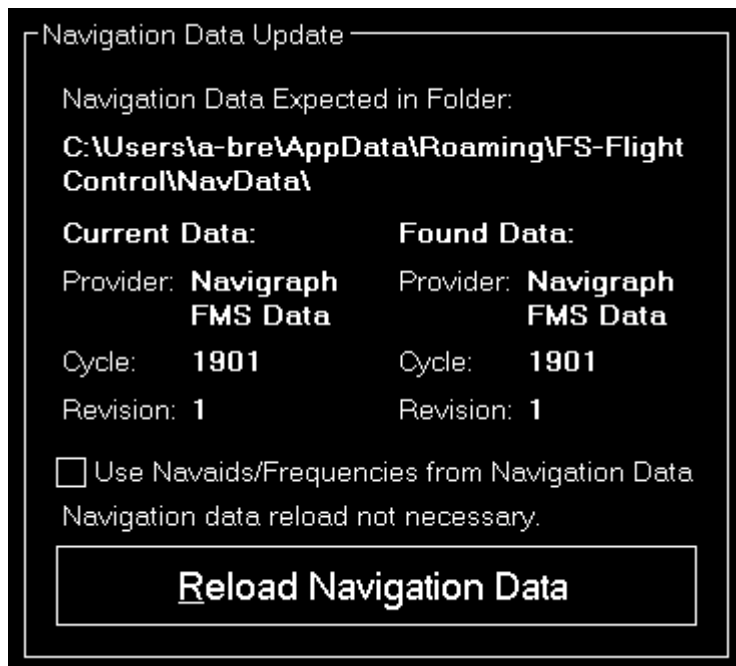

Navigation Data Update

Navigation Data Expected in Folder:
C:\Users\A-bre\AppData\Roaming\FS-Flight Control\NavData


Current Data:	Found Data:
Provider: Navigraph FMS Data	Provider: Navigraph FMS Data
Cycle: 1901	Cycle: 1901
Revision: 1	Revision: 1

☐ Use Nav aids/Frequencies from Navigation Data.
Navigation data reload not necessary.

Reload Navigation Data

This area is explained in the **Navigation Data Update** dialog section.

SimConnect

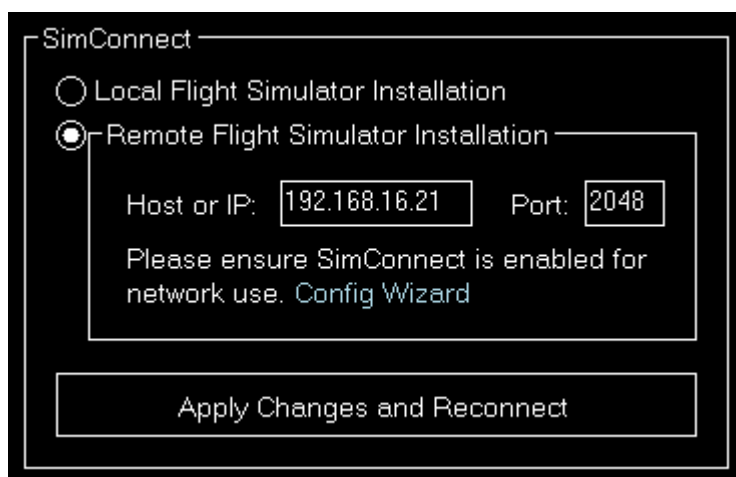

SimConnect

☐ Local Flight Simulator Installation

☒ Remote Flight Simulator Installation

Host or IP: Port:

Please ensure SimConnect is enabled for network use. [Config Wizard](#)

Apply Changes and Reconnect

You can choose here if FS-FlightControl should connect to a local or remote flight simulator installation.

Remote Flight Simulator Installation




Remote Flight Simulator Installation

Host or IP: Port:


Please ensure SimConnect is enabled for network use. [Config Wizard](#)

If you want FS-FlightControl to access a flight simulator installation that is not located on the same

computer as FS-FlightControl itself, these SimConnect Network Access parameters need to be defined.

 **Note:** To make this configuration as easy as possible you can use the **SimConnect Network Wizard**.

Simulator Settings for X-Plane

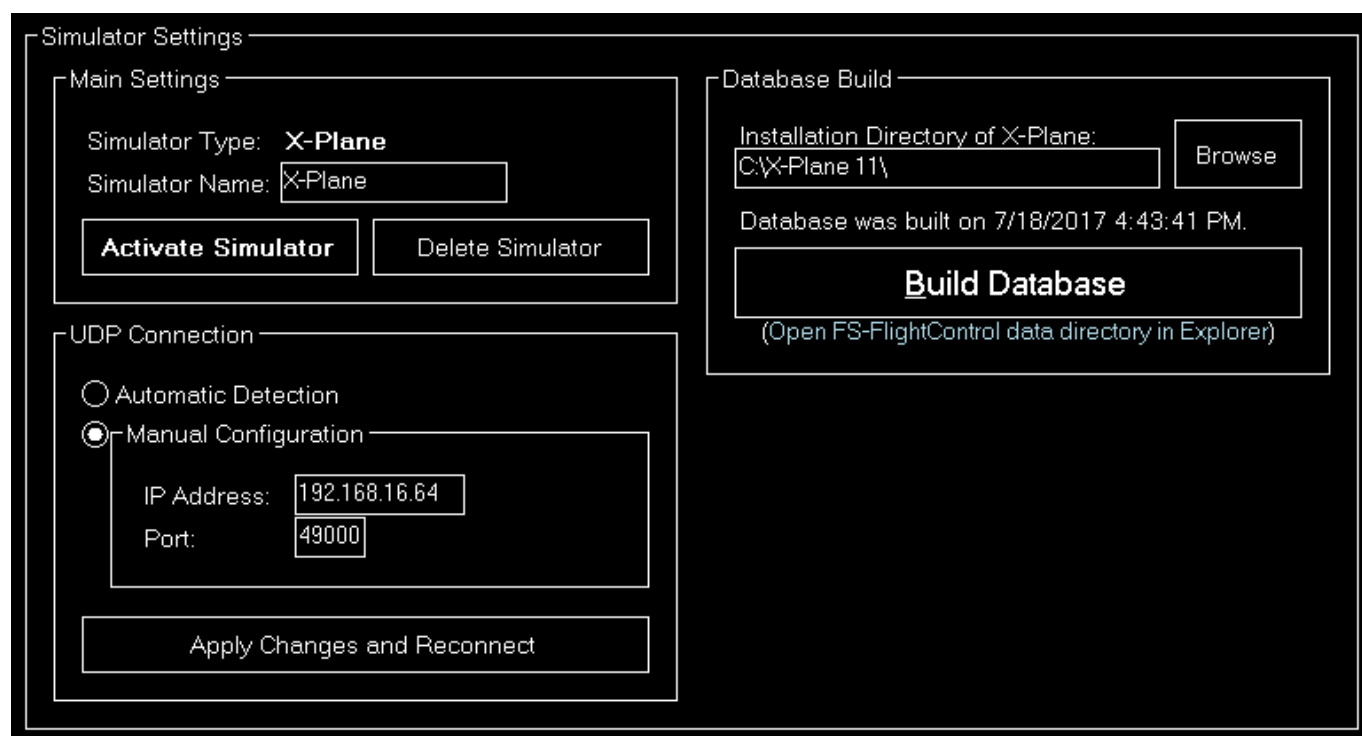

Simulator Settings

Main Settings

Simulator Type: **X-Plane**

Simulator Name:

Activate Simulator **Delete Simulator**

UDP Connection

☐ Automatic Detection

☒ Manual Configuration

IP Address:

Port:

Apply Changes and Reconnect

Database Build

Installation Directory of X-Plane: **Browse**

Database was built on 7/18/2017 4:43:41 PM.

Build Database

(Open FS-FlightControl data directory in Explorer)

If a simulator of type X-Plane is selected these settings will be available.

Main Settings



Main Settings

Simulator Type: **X-Plane**


Simulator Name:

Activate Simulator **Delete Simulator**

Below the not changable simulator type you can define a custom name for this simulator.


If the selected simulator is currently not active, you can use the buttons **Activate Simulator** to activate it or **Delete Simulator** to delete it again.

Database Build

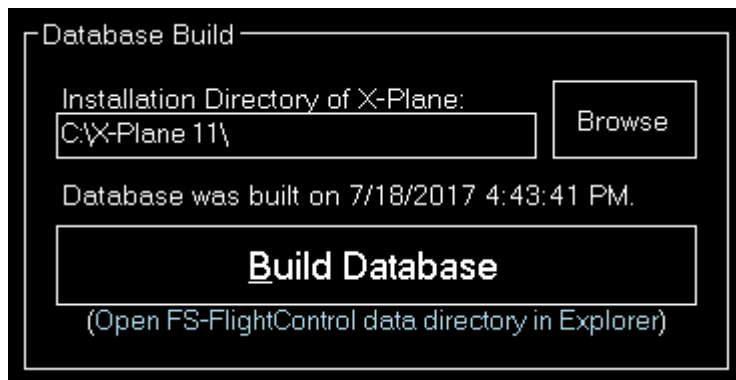

The database build is explained in the **Database Build** installation section.


UDP Connection

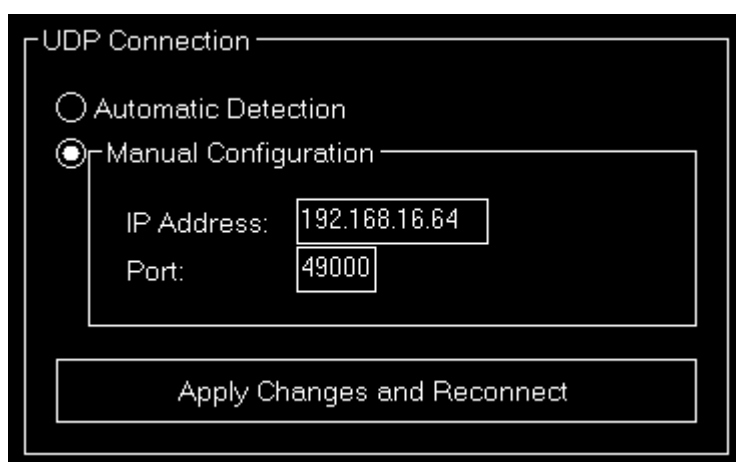

You can choose here if the connection parameters should be detected automatically or you want to set them manually.

In most cases all connection parameters can be automatically detected even if X-Plane does not run on the same computer as FS-FlightControl.

Manual Configuration

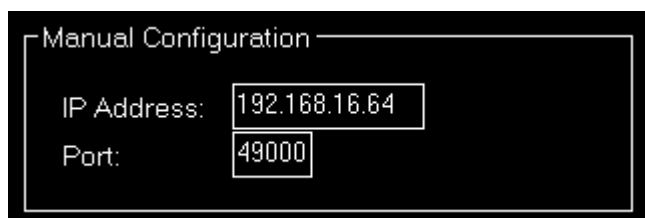


But if the automatic detection does not work for any reason, you can configure the connection manually here.


Position

These settings are related to the **Position** module.


General

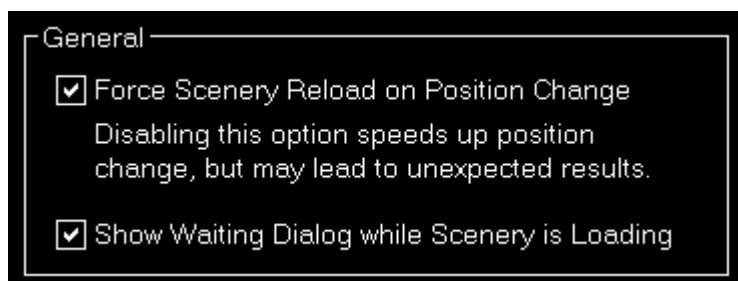

You can choose here if the scenery should be reloaded after a position is changed.

 **Note:** The forced scenery reload is enabled by default as disabling it may lead to unexpected results (like aircraft crash) especially if the new location is far away from the old one.

Furthermore, following waiting dialog while the simulator is loading its scenery can be enabled:

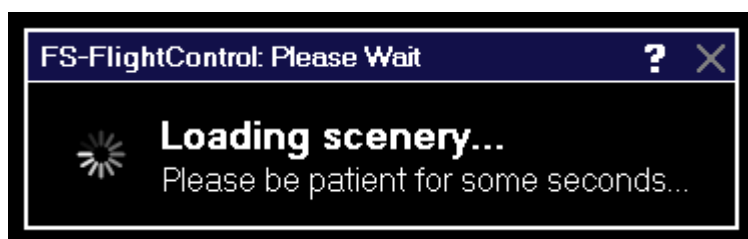


Conditions

These settings are related to the **Conditions** module.

Weather Engine



Let FS-FlightControl know here which software is used as weather engine to ensure all features of the **Conditions** module work properly.

 **Note:** For Active Sky additional parameters need to be entered in the **Third Party** settings first.

Aircraft

These settings are related to the **Aircraft** module.

Change Aircraft

☒ Enable Option to Change Aircraft

If you own a commercial license you can disable the complete change aircraft functionality.

Change Aircraft

Shown Aircraft:

B747-400

Beechcraft Baron B58

Cessna 172 SP Skyh

Cirrus personal jet

KC-10 air refueling ta

King Air C90

MAD DOG

MC130P Combat Sha

Mother Ship 1 is the si

Schleicher ASK 21 -

Select 'B 52 Drop' fro

Sikorsky S76C

⬆

=

⬆

Hidden Aircraft

Boeing 737-800

Cessna 172 SP Skyhawk

☐ Force Aircraft Selection on Simulator Connection

It is also possible to reduce the aircraft that are available to the user and show only relevant ones.

Motion

These settings are related to the **Motion** module.

Brunner Elektronik

Brunner Elektronik

Motion Platform

Host or IP:

localhost

Port:

50000

Control Loading

Host or IP:

localhost

Port:

15080

This section allows to configure the motion interface to Brunner Elektronik products.

Motion Platform

A screenshot of a software window titled "Motion Platform". It contains two input fields: "Host or IP:" which is empty, and "Port:" which contains the value "50000".

Host or IP:	Port:
	50000


Enter the host or IP as well as the UDP port that should be used to control the motion platform.


Control Loading

A screenshot of a software window titled "Control Loading". It contains two input fields: "Host or IP:" which is empty, and "Port:" which contains the value "15080".

Host or IP:	Port:
	15080

The host or IP as well as the TCP port that should be used to connect to the CLS2Sim software by Brunner Elektronik can be entered here. The Brunner Elektronik connection then can be used in the **Motion** module.

 Note: CLS2Sim version v3.20.0 or newer is required.

 Note: Please make sure that Remote control is enabled for TCP in the CLS2Sim settings and the TCP port is set accordingly (only TCP is needed for FS-FlightControl connection). UDP communication is not used by FS-FlightControl.

Third Party

Here you can define necessary parameters to connect to third party products supported by FS-FlightControl.

JeeHell

A screenshot of a software window titled "JeeHell". It contains a text input field labeled "Path to 'A320FMGS' Folder:" with the value "C:\A320FMGS\" entered, and a "Browse" button to its right.

Path to "A320FMGS" Folder:	Browse
C:\A320FMGS\	

The path to the A320FMGS directory of JeeHell can be entered here. The JeeHell connection then can be used in the **Flight Plan** module; the **Failures** and **Aircraft** modules use FSUIPC to connect to JeeHell.

AST



AST

Host or IP: localhost Port: 16105

The host or IP as well as the port that should be used to connect to AST (Aircraft Simulation Technology) can be entered here. The AST connection then can be used in the **Failures** module.

Project Magenta



Project Magenta

Path to "NetDir" Folder: D:\NetDir\ Browse

The path to the NetDir of Project Magenta can be entered here. The Project Magenta connection then can be used in the **Flight Plan** module; the **Failures** module uses FSUIPC to connect to Project Magenta.

Flight Sim Labs



Flight Sim Labs

Path to "FSLabs" Folder: C:\ProgramFiles(x86)\LockheedMartin\ Browse

The path to the FSLabs directory of Flight Sim Labs which is either below the flight simulator directory (for older installations) or below the Prepar3D add-ons directory within the Windows Documents folder (for newer installations) can be entered here. The direct Flight Sim Labs connection then can be used in the **Flight Plan** module.

Active Sky



Active Sky

Host or IP: localhost Port: 19285

The host or IP as well as the port that should be used to connect to Active Sky 16 (SP1 required) can be entered here. The Active Sky connection then can be used in the **Conditions** module.

Aerosoft Airbus



Aerosoft Airbus


Folder of "MCDUFPL[N]Data*.txt":

C:\Users\j-a-bre\Documents\Aerosoft\Air

Browse

Now you can enter the path to the Aerosoft Airbus documents directory (also the older Extended Version is supported) here. The Aerosoft Airbus connection then can be used in the **Flight Plan** module.

Wilco Airbus

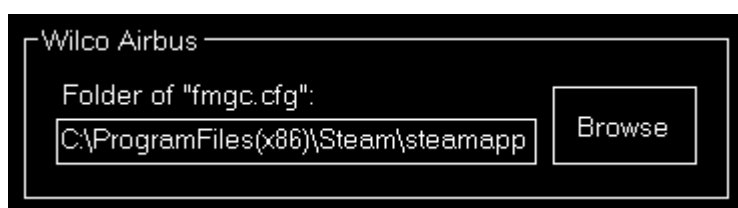

Wilco Airbus


Folder of "fmgc.cfg":

C:\ProgramFiles(x86)\Steam\steamapp

Browse

You can enter the path to the Wilco/FeelThere Airbus directory here. The Wilco Airbus connection then can be used in the **Flight Plan** module.

Mindstar

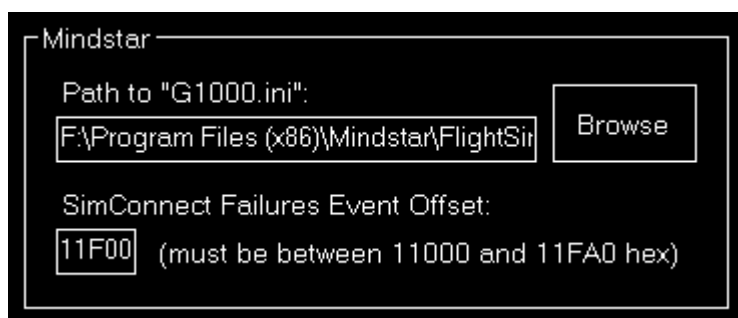

Mindstar

Path to "G1000.ini":

F:\Program Files (x86)\Mindstar\FlightSir

Browse


SimConnect Failures Event Offset:

11F00 (must be between 11000 and 11FA0 hex)

You can enter the path to the Mindstar G1000.ini file here. The Mindstar connection then can be used in the **Failures** module.

Additionally the offset for the SimConnect event IDs need to be specified as hex value. Starting from this ID the SimConnect events will be assigned to the Mindstar G1000 failures.

Flight1

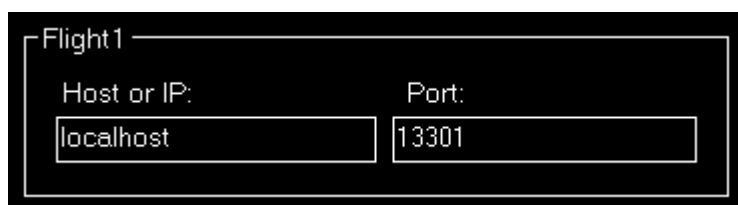

Flight1


Host or IP:

localhost

Port:

13301

The host or IP as well as the port that should be used to connect to Flight1 VISPRO flight simulator plug-in can be entered here. The Flight1 connection then can be used in the **Failures** module.

 **Note:** To be able to trigger the Flight1 G1000 failures from FS-FlightControl not only the Flight1 G1000 plug-in needs to be installed in flight simulator, but also the Flight1 VISPRO plug-in.

Aircraft Related Settings

All settings in this area will be saved together with the corresponding aircraft profile if aircraft related settings are enabled.

Aircraft Profile

☒ Enable Aircraft Related Settings (if disabled same profile for all aircraft is used)

Edit Profile:

Prop. Aircraft

Create New Profile

By default aircraft related settings are disabled as this is not needed for many users, especially also if you only use FS-FlightControl with one specific aircraft type.

But if you want to use FS-FlightControl together with very different aircraft types it makes sense to enable aircraft related settings here.

Profile Settings

Profile Settings

Profile Name:

Prop. Aircraft

Delete Profile

Assign Aircraft to this Profile:

AgustaWestland EH101

AgustaWestland EH101 1

AgustaWestland EH101 10

AgustaWestland EH101 11

AgustaWestland EH101 12

AgustaWestland EH101 2

AgustaWestland EH101 3

AgustaWestland EH101 4

AgustaWestland EH101 5

AgustaWestland EH101 6

AgustaWestland EH101 7

AgustaWestland EH101 8

AgustaWestland EH101 9

Airbus A321

Airbus A321 Paint2

Airbus A321 Paint4

Airbus A321 Paint5

Aircreation582SL

Aircreation582SL Blue

Aircreation582SL red

Aircreation582SL yellow, white and red

Bell 206B JetRanger

→

←

Copy All Settings from Profile:

Default (currently active)

Copy

Reset Profile to Default Settings

Currently Assigned Aircraft:

Beech Baron 58

Beech Baron 58 Paint1

Beech Baron 58 Paint2

Beech Baron 58 Paint3

Beech Baron 58 w G1000

Beech King Air 350

Beech King Air 350 Paint1

Beech King Air 350 Paint2

Beech King Air 350 Paint3

Cessna Grand Caravan

Cessna Grand Caravan Paint1

Cessna Grand Caravan Paint2

Cessna Grand Caravan Paint3

Cessna Skyhawk 172SP

Cessna Skyhawk 172SP G1000

Cessna Skyhawk 172SP Paint1

Cessna Skyhawk 172SP Paint2

Cessna Skyhawk 172SP Paint3

Cessna Skyhawk 172SP Paint4

Extra 300S

Extra 300S Paint1

Extra 300S Paint2

FS-FlightControl Manual: <https://www.fs-flightcontrol.com/en/manual/>

If aircraft related settings are enabled the profile settings section gets enabled as well.

You can edit or create new aircraft profiles here and change the flight simulator aircraft that are assigned to the current aircraft profile.


Whenever one of those aircraft gets loaded in the simulator FS-FlightControl will switch to this profile.

Additionally you can copy all settings from another profile or revert all settings to default.

Position

These settings are related to the **Position** module.

Final Position

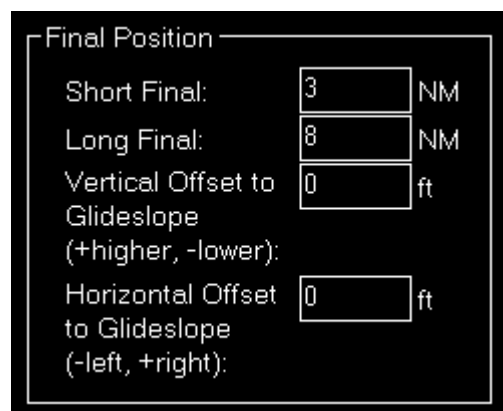


The screenshot shows a menu titled "Final Position" with the following settings:

Short Final:	<input type="text" value="3"/>	NM
Long Final:	<input type="text" value="8"/>	NM
Vertical Offset to Glideslope (+higher, -lower):	<input type="text" value="0"/>	ft
Horizontal Offset to Glideslope (-left, +right):	<input type="text" value="0"/>	ft

Here you can define the distance of the short and long final approach as well as a vertical and horizontal offset to the glideslope if you want.

Vectors Position

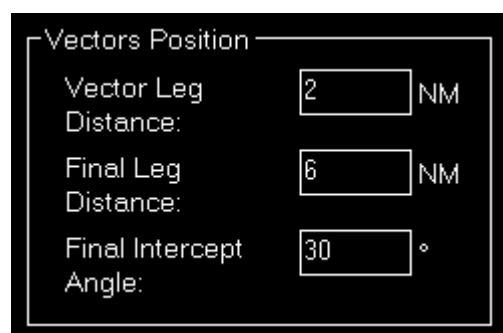

The screenshot shows a menu titled "Vectors Position" with the following settings:

Vector Leg Distance:	<input type="text" value="2"/>	NM
Final Leg Distance:	<input type="text" value="6"/>	NM
Final Intercept Angle:	<input type="text" value="30"/>	°

The distances for the vector positions can be changed here as well as the final intercept angle.

Base Position

Base Position

Base Leg Distance:	<input type="text" value="4"/>	NM
Final Leg Distance:	<input type="text" value="6"/>	NM

Define here the distances for the base positions.

Downwind Position

Downwind Position

Distance Back:	<input type="text" value="1"/>	NM
Lateral Distance to Runway:	<input type="text" value="4"/>	NM
Altitude Above Ground:	<input type="text" value="2,000"/>	ft

Here you can define the lateral distance to the runway for the downwind positions.

In contrast to the other positions where the altitude is calculated based on the runway glideslope automatically, the altitude for the downwind positions can be customized here.


Airworks

Airworks

Airworks 1	<input type="text" value="50"/>	FL
Airworks 2	<input type="text" value="100"/>	FL
Airworks 3	<input type="text" value="200"/>	FL
Airworks 4	<input type="text" value="300"/>	FL

You can define the flight levels of the four airworks buttons here.

Options on Position Change

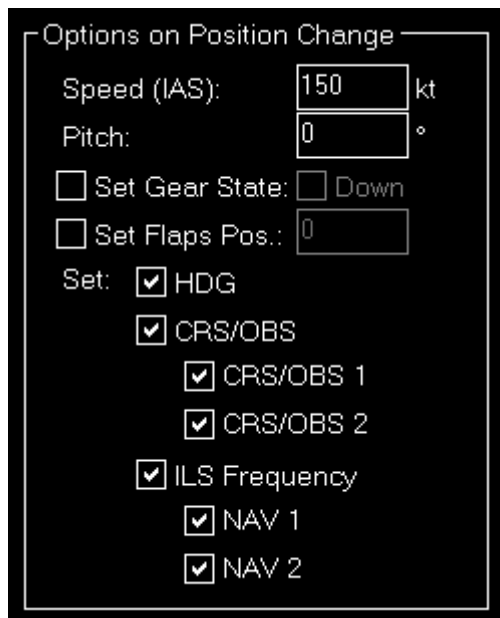

Options on Position Change

Speed (IAS): kt

Pitch: °

☐ Set Gear State: ☐ Down

☐ Set Flaps Pos.:

Set: ☒ HDG

☒ CRS/OBS

☒ CRS/OBS 1

☒ CRS/OBS 2

☒ ILS Frequency


☒ NAV 1

☒ NAV 2

Depending on the aircraft capabilities you can change the parameters that are used when the aircraft is positioned.

This includes whether the heading, course (CRS) respectively omni bearing selector (OBS) or ILS frequency (if the runway is ILS enabled) should be set automatically with the aircraft position change to a certain approach.

Airport/Runway Restriction

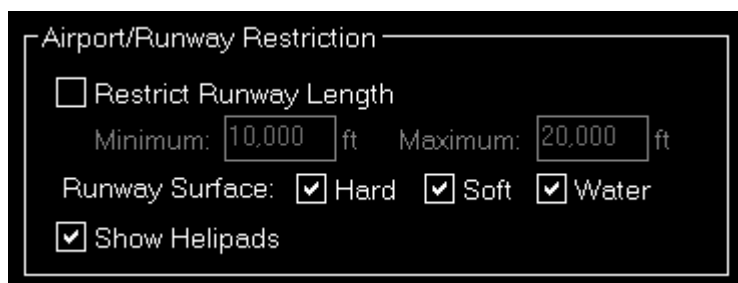

Airport/Runway Restriction


☐ Restrict Runway Length

Minimum: ft Maximum: ft

Runway Surface: ☒ Hard ☒ Soft ☒ Water

☒ Show Helipads

You have the option to hide certain airports and runways based on the runway length and surface here. You can also choose if helipads should be displayed.

 **Note:** This will be applied everywhere in the program and will completely remove those airports and runways. On the **Map** airports will be displayed as long as at least one of the runways meet the criteria here.

Map Colors

These settings are related to the **Map** module.

Colors and Text Settings

In this area you can highly customize the appearance of the map.

We decided to put this into the aircraft related settings. Although this seems not to be aircraft related at first sight, it enables you to emphasize certain map parts based on the currently loaded aircraft: For example when using a small aircraft you might want to highlight more the small gates and do not care a lot about ILS, but when using a big jet the large gates are much more interesting. Same goes for other parts on the map which might be more interesting for certain aircraft types than others.

Select map type: ☒ Normal ☐ Normal for Print ☐ Street Map ☐ Satellite Map ☐ Height Map

All colors and text sizes can be defined per map type. Therefore please first select the map type.

For a simple color selection the **Select Color** dialog is used.

Colors and Text Sizes for Map Type

Structure Color	Min. Zoom	Text Color	Min. Zoom	Font Size
User Aircraft		User Aircraft Info		<input type="text" value="7"/>
AI Aircraft		AI Aircraft Info		<input type="text" value="7"/>
VATSIM Aircraft		VATSIM Airc. Info		<input type="text" value="7"/>
VATSIM Airport		(Used to draw APP, TWR and GND cycles.)		
VATSIM FIR/UIR		VAT. FIR/UIR Info		<input type="text" value="10"/>
IVAO Aircraft		IVAO Aircraft Info		<input type="text" value="7"/>
IVAO Airport		(Used to draw APP, TWR and GND cycles.)		
IVAO FIR/UIR		IVA. FIR/UIR Info		<input type="text" value="10"/>
PilotEdge Aircraft		PilotEdge Aircraft		<input type="text" value="7"/>
PilotEdge Airport		(Used to draw APP, TWR and GND cycles.)		
PilotEdge FIR		PilotE. FIR Info		<input type="text" value="10"/>
Airport		Airport Name		<input type="text" value="10"/>
Runway		Runway Ident		<input type="text" value="8"/>
ILS		ILS Ident		<input type="text" value="8"/>
Axis		Marker Type		<input type="text" value="8"/>
Marker				<input type="text" value="8"/>
Taxi Path		Taxi Point Name		<input type="text" value="8"/>
Taxi Center Line				
Taxi Holding Point				
Tower				
VOR		VOR Name		<input type="text" value="8"/>
NDB		NDB Name		<input type="text" value="8"/>
Airspace		Airspace Name		<input type="text" value="8"/>
Airway		Airway Name		<input type="text" value="8"/>
Waypoint		Waypoint Ident		<input type="text" value="8"/>
Wayp. SID/STAR		Waypoint Ident		<input type="text" value="10"/>
Weather Station		Weath. St. Name		<input type="text" value="8"/>
User POI		User POI Name		<input type="text" value="10"/>
Compass Rose				
Weather Info		Weather Info		<input type="text" value="8"/>
Map Info		Map Info Text		<input type="text" value="8"/>
Holding		Holding Info		<input type="text" value="8"/>
Measure		Measure Info		<input type="text" value="8"/>
Trace Aircraft				
Flight Plan Path				
SID/STAR Path				
Country		Country		<input type="text" value="12"/>
Country Border				
Ocean				
Lake		Lake		<input type="text" value="8"/>
River		River		<input type="text" value="8"/>
Grid		MSA		<input type="text" value="14"/>

Here all currently defined colors and text sizes are displayed for the selected map type.

The **Structure Color** is always the color of the item itself, like the runway surface of the runway, whereas **Text Color** the color of the corresponding text is, like the runway idents of the runway.

The **Min. Zoom** next to the **Structure Color** defines the minimum map zoom level needed that this structure (like the runway surface) is shown. Accordingly, the second **Min. Zoom** next to the **Text Color** defines the minimum map zoom level needed that the corresponding text (like the runway idents) is shown.

Font Size, the last column, enables you to define the size of the displayed text.

Parking

Parking

Color Default

Color Gate

Color Ramp


Name Prefix for Type:	Font Size Gate/Ramp:
Fuel: <input type="text" value="F"/>	Default: <input type="text" value="8"/>
Cargo: <input type="text" value="C"/>	Small: <input type="text" value="7"/>
Military: <input type="text" value="M"/>	Medium: <input type="text" value="8"/>
	Large: <input type="text" value="10"/>

Min. Zoom:

This area lets you define colors and text sizes for the different parking types like gates and ramps depending on their sizes.

Additionally you can define text prefixes to be used for a certain type like fuel, cargo or military and the minimum zoom level when gates and ramps should be displayed.

Tooltip

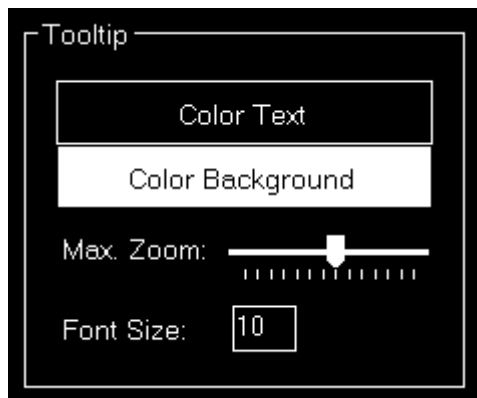


When hovering over certain map elements like an airport a tooltip is displayed showing the full name of the airport.

In this section you can define the appearance of this tooltip as well as up to which map zoom level the tooltip should be displayed.

Map Other

These settings are related to the **Map** module.

Auto Zoom

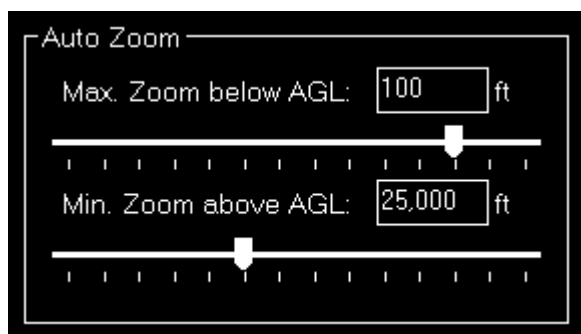


The **Map** module also features an auto zoom function which will zoom the map in and out according to the current aircraft altitude.

You can configure this feature here by first entering the maximum zoom level (fully zoomed in) that should be reached if the aircraft is below the entered altitude above ground.

Then, for the upper end, you define the minimum zoom level (fully zoomed out) that should be reached above the entered altitude.

Between these two altitudes the zoom will be equally divided automatically.

Aircraft Display

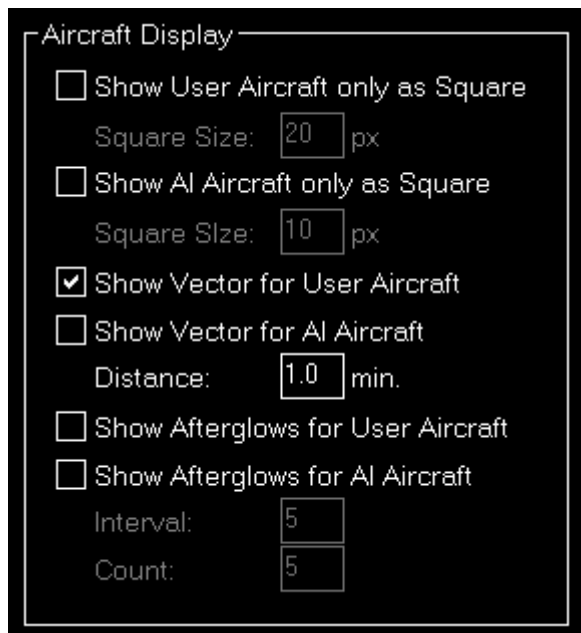

Aircraft Display

- ☐ Show User Aircraft only as Square
Square Size: px
- ☐ Show AI Aircraft only as Square
Square Size: px
- ☒ Show Vector for User Aircraft
- ☐ Show Vector for AI Aircraft
Distance: min.
- ☐ Show Afterglows for User Aircraft
- ☐ Show Afterglows for AI Aircraft
Interval:
Count:


Here you can choose from certain options related to the display of the aircraft on the map.

First you can define if the user and/or AI aircraft are only shown as squares instead of an aircraft image. In this case you can also enter a size for the squares.

Furthermore you can enable or disable a distance vector being displayed in front of each user and/or AI aircraft. In this case you can enter the length of the vector in minutes.

Additionally so called afterglows - dots behind the aircraft - can be enabled or disabled for user and/or AI aircraft. In this case you can enter an interval as well as the number of dots that should be displayed.

Reposition

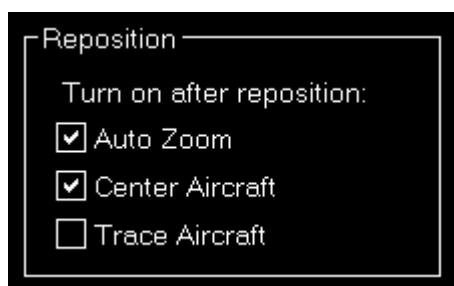


Reposition

Turn on after reposition:

- ☒ Auto Zoom
- ☒ Center Aircraft
- ☐ Trace Aircraft


In this section you can define if certain map features are automatically turned on after the map reposition function was used.

Compass Rose

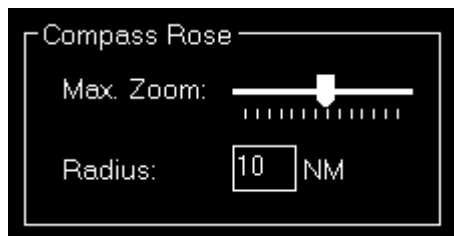

Use these settings to define the maximum zoom level up to the compass rose (when this function is enabled) should be displayed and how wide its radius should be.

Other

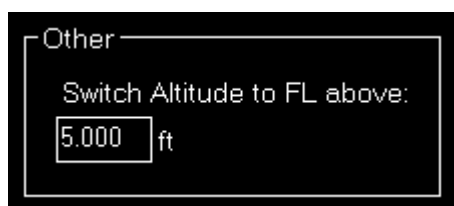


Here you can define at which altitude the display should switch from precise altitude display to flight level.

 Note: Above this altitude it will also switch from show MSL altitude to indicated altitude.

Pushback

These settings are related to the **Pushback** module.

Speed Options

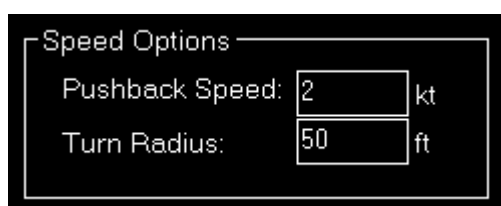


Here you can define the pushback speed as well as the turn radius.

Failures

These settings are related to the **Failures** module.

Hide Failures

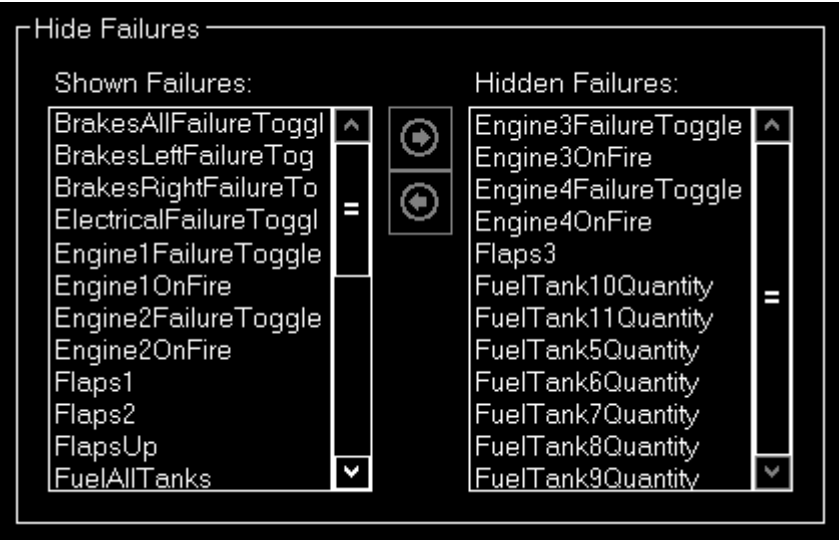


If you own a commercial license you can hide certain not relevant failures from the user.

Aircraft

These settings are related to the *Aircraft* module.

Aircraft Warnings

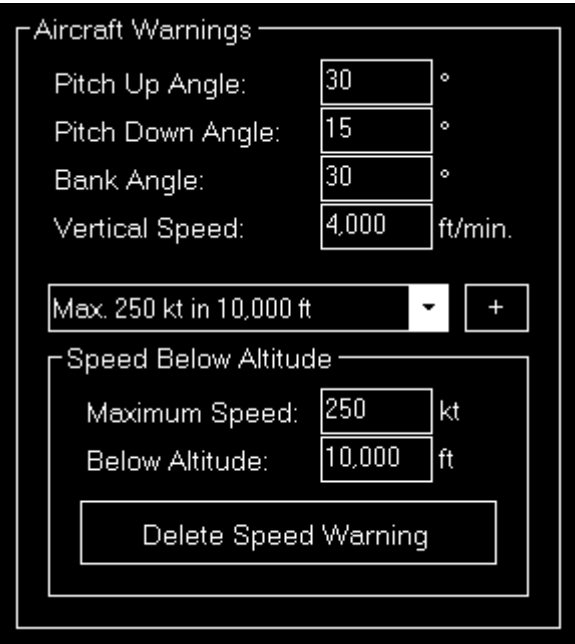

Here you can set limits for some parameters like pitch or bank angle for the aircraft.

Speed Below Altitude



Speed Below Altitude


Maximum Speed: kt

Below Altitude: ft

Additionally you can define maximum speeds below certain altitudes above mean sea level (MSL).

These settings are used to change the color of the corresponding value to red on the **Aircraft** module and also to show warning indicators when exporting graph data to Google Earth on the **Statistics** module.

Aircraft Gauge Options

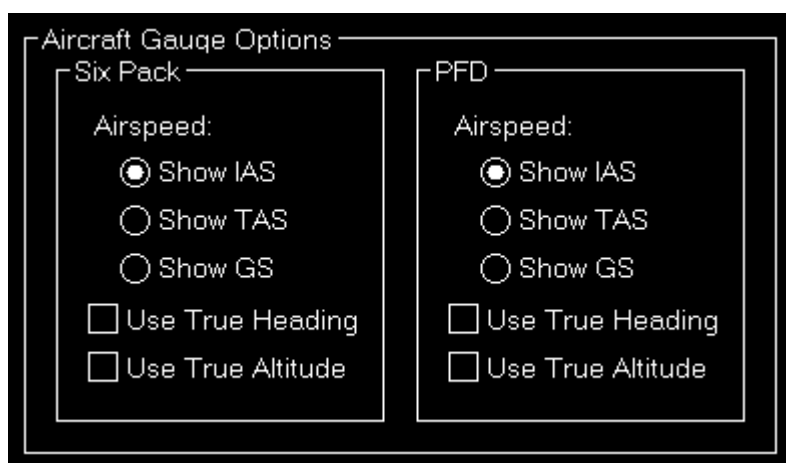

Aircraft Gauge Options

Six Pack

Airspeed:

☒ Show IAS

☐ Show TAS

☐ Show GS

☐ Use True Heading

☐ Use True Altitude

PFD

Airspeed:

☒ Show IAS

☐ Show TAS


☐ Show GS

☐ Use True Heading

☐ Use True Altitude

Here you can choose certain display options for the aircraft gauges.

Six Pack

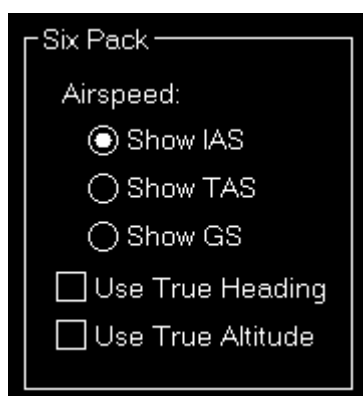

Six Pack

Airspeed:

☒ Show IAS

☐ Show TAS

☐ Show GS


☐ Use True Heading

☐ Use True Altitude

Choose weather you want to see indicated airspeed (IAS), true airspeed (TAS) or ground speed (GS) being displayed.


Also you can select if you would like true heading (in contrast to magnetic heading) and true altitude (in contrast to indicated altitude) being used.

PFD

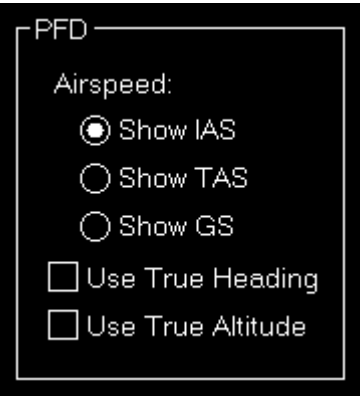


For the Primary Flight Display (PFD) you have the same display options as for the six pack **above**.

Custom Buttons

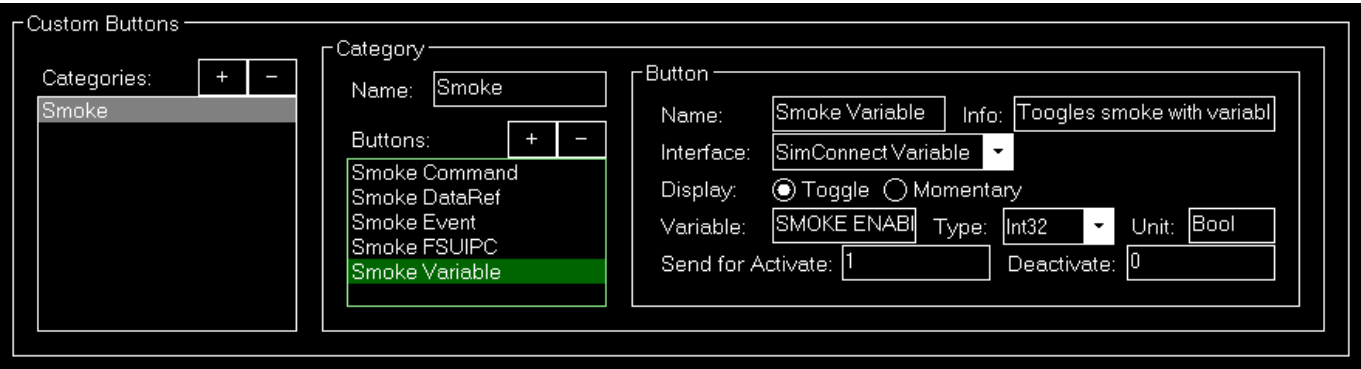


You can create custom buttons here that will trigger certain flight simulator functions directly. These buttons can be arranged into categories which you can create first.

Category

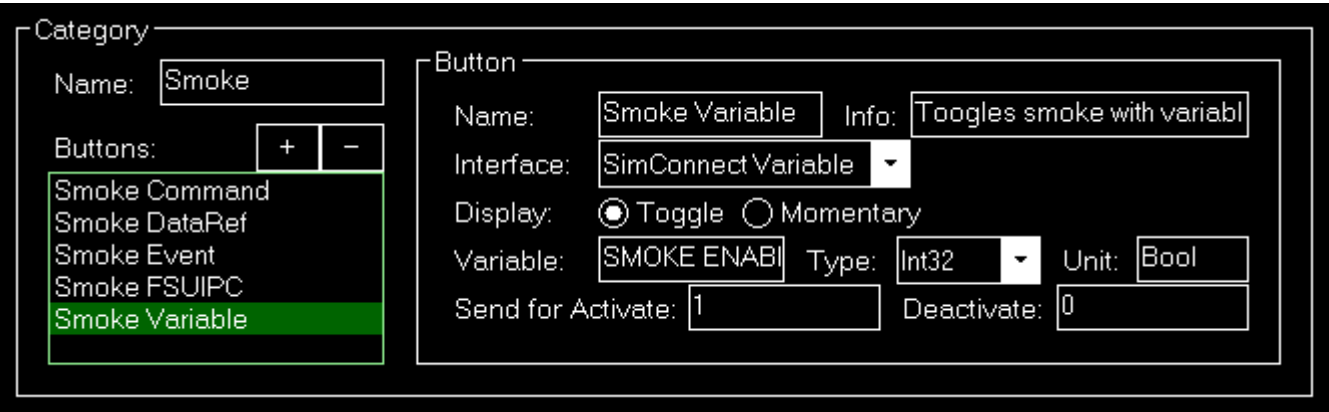

Once you assigned a name to the category you can add any number of buttons to it.

Button

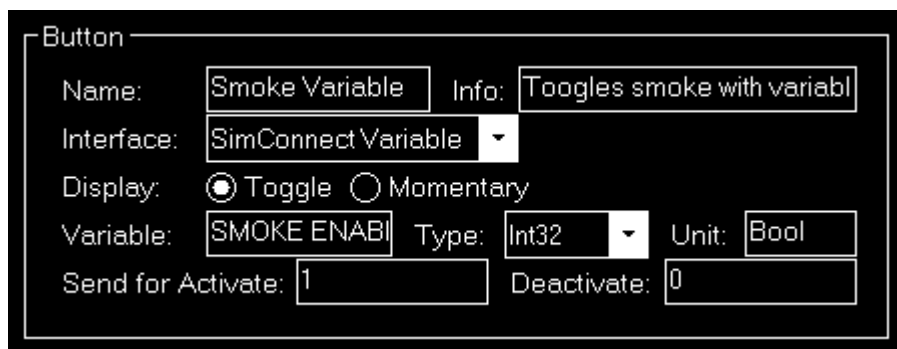

Button configuration window showing the following fields:

- Name: Smoke Variable
- Info: Toogles smoke with variabl
- Interface: SimConnect Variable
- Display: ☒ Toggle ☐ Momentary
- Variable: SMOKE ENAB
- Type: Int32
- Unit: Bool
- Send for Activate: 1
- Deactivate: 0

The button needs a name first and an optional info text which will be displayed as tool tip.

Next you need to select the interface that should be used for this button and choose if the button should have a toggle functionality or it should be momentary only: In case of toggle it will send two different values (like on and off) depending on its current state and in case of momentary there is no state and it sends always the same value.


Depending on the interface selected you need to enter a certain data or command ID, assign a data type and a unit to it.

Furthermore, you can enter a value that should be sent to activate and - in case of a toggle button - also a value to deactivate.

Examples and Reference

In the following you will find one example for each interface supported:


Interface	Data or Command ID	Type	Unit	Send for Activate	Send for Value Deactivate
SimConnect Event	SMOKE_TOGGLE	-	-	0	0
SimConnect Variable	SMOKE ENABLE	Int32	Bool	1	0
X-Plane Command	sim/flight_controls/smoke_toggle	-	-	-	-
X-Plane DataRef	sim/operation/failures/rel_smoke_cpit	-	-	6	0
FSUIPC Offset	05D8	Int16	-	1	0

 Note: The number behind type names are bits. Therefore a FSUIPC offset that like in the above example that has 2 bytes needs to be set to the integer type with 16 bits.


And here some references to create those examples:

Interface	Reference
SimConnect Event	Lockheed Martin Website for Prepar3D, Microsoft Website for FSX
SimConnect Variable	Lockheed Martin Website for Prepar3D, Microsoft Website for FSX
X-Plane Command	Commands.txt in Resources\plugins below X-Plane installation folder
X-Plane DataRef	DataRefs.txt in Resources\plugins below X-Plane installation folder

Interface	Reference
FSUIPC Offset	FSUIPC4 Offsets Status.pdf in Modules\FSUIPC Documents below Prepar3D/FSX installation folder

 **Note:** Using these custom buttons requires considerable knowledge on how the internals of Prepar3D/FSX/X-Plane and their add-ons work. We do not provide any support on how a certain variable, event, command, DataRef or offset can be used!

Other

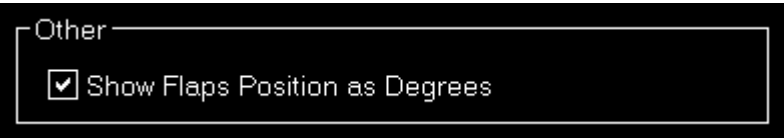

Here you can define if flap positions should be shown as degree number.

Statistics

These settings are related to the **Statistics** module.

Google Earth Export



Define all Google Earth export related settings in this area.


Every certain time interval a flight track point is shown in Google Earth with detailed flight information. You can set this time interval here.

Additionally you can define the range for including VORs, NDBs and waypoints if their export is enabled.


Third Party

Here you can enable certain aircraft-specific functionality related to supported third party products.

Use Third Party Aircraft Options

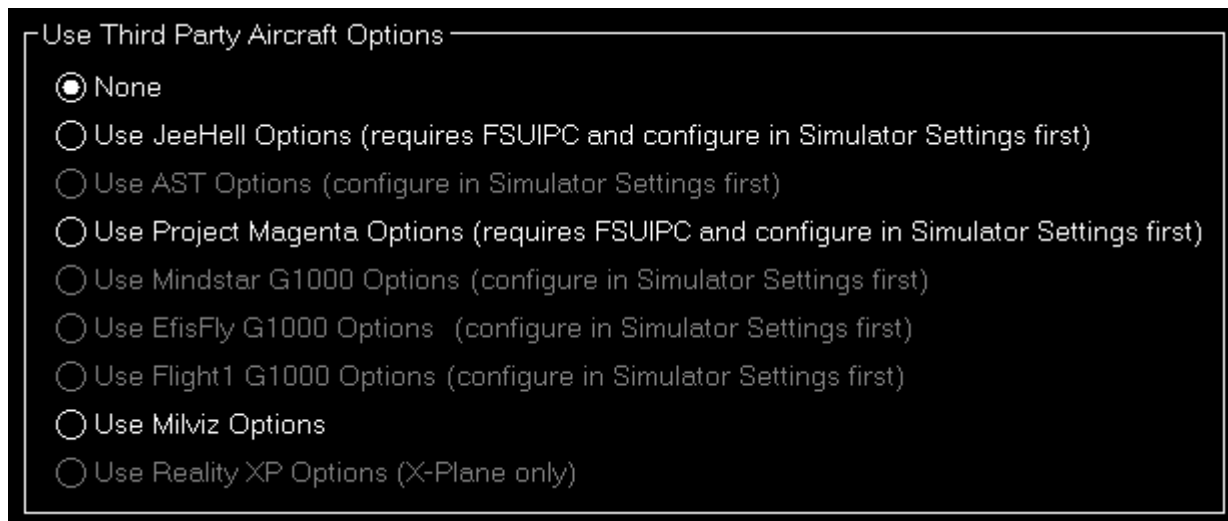

You can choose which third party aircraft options should be used.

 **Note:** For some options additional parameters need to be entered in the third party **simulator settings** first.


Other Settings

All settings in this area are not simulator and not aircraft related and will be saved globally.

Position

These settings are related to the **Position** module.

General

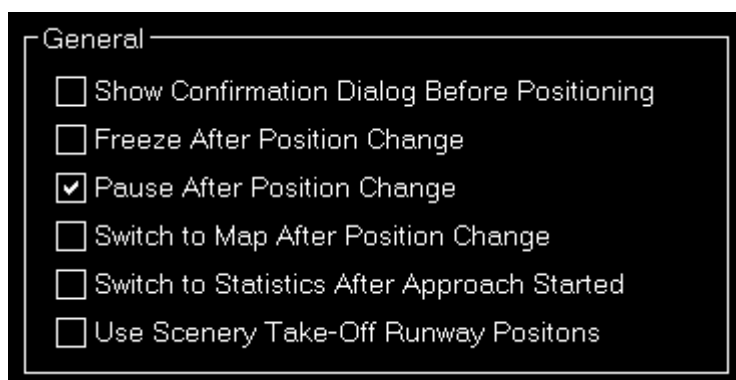

First you can enable an additional **confirmation dialog** before the airport position is changed.


You can also enable or disable some automatizations after an aircraft position is changed.

First choose if position freeze or pause should be enabled after aircraft move.

Additionally you can define if the program should automatically switch to the **Map** module after a

position change respectively to the **Statistics** module when an approach is started.

Flight Situation Presets

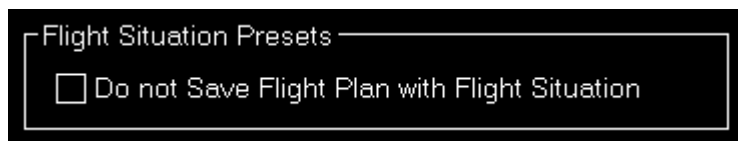


You can choose here to not automatically save the flight plan together with a flight situation preset.

Map

These settings are related to the **Map** module.


Refresh Rate

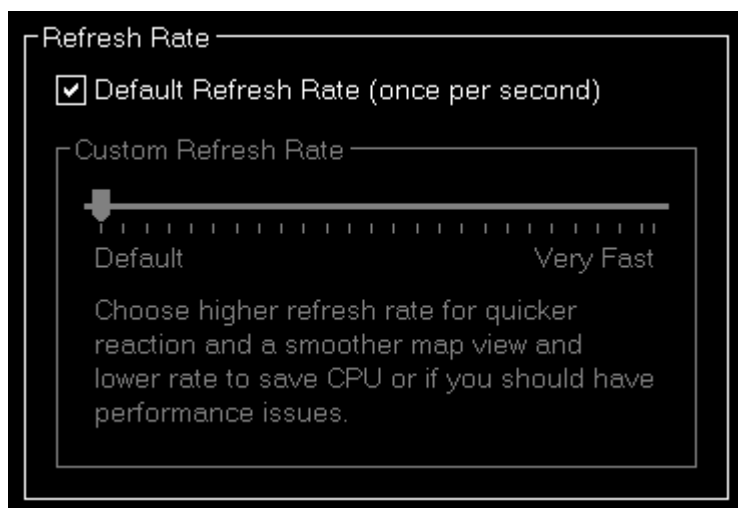

You can define here how often the map view gets updated.


By default that is set to once per second.

Custom Refresh Rate

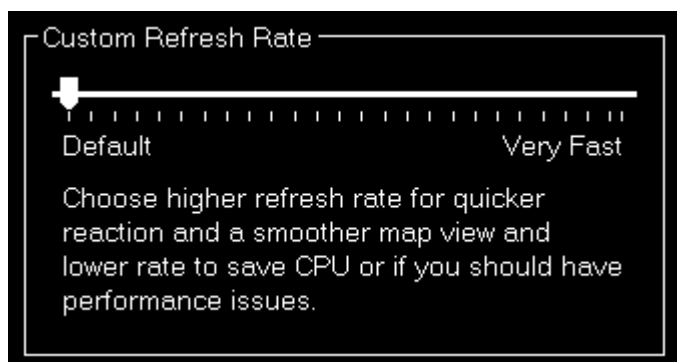

If you uncheck the Default Update Rate checkbox you can define the update rate yourself.

The slider then ranges from very low (every 60 visual frames on flight simulator) to very high (every single visual frame).

 **Note:** Please keep in mind that setting the data update rate to very high may lead to performance issues.

Grid and Minimum Sector Altitude (MSA) Display

Grid and Minimum Sector Altitude (MSA) Display

Add to Highest Elevation for Minimum Sector Altitude (MSA):

1,000

ft

☒ Show Grid on Normal Map

☒ Show Minimum Sector Altitude (MSA)

☒ Show Grid on Normal Print Map

☒ Show Minimum Sector Altitude (MSA)

☐ Show Grid on Street Map

☐ Show Minimum Sector Altitude (MSA)

☐ Show Grid on Satellite Map

☐ Show Minimum Sector Altitude (MSA)

☒ Show Grid on Height Map

☒ Show Minimum Sector Altitude (MSA)

First you can define here the altitude that is added to the highest elevation in each sector when calculating the Minimum Sector Altitude (MSA).

Additionally you can choose when the map grid including the Minimum Sector Altitude (MSA) is displayed in the first place.

Aircraft Information Text

Aircraft Information Text

User Aircraft:	AI Aircraft:	Online Network
<div>User<div>{altitude}</div><div>{ground_speed}T</div><div>{heading_true}</div></div>	<div>{aircraft_model}</div> <div>{altitude}</div> <div>{ground_speed}T</div> <div>{heading_true}</div>	<div>{atc_call_sign} -</div> <div>{aircraft_model}</div> <div>{user_name}</div> <div>{ground_speed}T</div>

You can customize the text that is displayed next to the aircraft here.

Different texts can be defined for the user aircraft, AI aircraft as well as aircraft from online networks.


Following placeholders are available within those texts:

Placeholder	Description	User	AI	Online
{latitude}	Aircraft latitude.	X	X	X
{longitude}	Aircraft longitude.	X	X	X
{altitude}	“GROUND” if on ground, altitude MSL below switch to FL map setting and FL above that.	X	X	X
{altitude_indicated}	Aircraft indicated altitude.	X	X	
{altitude_msl}	Aircraft altitude above mean sea level (MSL).	X	X	X
{altitude_agl}	Aircraft altitude above ground level (AGL).	X	X1	
{airspeed_indicated}	Aircraft indicated speed (IAS).	X	X1	
{airspeed_true}	Aircraft true speed (TAS).	X	X1	
{ground_speed}	Aircraft ground speed.	X	X	X
{heading_magnetic}	Magnetic aircraft heading.	X	X1	
{heading_true}	True aircraft heading.	X	X	X
{vertical_speed}	Aircraft vertical speed.	X	X	
{aircraft_title}	Aircraft title.	X	X1	X
{aircraft_type}	Aircraft type (like the manufacturer).		X1	
{aircraft_model}	Specific aircraft model.		X1	X
{current_state}	Current aircraft state: Like Parking, Taxi or In Flight.	X	X	
{atc_call_sign}	Call sign.	X1	X1	X
{atc_airline}	Airline name.		X1	
{atc_flight_number}	Flight number.		X1	
{atc_airport_departure}	Departure airport as filed.		X1	X
{atc_airport_arrival}	Arrival airport as filed.		X1	X
{atc_airports}	{atc_airport_departure} → {atc_airport_arrival}, if both variables available.		X1	X
{atc_flight_rules}	Flight rules as filed.		X1	X
{atc_airport_alternate}	Alternate airport as filed.			X
{atc_route}	Flight route as filed.			X
{atc_remarks}	Flight plan remarks.			X
{atc_etd}	Estimated time of departure as filed or (for online aircraft) actual time after departure.		X1	X2
{atc_ete}	Estimated time en-route as filed.			X2
{atc_eta}	Estimated time of arrival as filed.		X1	X2

 Note X1: Not available for X-Plane.


 Note X2: Not available for PilotEdge.

Display Options

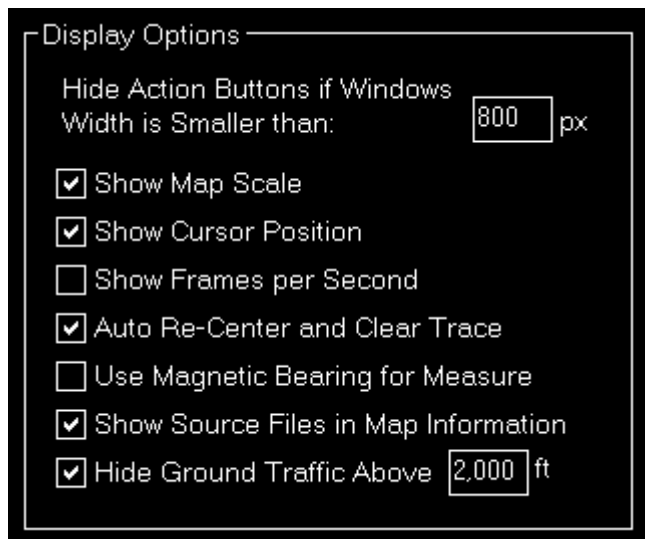

You can define several display options here.

First you can set a window width below that the left and right action buttons are hidden.

 **Note:** This is only used for detached map windows. Please note that the action buttons are also hidden if the height of the window is not enough to show all of them.

Below that you can choose if you want the map scale, cursor position and frames per second displayed on the bottom of the map view or not.

Additionally you can disable the automatic re-center of the map and clear aircraft trace (if enabled) after the aircraft position has been changed from the flight simulator itself (after there was a crash, for example).

There is also an option to enable or disable the display of scenery source files in the **map information** dialog: This might help with identifying issues during database build.


If you do not like to see other aircraft on the map that are on ground while you are flying you can hide ground traffic above a certain altitude above ground level.

Online Networks



If you enter here your user ID of the available online networks your own user aircraft will not appear additionally as AI aircraft.

Points of Interest (POIs)

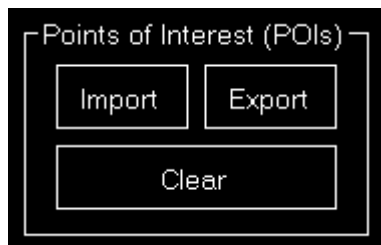

Here you can import or export points of interest (POIs) as CSV files.

Also removing all the existent points of interest is possible

Holdings




You can define here how large the entry sectors are drawn around the holding.

Additionally you can choose if also the special direct entry (next to the regular direct entry) is displayed.

Flight Plan


These settings are related to the **Flight Plan** module.

Time Remaining

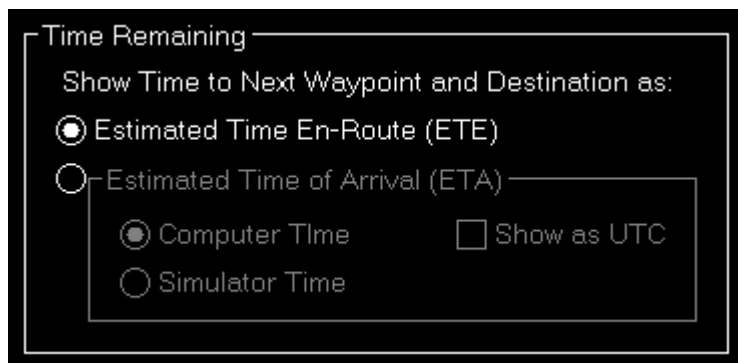

Select here if the remaining time to the next waypoint and to the destination should be shown as estimated time en-route (ETE) or estimated time of arrival (ETA).

Estimated Time of Arrival (ETA)

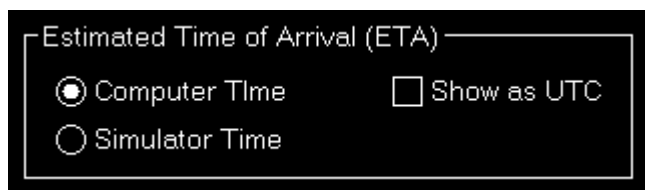


Estimated Time of Arrival (ETA)

☒ Computer Time ☐ Show as UTC

☐ Simulator Time

If you have selected the ETA option you can further decide if this time should be calculated based on your computer or the simulator time and if this time should be displayed as local time or UTC.

PFPX




PFPX

Folder of "Schedules.txt":

C:\Users\Public\Documents\PFPXData\

You can enter the path to the PFPX documents directory here. The PFPX connection then can be used to **import scheduled flights**.

SimBrief



SimBrief

User Name:

You can enter your SimBrief user name here. The SimBrief connection then can be used to **import from SimBrief**.

Conditions

These settings are related to the **Conditions** module.

ILS Visibility

ILS Visibility

	Decision Height	Runway Visibility
CAT I	<input type="text" value="200"/> ft	<input type="text" value="550"/> m
CAT I LTS	<input type="text" value="200"/> ft	<input type="text" value="400"/> m
CAT II	<input type="text" value="100"/> ft	<input type="text" value="300"/> m
CAT IIIa	<input type="text" value="50"/> ft	<input type="text" value="180"/> m
CAT IIIb	<input type="text" value="30"/> ft	<input type="text" value="46"/> m
CAT IIIc	<input type="text" value="0"/> ft	<input type="text" value="10"/> m

In this section the ILS Visibility presets can be customized.

You can define the decision height as well as the runway visibility for each ILS category.

Sound

Sound

☐ Force Mute/Unmute on Simulator Connect

☐ Mute

If you would like the simulator to be always muted or unmuted after connection is established you can set this here.

Real-Time Weather Source


Real-Time Weather Source

☒ NOAA ☐ VATSIM ☐ IVAO ☐ PilotEdge

This setting is ignored if Active Sky is used as weather engine in the current simulator.

Define here the real-time weather source that should be used for receiving weather METAR data if this is not provided by flight simulator directly.

In this connection you can choose from NOAA (National Oceanic and Atmospheric Administration), VATSIM (Virtual Air Traffic Simulation), IVAO (International Virtual Aviation Organization) and PilotEdge.

 **Note:** When Active Sky is used as weather engine for the active simulator this setting is ignored and always Active Sky itself used as real-time weather source.

Other

Other

☒ Enable Simplified Weather Control

By default the Simplified Weather Control is activated.

That means that FS-FlightControl takes full control of the simulator weather and this way can always ensure what you see in the **Conditions** module is synchronized with the simulator weather.

This allows especially the **custom weather** interface to be considerably simplified as there is no longer a need to actually send a weather change due to it being synchronized in the background all the time anyway.

Therefore normally you want to keep this option enabled.

The only time you might consider disabling it is if you try to use external weather tools that are not supported through an interface by FS-FlightControl. In this case you should disable this option here as otherwise FS-FlightControl will constantly try to override the weather change by other tools.

View/Slew

These settings are related to the **View/Slew** module.

Custom Camera Positions

Custom Camera Positions

Current

X: 0.00 ft Y: 0.00 ft Z: 0.00 ft
Pitch: 0.00° Bank: 0.00° Roll: 0.00°

☒ Enable Custom Position 1
☐ Enable Custom Position 2
☐ Enable Custom Position 3

Custom Position 1

Name: CPT View
X: -4.50 ft
Y: 0.00 ft
Z: 0.00 ft
Pitch: 0.00°
Bank: 0.00°
Roll: 0.00°
Use Current Test

Custom Position 2

Name: Center View
X: 0.00 ft
Y: 0.00 ft
Z: 0.00 ft
Pitch: 0.00°
Bank: 0.00°
Roll: 0.00°
Use Current Test

Custom Position 3

Name: F/O View
X: 0.00 ft
Y: 0.00 ft
Z: 0.00 ft
Pitch: 0.00°
Bank: 0.00°
Roll: 0.00°
Use Current Test

If you own a commercial license this section allows you to define custom camera positions to reduce the parallax effect.

Current




A screenshot of a software panel titled 'Current'. It displays camera position and orientation data in a grid format. The values are all set to 0.00.

X:	0.00 ft	Y:	0.00 ft	Z:	0.00 ft
Pitch:	0.00°	Bank:	0.00°	Roll:	0.00°

Here you can see the current camera position.

 Note: This information is currently only provided by X-Plane.

Custom Position

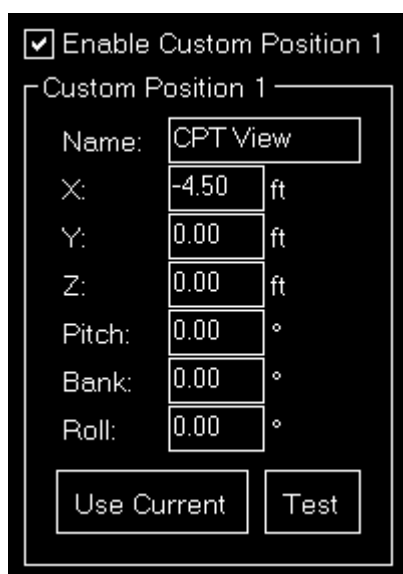

A screenshot of a software panel titled 'Custom Position 1'. It includes a checkbox to enable the position, a name field, and input fields for X, Y, Z coordinates and Pitch, Bank, Roll angles. At the bottom are 'Use Current' and 'Test' buttons.

☒ Enable Custom Position 1

Custom Position 1

Name: CPT View

X: -4.50 ft

Y: 0.00 ft

Z: 0.00 ft

Pitch: 0.00 °

Bank: 0.00 °

Roll: 0.00 °

Use Current Test

You can enable up to three custom positions.

Set a name for the custom position button displayed in the **View/Slew** module first.

Then you can define an offset for all six degrees of freedom.

Use the Use Current button to take over the current camera values or the Test button to send the manually inserted values to the simulator to test the effect.

Other



A screenshot of a software panel titled 'Other'. It contains a single checkbox labeled 'Hide Back to Cockpit Buttons'.

Other


☐ Hide Back to Cockpit Buttons

You can hide the back to cockpit buttons here if they are, for example, not supported by the aircraft model.

Failures

These settings are related to the **Failures** module.

Color Settings

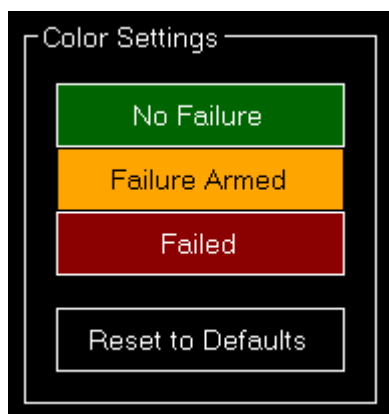

Use this area to change the colors. For a simple color selection the **Select Color** dialog is used.

You can also use the button **Reset to Defaults** to revert all your color changes.

Other



Choose here if random failures should be automatically re-enabled on program start if they were enabled before.

Statistics

These settings are related to the **Statistics** module.

Color Settings

In this area you can customize all colors used to draw the statistics graphs.



All colors can be defined per display type. Therefore please first select if you want to change the colors for the normal in program display or for printout.


For a simple color selection the **Select Color** dialog is used.

Revert to Defaults



You can easily revert all colors to their defaults by using the Revert to Defaults button.

Colors for Display Type

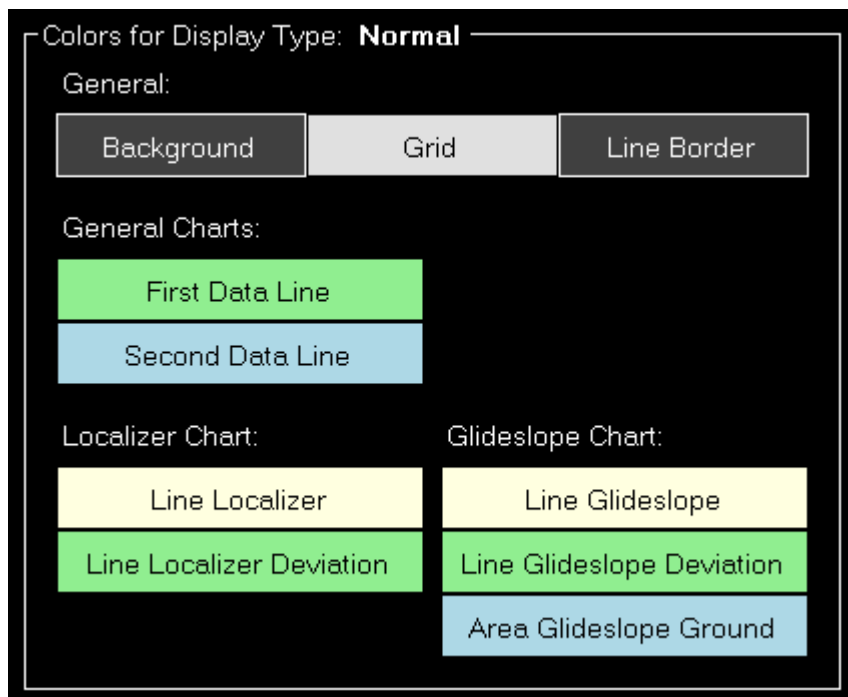

Here all currently defined colors are displayed for the selected display type.

Click on any of the buttons to select a different color.

Recording

Recording

Possible Parameters:

Record Parameters:

AirspeedIndicated
AirspeedTrue
Altitude
AmbientTemperature
AmbientTemperature
AmbientWindDirectio

☐ Enable High Speed Recording
Enabling this option may lead to performance issues.

Maximum Recorded Data Points: 10,000

Reset to Defaults

Recorded parameters are available to be displayed in the **general statistics** and are also included in the CSV data export.

If you own a commercial license you can choose from a wide range of parameters and include them in the recording.

Additionally you can also enable high speed recording which will record values with the maximal possible frequency offered by the simulator (otherwise, by default, the recording is only once per second).

Especially on computers with little amount of memory you have the option to limit the amount of recorded data points.

Use the button **Reset to Default** to set the recording options back to the defaults.

Approach Options

Approach Options


☒ Use Localizer by Simulator if Possible

You can choose if the localizer information from the simulator should be used during approach recording or the localized deviation should always be calculated internally.


Network

These settings are related to the **Network** module.


FS-FlightControl Client

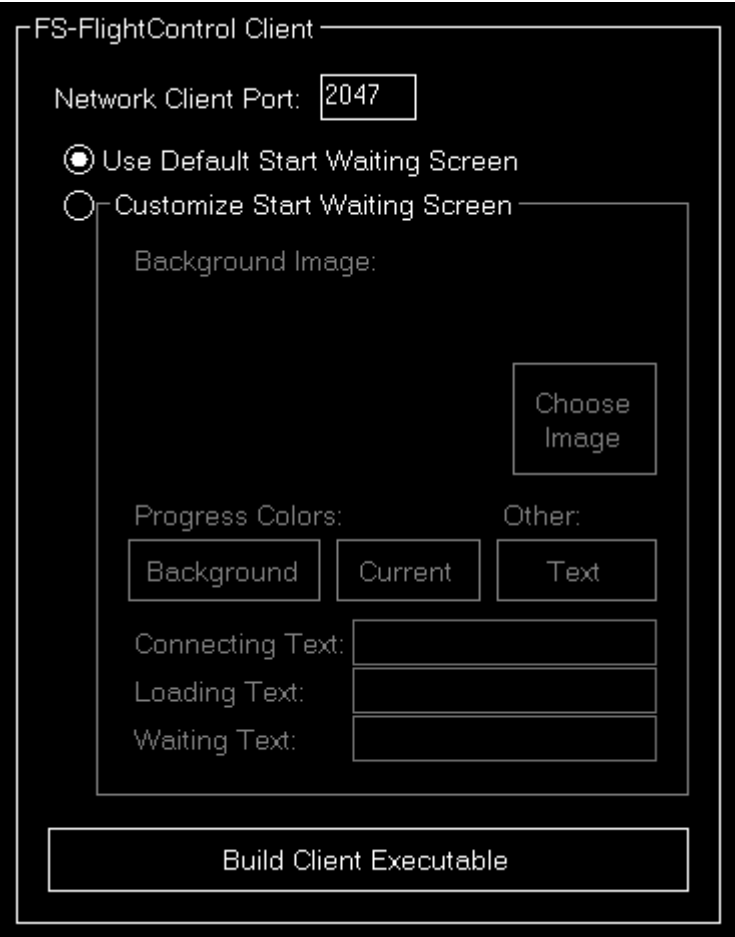

First you can change the network client port here that defaults to 2047, but can be changed to any other port number if needed.

 **Note:** If you change the port you need to re-build the network client executable.

Customize Start Waiting Screen

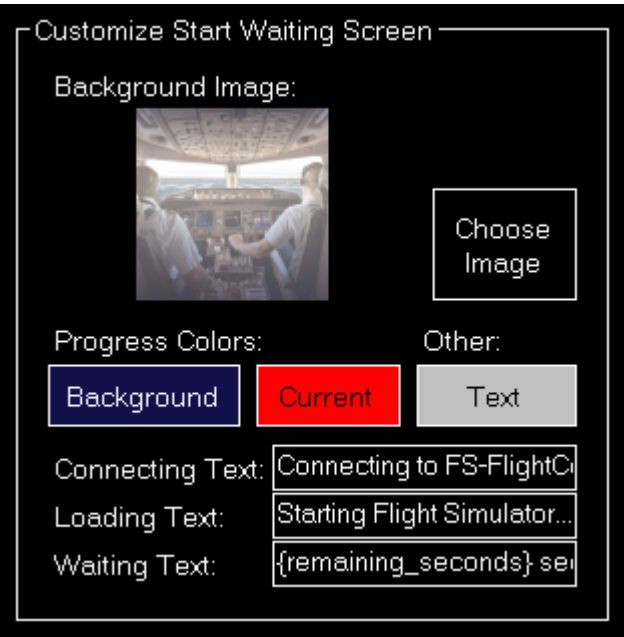


If you own a commercial license you can completely customize the start waiting screen that is shown

on the network client computers.

You can select a background image as well as customize the colors and the shown texts. For a simple color selection the **Select Color** dialog is used.

In the Remaining Text input field you can use the placeholder {remaining_seconds} to insert the remaining seconds.

Program Close Options

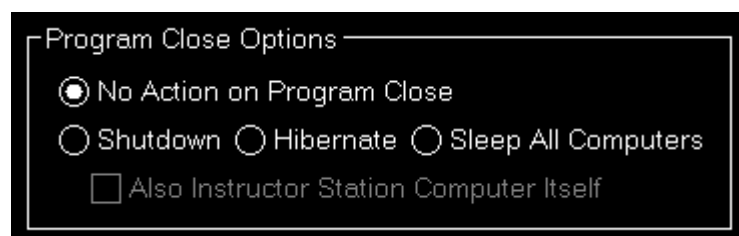

Program Close Options

☒ No Action on Program Close


☐ Shutdown ☐ Hibernate ☐ Sleep All Computers

☐ Also Instructor Station Computer Itself

You can define here if a shutdown, hibernate or sleep action should be sent to all connected network computers when the FS-FlightControl software is closed.

Additionally you can decide if the same action should be executed on the computer running the instructor station itself.

Status Page for Web Display

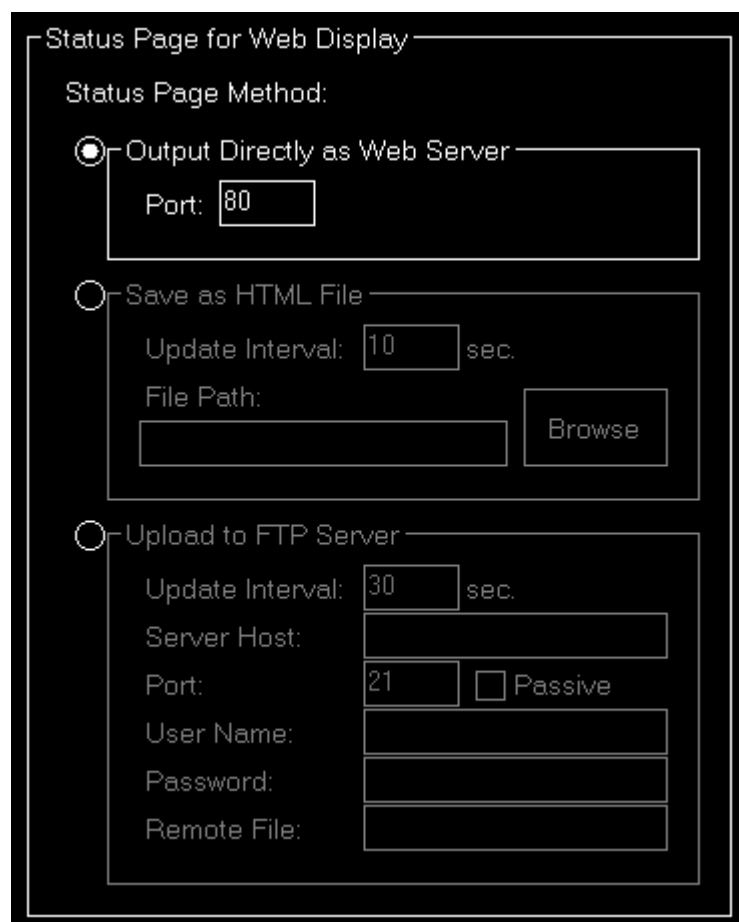

Status Page for Web Display

Status Page Method:

☒ Output Directly as Web Server

Port:

☐ Save as HTML File

Update Interval: sec.

File Path:

☐ Upload to FTP Server

Update Interval: sec.

Server Host:

Port: ☐ Passive

User Name:

Password:

Remote File:

In this area you can define the method that should be used for the status page output.


Output Directly as Web Server



The screenshot shows a configuration panel titled "Output Directly as Web Server". It contains a single text input field labeled "Port:" with the value "80" entered.

If this method is selected FS-FlightControl will listen on the defined port for HTTP web requests and will reply with the status page accordingly.


Save as HTML File

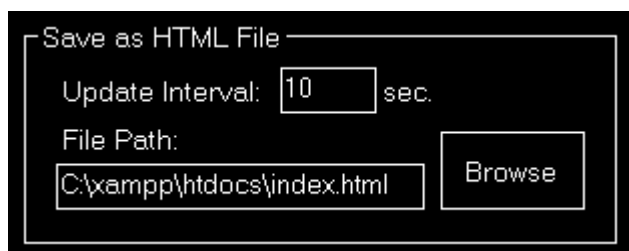

The screenshot shows a configuration panel titled "Save as HTML File". It contains three fields: "Update Interval:" with a value of "10" and "sec.", "File Path:" with a text input field containing "C:\xampp\htdocs\index.html", and a "Browse" button.

This method will save the status page as HTML file to a certain directory location in the defined time interval.

Upload to FTP Server

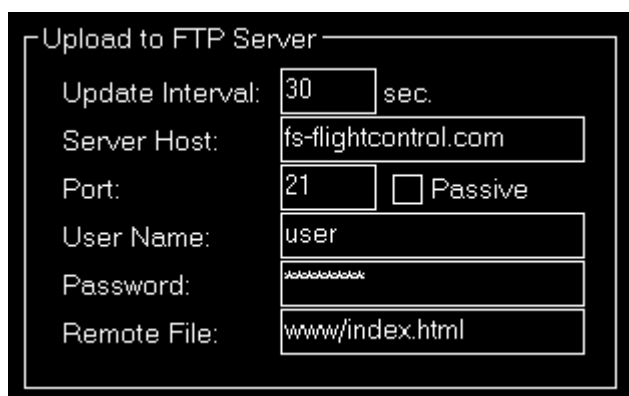

The screenshot shows a configuration panel titled "Upload to FTP Server". It contains several fields: "Update Interval:" with a value of "30" and "sec.", "Server Host:" with a text input field containing "fs-flightcontrol.com", "Port:" with a value of "21" and an unchecked "Passive" checkbox, "User Name:" with a text input field containing "user", "Password:" with a text input field containing "*****", and "Remote File:" with a text input field containing "www/index.html".


You can also enable this method to automatically upload the status page to a FTP server.

Then you need to define again the update interval as well as all parameters that are needed for FTP server access.

Mobile Devices

This section is related to the mobile devices support.

Android and iOS Client

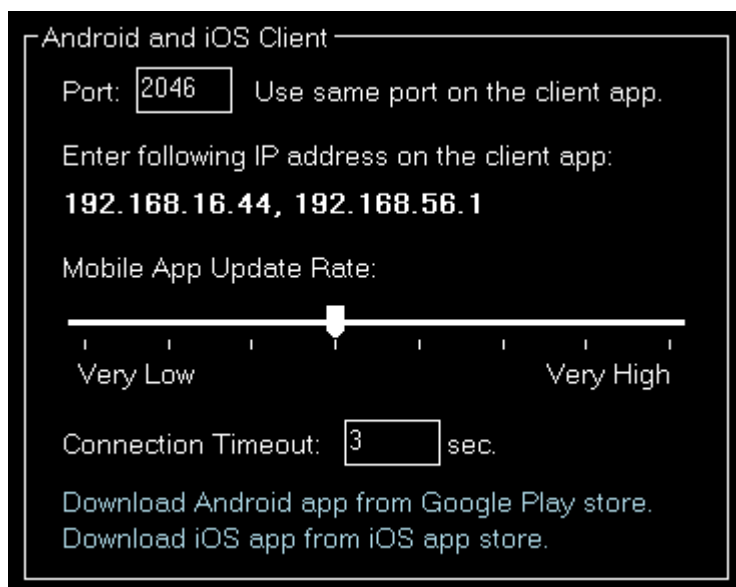

Android and iOS Client

Port: Use same port on the client app.

Enter following IP address on the client app:
192.168.16.44, 192.168.56.1

Mobile App Update Rate:

Very Low Very High


Connection Timeout: sec.

Download Android app from Google Play store.
Download iOS app from iOS app store.

There is an Android and iOS client app that makes it possible to use FS-FlightControl also on your Android tablet device or iPad.

You can define the port here that should be used for the connection. It defaults to 2046.

In the following you can see the IP address that you need to enter in the Android or iOS app once for connection.

 **Note:** It rare cases it is possible that there is more than one IP address displayed here. In this case you just need to try which one works.

If you should see a Windows Firewall message popping up - normally on program start - asking you to give FS-FlightControl access please confirm that. Only with this approval you will be able to connect with your mobile device.


There is an option to change how often the client app gets screen updates: Increasing this value will make a smoother user experience on the mobile devices, but also considerably increase load on the Desktop application. With the connection timeout you can define how quickly the app gets disconnected.

You can directly download the Android app from the **Google Play store** as well as the iOS-App from the **iOS App Store**.

Units

Here all units for input as well as output used across the whole program can be defined.

Altitude Unit

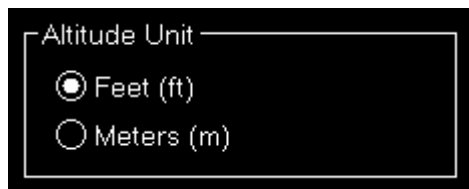A dialog box titled "Altitude Unit" with a white border. It contains two radio button options: "Feet (ft)" which is selected, and "Meters (m)".


Altitude Unit

☒ Feet (ft)

☐ Meters (m)

Choose if feet (ft) or meters (m) should be used for altitude values.

Temperature Unit

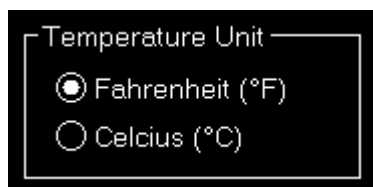A dialog box titled "Temperature Unit" with a white border. It contains two radio button options: "Fahrenheit (°F)" which is selected, and "Celcius (°C)".


Temperature Unit

☒ Fahrenheit (°F)

☐ Celcius (°C)

Choose if Fahrenheit (°F) or Celcius (°C) should be used for temperature values.

Atmospheric Pressure Unit

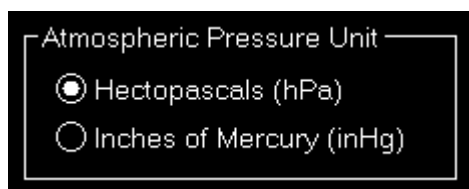A dialog box titled "Atmospheric Pressure Unit" with a white border. It contains two radio button options: "Hectopascals (hPa)" which is selected, and "Inches of Mercury (inHg)".


Atmospheric Pressure Unit

☒ Hectopascals (hPa)

☐ Inches of Mercury (inHg)

Choose if Hektopascals (hPa) or Inches of Mercury (inHg) should be used for atmospheric pressure values.

Other Pressure Unit

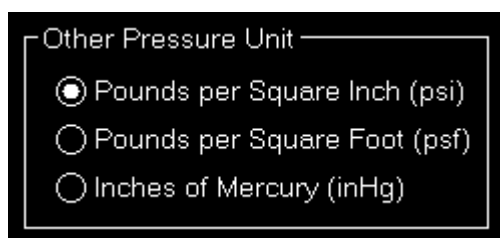A dialog box titled "Other Pressure Unit" with a white border. It contains three radio button options: "Pounds per Square Inch (psi)" which is selected, "Pounds per Square Foot (psf)", and "Inches of Mercury (inHg)".

Other Pressure Unit


☒ Pounds per Square Inch (psi)

☐ Pounds per Square Foot (psf)

☐ Inches of Mercury (inHg)

Choose if Pounds per Square Inch (psi), Pounds per Square Foot (psf) or Inches of Mercury (inHg) should be used for other pressure values.

Weight Unit

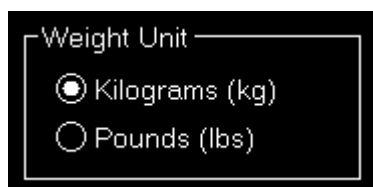A dialog box titled "Weight Unit" with a white border. It contains two radio button options: "Kilograms (kg)" which is selected, and "Pounds (lbs)".

Weight Unit

☒ Kilograms (kg)

☐ Pounds (lbs)

Choose if kilograms (kg) or pounds (lbs) should be used for weight values.

Short Distance Unit

Short Distance Unit

☒ Feet (ft)

☐ Meters (m)

Choose if feet (ft) or meters (m) should be used for short distance values.

Far Distance Unit

Far Distance Unit

☒ Nautical Miles (NM)

☐ Kilometers (km)

Choose if nautical miles (NM) or kilometers (km) should be used for far distance values.

Weight Unit

Weight Unit

☒ Kilograms (kg)

☐ Pounds (lbs)

Choose if kilograms (kg) or pounds (lbs) should be used for weight values.

Speed Unit

Speed Unit


☒ Knots (kt)

☐ Miles per Hour (mph)

☐ Kilometers per Hour (km/h)

Choose if knots (kt), miles per hour (mph) or kilometers per hour (km/h) should be used for speed values.

Liquid/Fuel Unit

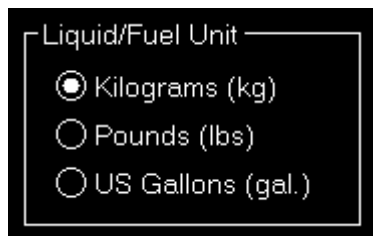


Liquid/Fuel Unit

- ☒ Kilograms (kg)
- ☐ Pounds (lbs)
- ☐ US Gallons (gal.)

Choose if kilograms (kg), pounds (lbs) or US gallons (gal.) should be used for liquid and fuel values.

Visibility Unit

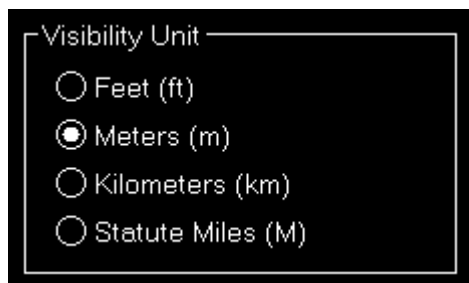


Visibility Unit

- ☐ Feet (ft)
- ☒ Meters (m)
- ☐ Kilometers (km)
- ☐ Statute Miles (M)

Choose if feet (ft), meters (m), kilometers (km) or statute miles (M) should be used for visibility values.

Thrust Unit

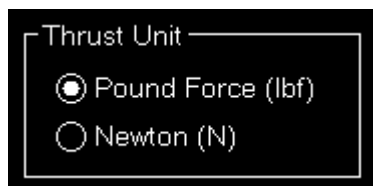


Thrust Unit

- ☒ Pound Force (lbf)
- ☐ Newton (N)

Choose if found force (lbf) or Newton (N) should be used for thrust values.

Torque Unit

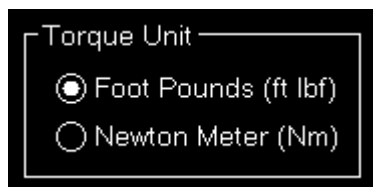


Torque Unit

- ☒ Foot Pounds (ft lbf)
- ☐ Newton Meter (Nm)

Choose if foot pounds (ft lbf) or Newton meter (Nm) should be used for torque values.

GEO Position

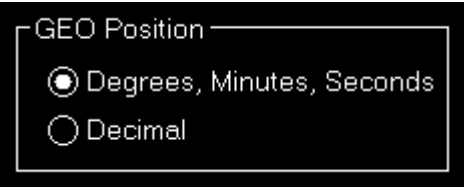


Choose if GEO positions should be displayed as degrees, minutes and seconds or as a decimal value.

Color

Here you can find the global color settings.

Color Settings

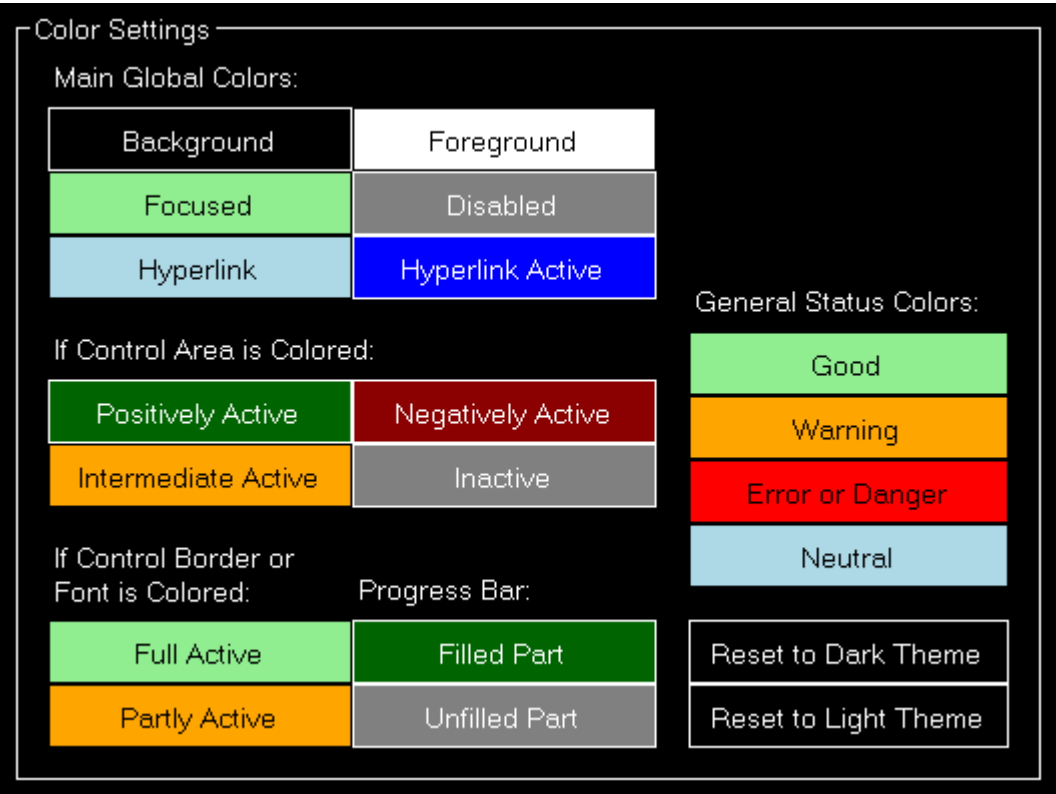

Use this area to change the colors of this program. For a simple color selection the **Select Color** dialog is used.

There are two predefined color themes which you can revert to using the **Reset to Dark Theme** and **Reset to Light Theme** buttons.


After doing so you will be asked if you would also like to adjust the colors of the normal map, statistics and failures to the color theme defaults which we would recommend to do.

Access Control


There is an optional add-on module for FS-FlightControl that allows to control simulator access.

☐ Enable Simulator Access Control

If you have purchased this additional module you can enable the access control functionality using this check box.

 **Note:** It is highly recommended to also enable the **Settings Password Protection** as otherwise bypassing access control would be very simple for the user.

Simulator Access Control Settings

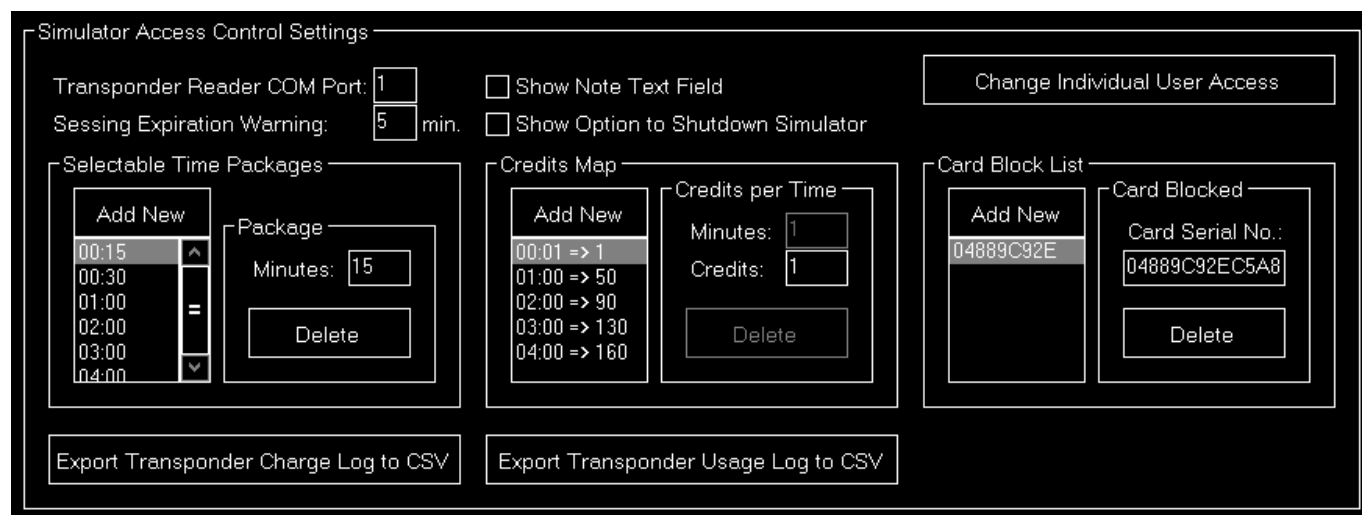

Once access control is enabled you can configure it here.

First you need to define the COM port used by the hardware transponder reader you have received from us. You can check the COM port in the Windows Device Manager.


You can also set the session expiration warning here which will warn the user a certain time before the session expires.

Furthermore a note text field can be enabled which allows the user to leave a note for the transponder usage log.

If you would like the users to be able to shutdown the simulator you can enable a shutdown button on the lock screen.


Both the transponder charge as well as the transponder usage log can be exported here as CSV files as well.

Selectable Time Packages

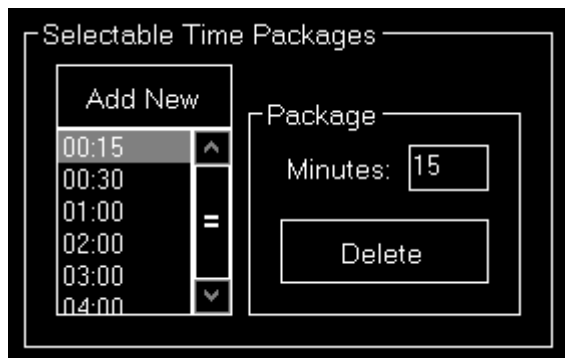


On the lock screen the users can choose between different session time packages which you can specify here.

Package

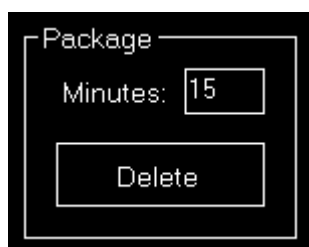

You can set the number of minutes the simulator should be active when the user selects this time package.

Credits Map

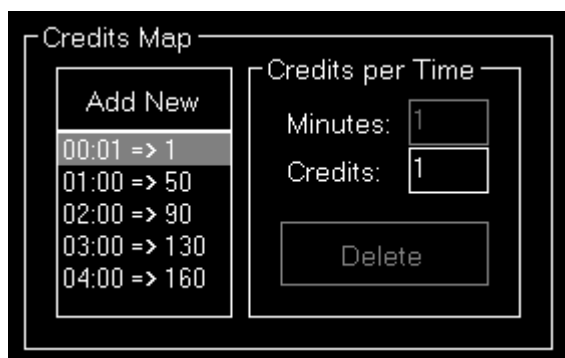

When the user starts a simulator session a certain amount of credits is deducted from his transponder.

This credits map defines how many credits are needed for a certain amount of time.

If there is no credits relation defined here that fits to the selected session time package exactly it will use the largest credits relation and fill it up with the next lower one till all minutes are charged.

That is also the reason why you cannot delete the one-minute (smallest possible unit) credits relation.

Credits per Time



Credits per Time

Minutes: 1

Credits: 1

Delete

Define here how many credits get charged for a certain number of minutes.

Card Block List



Card Block List

Add New

04889C92E

Card Blocked

Card Serial No.:

04889C92EC5A8

Delete

If a user reports a transponder for example as lost you can add its serial number to the card block list. In case the user then still tries to use this card it will be rejected.

Card Blocked



Card Blocked

Card Serial No.:

04889C92EC5A8

Delete

Enter the serial number of the transponder that should be blocked here.

User Access Control

FS-FlightControl: User Access Control

Search:

Hans Pfaall (ID: 2)
Marv Rogers (ID: 3)
Roderick Usher (ID: 4)
William Wilson (ID: 1)

User
User ID: 1
Name: William Wilson
E-mail:
Cards: 3

Access Card
Card ID: 3
Serial No.: 04889C92EC5A80
Simulator: 21
Expiration: Select 4/3/2020 ☒ No Expiration
Credits: 1000 ☐ Unlimited

Free Credits
Per Day: 50 Used: 0
Per Week: 300 Used: 0
Per Month: 500 Used: 0
Per Year: 0 Used: 0

OK

Here you can change the simulator access settings of individual users.

First you can search for an existing user, also by scanning an existing transponder card.

A new user can be added here as well.

User

User
User ID: 1
Name: William Wilson
E-mail:
Cards: 1

Users are assigned a name and an optional e-mail address.

You can then add access card to a user.

A user can only be deleted again if no cards are assigned to this user.

Access Card

Access Card

Card ID: 3

Serial No.: 04889C92EC5A80

Simulator:

21

Expiration:

Select

4/3/2020

☒ No Expiration

Credits:

1000

☐ Unlimited

Read Data from Card

Write Data to Card

Free Credits

Per Day: 50 Used: 0

Per Week: 300 Used: 0

Per Month: 500 Used: 0

Per Year: 0 Used: 0

Reset Used

Delete

Here you can define expiration date of the transponder card as well as the amount of credits this card should have.

A card can be also valid indefinitely and credits can be set to unlimited as well. Use the **Select** button to open the **Select Date** dialog.

This might be useful if you do not really need to control the access to the simulator, but would rather like to track its usage: In this case you can hand out cards with unlimited credits to your users and this way track who is using the simulator for how long without actually restricting the usage.

Free Credits

Free Credits

Per Day: 50 Used: 0

Per Week: 300 Used: 0

Per Month: 500 Used: 0

Per Year: 0 Used: 0

Reset Used

You can also set a certain amount of free credits per day, week, month or year. Not used credits will expire after the corresponding period of time.

This allows the user to use the simulator for a certain amount of time free of charge without reducing his actual card credits.


Use the button **Read Data from Card** to see also the currently used amount of the free credits. The button **Reset Used** allows you to set this back to zero again.

After you are changing the expiration date or any credits options do not forget to use the button **Write Data to Card** to actually save your changes to the card.


Other

In this section all other settings are located that do not fit into another category.


Input and Help

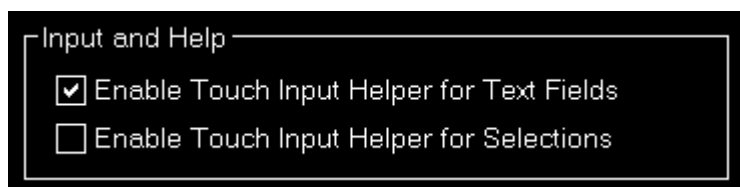

Here you can define if a touch input helper should be used for text and selection input fields.

 **Note:** While the Android or iOS app is connected both touch input helpers are activated automatically.

Display Options

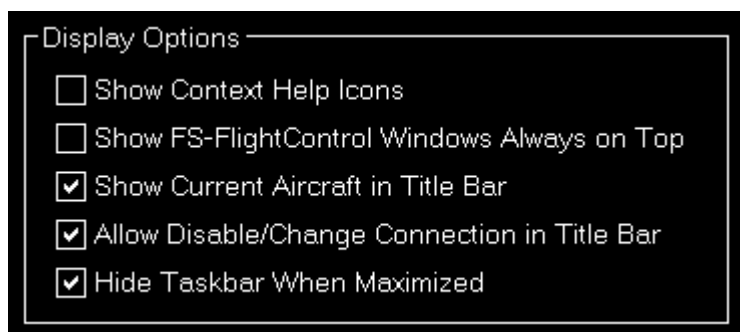


Additionally you can choose if the small help icons should be displayed in the top right corner of all sections.

Furthermore you can make the FS-FlightControl window to stay always on top of all other applications.

There is the option to show or hide the aircraft name as well as allow to disable or change the simulator connection by clicking on the connection text in the title bar.

You can also choose to hide the Taskbar when the application window is maximized.

Program Startup and Exit Options

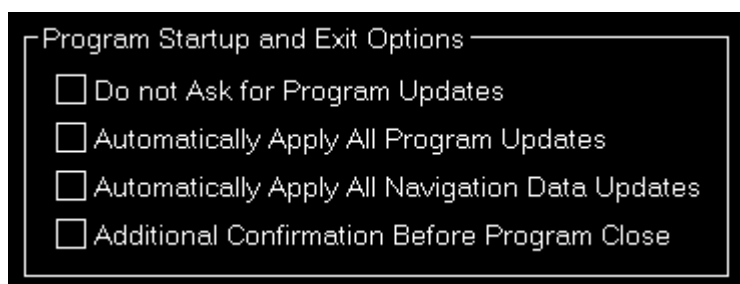

To allow a program start without user interaction you can define here that program updates as well as navigation data updates should always be applied without confirmation by the user.

Alternatively you can also disable the question regarding an update completely (which we do not recommend).

Furthermore you have the option here to activate an additional confirmation message before the program is really closed - in case of accidental clicks on the Exit button.

Online Network Status URLs




Here you can change the URLs where FS-FlightControl gets the status updates for VATSIM, IVAO and PilotEdge from.

This might be useful if you operate your own multi-player server. If you use, for example, the VATSIM format for providing online client information, you can inject this information into FS-FlightControl by pointing the VATSIM URL here to your own server.

You can also reset these URLs to their defaults.

Main Buttons

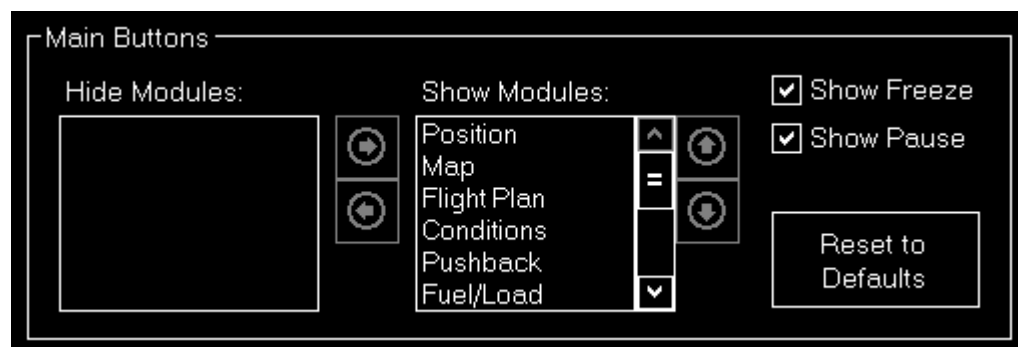


In case you do not need or use certain FS-FlightControl modules you can hide and even sort the related main buttons in the bottom of the screen.

You can also choose if you would like to see the Freeze and/or Pause button.

Use the button Reset to Default to restore all main buttons.

Unpause Delay

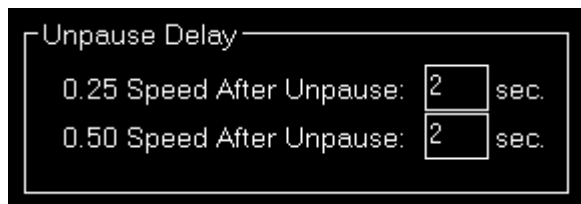

You can configure the unpause delay to your needs here.

This will be used to slowly accelerate your aircraft after the simulator was unpaused through FS-FlightControl.

To deactivate the unpause delay altogether just enter a for both values.

 Note: This option has no effect if you are connected to X-Plane.

Settings Password Protection




If you own a commercial license you can protect the settings with a password.

This ensure that only people who know this password will be able to access and change application settings.

To remove the password protection again leave the field empty and hit the button Set.

Print Options

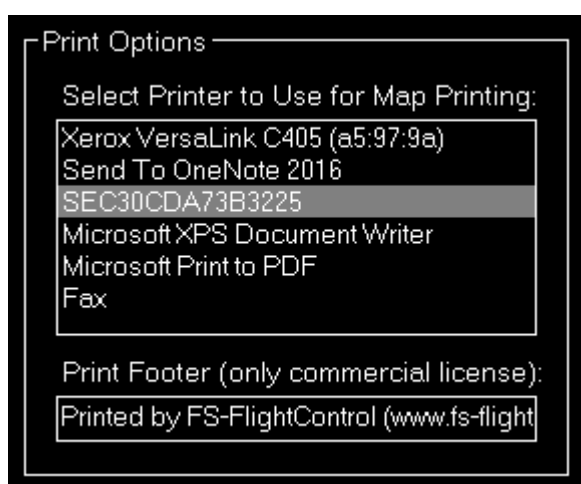


You can define here which printer should be used within this application.

Additionally, if you own a commercial license, you can also change the footer text or remove it completely.

Within the footer text you may use the placeholders {date}, {time} and {simulator_name} to

insert the current date and time.

Reset Window Location/Size

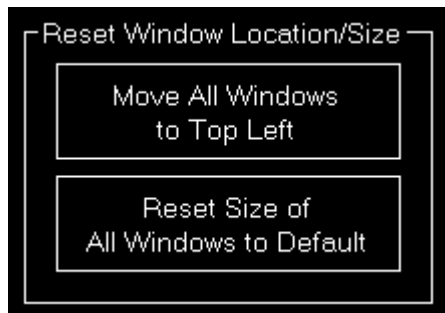

Use the button `Move All Windows to Top Left` if some application windows are no longer visible due to changes of connected monitors.


Use the button `Reset Size of All Windows to Default` in case you see application windows being unintentionally too large or small.

Send GPS Data



This section allows to enable a GPS data broadcast to feed thirdparty apps like ForeFlight, WingX Pro, Aerovie, FltPlan Go and SkyDemon with position data from your flight simulator.

Specific Client

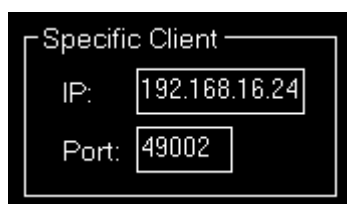

Normally it is enough to just broadcast the data to any client in the network, but if you would like to

send it only to a specific one you can enter its IP address and port number here.

Other

Other

☐ Also Freeze Altitude on Position Freeze

By default the button Freeze only freezes the aircraft position.

If you would like to have also the altitude frozen, you can select this here.

FS-FlightControl Manual:
<https://www.fs-flightcontrol.com/en/manual/>



PDF Generated on:
2024-04-26 02:56