

Table of Contents

Conditions	1
Current Weather	1
Weather Themes	1
Weather Mode for Active Sky Weather Engine	2
Change Weather Mode	3
Historic Dynamic Weather	4
Real-Time Weather	4
Continuous Real-Time Weather	4
ILS Visibility	5
Custom Weather	6
Load and Send Weather	6
Add as Weather Preset	6
Wind Layers	6
Cloud Layers	7
Visibility Layers	8
Temperature Layers	9
Atmospheric Pressure	9
Custom Weather for Active Sky Weather Engine	9
Surface Wind	10
Surface Visibility	10
Wind Aloft Layers	11
Cloud Layers	11
Atmospheric Pressure	13
Weather Presets	13
Season and Time	13
Set Custom Date and Time	13
Simulation Rate	14
General Info	14

Conditions

Define and save detailed custom weather conditions, enable real-time weather, set ILS visibility for all categories and set season, time and simulation rate.

Current Weather

Current Weather Provided by Flight Simulator

Current METAR: **EDDM 061404Z 24005KT 210V270 9999 CLR 05/M07 Q1029**

Translated to Text: **Location** Weather station Munich, Munich, Germany (EDDM)
Report Date and Time Thursday, February 6, 2020 at 14:04:00 UTC
☒ Show as Table **Surface Wind** With 5 kt from 240° true. Wind is varying between 210° and 270° true.
☒ Show Only **Visibility** 100,000.0 m in all directions
Official METAR **Clouds** No clouds below 12,000 ft
Temperature 5°C with a dew point of -7°C
QNH 1,029 hPa (mean sea level pressure)


Load in Custom Weather

Name:

Save as Weather Preset

In this section the current weather is displayed as METAR code and translated text.

You can choose if the translated text is displayed as continuous text or structured table. Additionally you can decide if all or only official weather METAR data is displayed.

 **Note:** The flight simulator uses the official METAR format, but extends it with additional extensions. FS-FlightControl can decode both, the official METAR data as well as the flight simulator extensions.


You can load the current weather into the [custom weather](#) section or save it as [weather presets](#).

Weather Themes




Here all themes that are available in the flight simulator are listed and can be activated with just one click.

Weather Mode for Active Sky Weather Engine

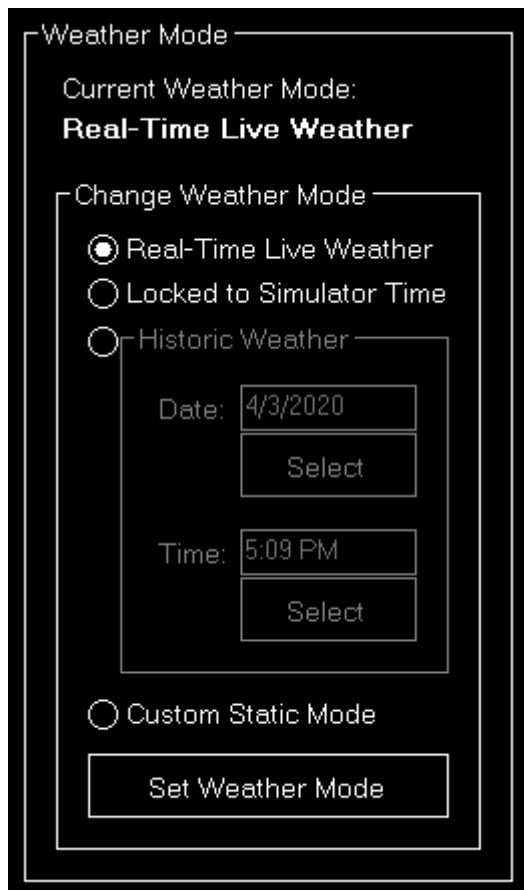


The screenshot shows a 'Weather Mode' settings panel. At the top, it says 'Current Weather Mode: Real-Time Live Weather'. Below this is a 'Change Weather Mode' section containing three radio buttons: 'Real-Time Live Weather' (which is selected), 'Locked to Simulator Time', and 'Historic Weather'. The 'Historic Weather' option is expanded, showing a 'Date' field with '4/3/2020' and a 'Time' field with '5:09 PM', each with a 'Select' button below it. At the bottom of the 'Change Weather Mode' section is a 'Custom Static Mode' radio button. A 'Set Weather Mode' button is located at the very bottom of the panel.

In this area you can see the current Active Sky weather mode and change it, too.

 Note: This section only appears if Active Sky is enabled as weather engine in the [Settings](#) module.

Change Weather Mode

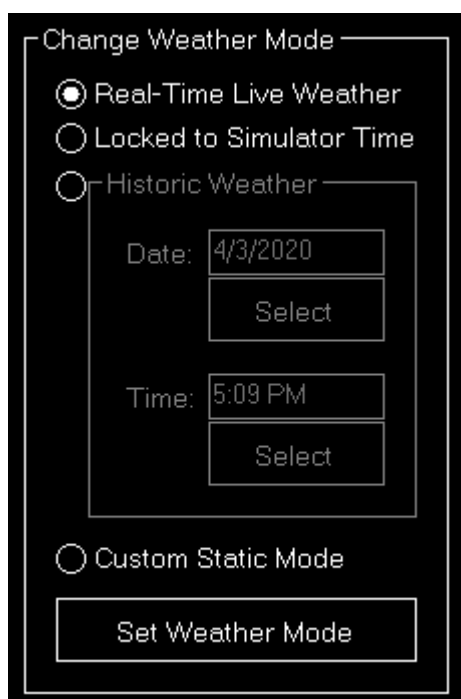

This screenshot is a close-up of the 'Change Weather Mode' section from the previous image. It shows the three radio button options: 'Real-Time Live Weather' (selected), 'Locked to Simulator Time', and 'Historic Weather'. The 'Historic Weather' option is expanded, showing the 'Date' field with '4/3/2020' and the 'Time' field with '5:09 PM', each with a 'Select' button below it. The 'Custom Static Mode' radio button is also visible at the bottom of this section. A 'Set Weather Mode' button is located at the very bottom of the panel.

Select the desired weather mode here and set it with the button Set Weather Mode.


Historic Dynamic Weather



The screenshot shows a panel titled "Historic Weather". It contains two input fields: "Date:" with the value "4/3/2020" and a "Select" button below it; and "Time:" with the value "5:09 PM" and another "Select" button below it.

If you have chosen the hisotoric dynamic weather mode you can set the historic date and time here.

Real-Time Weather

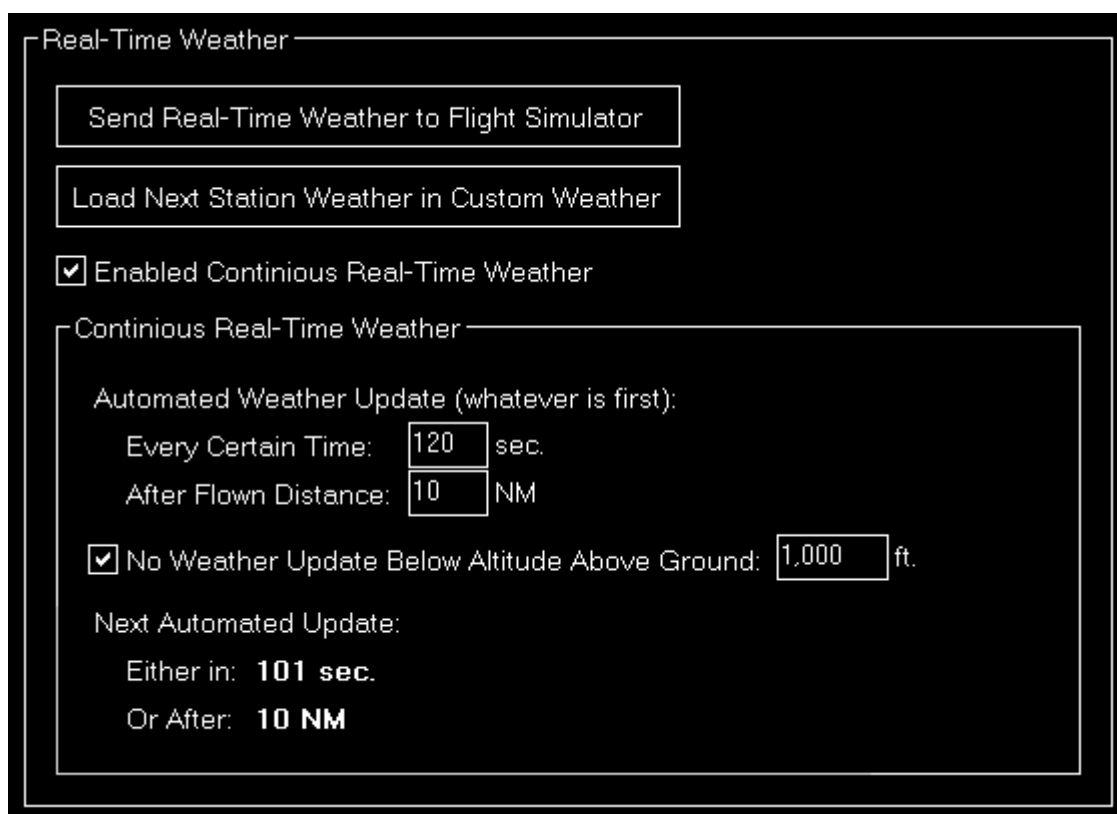

The screenshot shows a panel titled "Real-Time Weather". It contains several options:

- A button labeled "Send Real-Time Weather to Flight Simulator".
- A button labeled "Load Next Station Weather in Custom Weather".
- A checked checkbox labeled "Enabled Continious Real-Time Weather".
- A sub-panel titled "Continious Real-Time Weather" containing:
 - The text "Automated Weather Update (whatever is first):".
 - A setting "Every Certain Time:" with a value of "120" and the unit "sec".
 - A setting "After Flown Distance:" with a value of "10" and the unit "NM".
 - A checked checkbox labeled "No Weather Update Below Altitude Above Ground:" with a value of "1,000" and the unit "ft".
 - The text "Next Automated Update:".
 - A setting "Either in:" with a value of "101" and the unit "sec".
 - A setting "Or After:" with a value of "10" and the unit "NM".

You have the option to enable real-time weather in this section.

Therefore you can either send the current real-time weather directly to flight simulator or load it into the [custom weather](#) section.

 Note: You can change the used real-time weather source in the [Settings](#) module.

Continous Real-Time Weather

Continuous Real-Time Weather

Automated Weather Update (whatever is first):

Every Certain Time: sec.

After Flown Distance: NM

☒ No Weather Update Below Altitude Above Ground: ft.

Next Automated Update:

Either in: **101 sec.**

Or After: **10 NM**

To enable continues real-time weather just activate the corresponding check box. This will enable automated real-time weather updates for all weather stations around the current aircraft location.

You can choose how often this weather update should be performed by entering a certain time interval or a flown distance (or both).

Additionally you can define that automated weather updates should not be performed when the aircraft is below a certain altitude above ground. This makes sure that the pilot is not disturbed while doing a final approach.

Below that some information is displayed to show when the next automated weather update will be performed.

ILS Visibility

ILS Visibility

CAT I
CAT I LTS
CAT II

CAT IIIa
CAT IIIb
CAT IIIc

Custom Visibility

Decision Height: ft

Runway Visibility: m

Set Custom Visibility

Reference Airport

Flight Plan Departure

Flight Plan Arrival

Custom

Airport: **Munich (EDDM)**

Runway: **08R**

Use this section to set a pre-defined visibility condition for any of the ILS categories.

Following values are the default for decision height and runway visibility:

	Decision Height	Runway Visibility
CAT I	200 ft (60 m)	1,800 ft (550 m)
CAT II	100 ft (30 m)	1,000 ft (300 m)
CAT IIIa	50 ft (15 m)	600 ft (180 m)
CAT IIIb	30 ft (10 m)	150 ft (46 m)
CAT IIIc	0 ft (0 m)	30 ft (10 m)

 Note: You can customize these values in the [Settings](#) module to your needs.

Custom Weather



In case you want to define a completely custom weather situation you can do so in this section.

Load and Send Weather



If you have a METAR string as starting point for your custom weather enter it in the corresponding text field on top of the screen and click on the Load button. This will decode the weather situation defined in the METAR string into the custom weather sections below.

To send the weather define in these custom weather sections to the flight simulator, just click on the Send Weather button.

Add as Weather Preset



You may also save your custom weather situation as [weather presets](#). Just enter a name and then click on the Add Preset button.

Wind Layers




You can define all wind layers - including the surface wind - in this section.

First enter the speed and optional gust speed (keep it if not needed) of the wind layer.

Next you can define the direction where the wind is coming from. You have two additional options regarding the wind direction:

You can define it as Entirely Variable or even enter the from and to direction where the wind is coming from. If the wind should come only from a fixed direction, just keep the Entirely Variable Direction check box unchecked and the variation input fields as .

Next you can define if the current wind layer is a surface wind or an wind aloft. In case of a surface wind you have the additional option to define a depth/height of the wind and if it is a wind aloft you can define a maximum altitude (MSL) for it instead.

 **Note:** You may add as many wind layers as you want, but there can be only one of them defined as surface wind.

Finally you can define turbulances in this wind layer as

- None
- Light
- Moderate
- Heavy
- Severe

and wind shears as:

- Gradual (none)
- Moderate
- Steep
- Instantaneous

Cloud Layers



Here you can define all cloud layers of the custom weather situation.

First enter a base altitude (MSL) for the cloud layer.

Then you can define several additional parameters for like cloud coverage as of

- Few Clouds
- Scattered Clouds
- Broken Clouds
- Overcast
- 1/8 Coverage
- 2/8 Coverage
- 3/8 Coverage
- 4/8 Coverage
- 5/8 Coverage
- 6/8 Coverage
- 7/8 Coverage
- 8/8 Coverage

cloud type as of

- Cirrus
- Stratus
- Cumulus
- Cumulo-nimbus

top of the cloud as of

- Flat
- Round
- Anvil

turbulances in the cloud layer as of

- None
- Light
- Moderate
- Heavy
- Severe

type of precipitation as of

- None
- Rain
- Freezing Rain
- Hail
- Snow

precipitation strength as of

- Very Light
- Light
- Moderate
- Heavy
- Dense

the base altitude of the precipitation as well as the icing rate as of

- None
- Trace
- Light
- Moderate
- Severe

Visibility Layers



The visibility layers of the custom weather situation can be defined in this section.


First enter the base and maximum (top) altitude (MSL) of the visibility layer.

Then you can define the visibility in this layer itself.

Finally you can decide in which direction this visibility should be effective as of

- All
- North-West

- North
- North-East
- East
- South-East
- South
- South-West
- West

 Note: To set the same visibility for more than one direction, but not for all, just create another visibility layer with the same base and maximum altitude.

Temperature Layers



Also individual temperature layers can be defined for your custom weather situation.

First enter the maximum altitude (MSL) up to which this layer should be valid.

Then you can enter the temperature and dew point of this temperature layer.

Atmospheric Pressure



Here you can define the atmospheric pressure for your custom weather situation.

Custom Weather for Active Sky Weather Engine

Custom Weather for Active Sky Weather Engine

Load from Current Weather

Load from METAR String

Save as Preset

Send Custom Weather

Surface Wind

Calculate Direction and Speed

Direction: °
Variance: °
Wind Speed: kt
Gust Speed: kt
Temperature: °F
Dew Point: °F
Turbulence:

Surface Visibility

Base Altitude: ft
Max. Altitude: ft
Visibility: m

3,000 ft

Wind Aloft Layer

Calculate Direction and Speed

Direction: °
Speed: kt
Temperature: °F
Turbulence:

39,300 ft

Cloud Layer


Base Altitude: ft
Top Altitude: ft
Cloud Coverage:
Cloud Type:
Turbulence:
Type of Precipitation:
Precipitation Strength:
Icing Rate:

Delete Layer


Atmospheric Pressure

Pressure: hPa

In case you want to define a completely custom weather situation you can do so in this section.

 **Note:** This version of the custom weather section only appears if Active Sky is enabled as weather engine in the [Settings](#) module.

Surface Wind

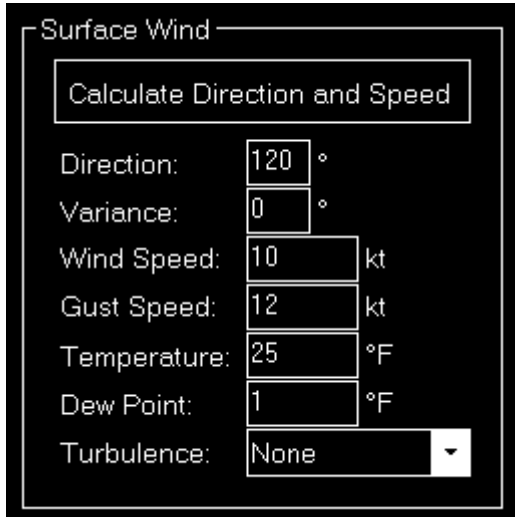

Surface Wind

Calculate Direction and Speed

Direction: 120 °

Variance: 0 °

Wind Speed: 10 kt

Gust Speed: 12 kt

Temperature: 25 °F

Dew Point: 1 °F

Turbulence: None

You can define the surface wind in this section.

First enter the speed and optional gust speed (keep it if not needed) of the wind.


Next you can define the direction where the wind is coming from including a variance.

Also the temperature and the dew point on the surface can be defined here.

Finally you can define turbulences in the surface wind as:

- None
- Light
- Moderate
- Heavy
- Severe

Surface Visibility

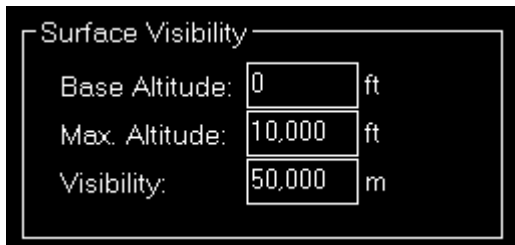

Surface Visibility

Base Altitude: 0 ft

Max. Altitude: 10,000 ft


Visibility: 50,000 m

The surface visibility of the custom weather situation can be defined in this section.

First enter the base and maximum (top) altitude (MSL) of the visibility layer.

Then you can define the visibility itself.

Wind Aloft Layers

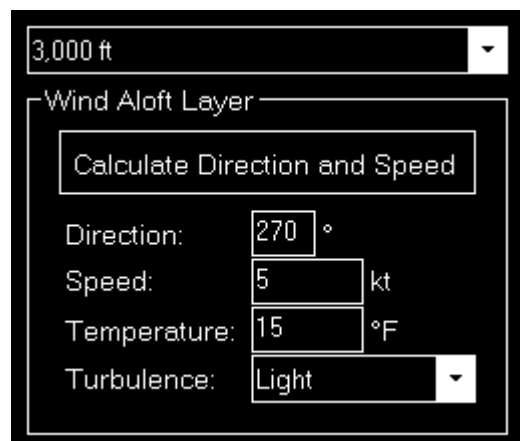

The screenshot shows a 'Wind Aloft Layer' configuration window. At the top, there is a dropdown menu set to '3,000 ft'. Below this is a 'Calculate Direction and Speed' button. The main area contains four input fields: 'Direction' with a value of '270' and a degree symbol, 'Speed' with a value of '5' and 'kt' units, 'Temperature' with a value of '15' and '°F' units, and 'Turbulence' with a dropdown menu set to 'Light'.


You can define all wind aloft layers in this section.

First enter the speed and the direction of the wind layer.

Next you can define the temperature and finally the turbulences in this wind layer as:

- None
- Light
- Moderate
- Heavy
- Severe

Cloud Layers

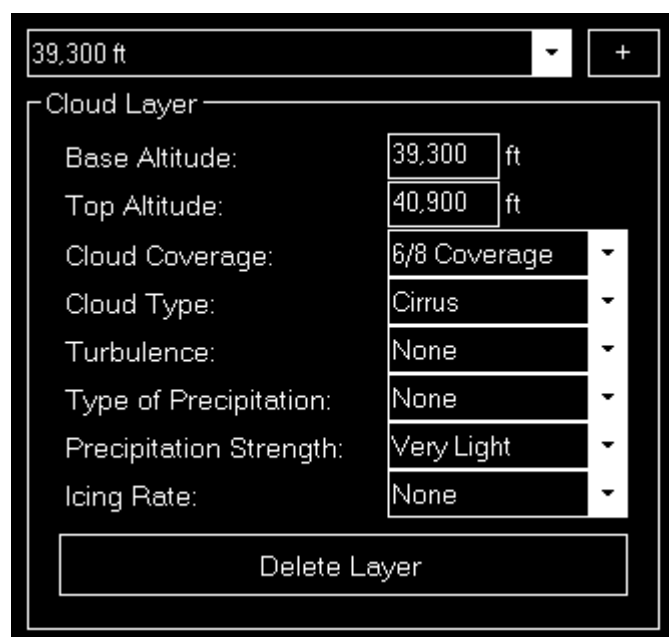

The screenshot shows a 'Cloud Layer' configuration window. At the top, there is a dropdown menu set to '39,300 ft' and a '+' button. Below this is a 'Cloud Layer' section with several input fields: 'Base Altitude' (39,300 ft), 'Top Altitude' (40,900 ft), 'Cloud Coverage' (6/8 Coverage), 'Cloud Type' (Cirrus), 'Turbulence' (None), 'Type of Precipitation' (None), 'Precipitation Strength' (Very Light), and 'Icing Rate' (None). At the bottom, there is a 'Delete Layer' button.

Here you can define all cloud layers of the custom weather situation.

First enter a base and top altitude (MSL) for the cloud layer.

Then you can define several additional parameters for like cloud coverage as of

- 1/8 Coverage
- 2/8 Coverage
- 3/8 Coverage
- 4/8 Coverage
- 5/8 Coverage
- 6/8 Coverage
- 7/8 Coverage
- 8/8 Coverage

cloud type as of

- Cirrus
- Stratus
- Cumulus
- Cumulo-nimbus

turbulances in the cloud layer as of

- None
- Light
- Moderate
- Heavy
- Severe

type of precipitation as of

- None
- Rain
- Freezing Rain
- Hail
- Snow


precipitation strength as of

- Very Light
- Light
- Moderate
- Heavy
- Dense

as well as the icing rate as of

- None
- Trace
- Light
- Moderate
- Severe

Atmospheric Pressure

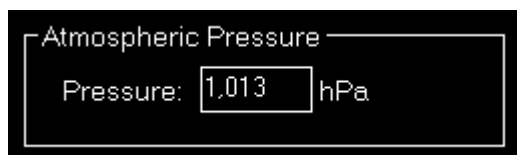

Here you can define the atmospheric pressure for your custom weather situation.

Weather Presets



All your saved weather presets are listed here. There is no limit in the number of weather presets you can define.

To delete a weather preset again, just right-click (for touch-screens: "long touch") on one of the presets. Then you will be asked if you want to delete it.

Season and Time



In this section you have a quick and easy control of the current season.


Just click on one of the pre-defined season buttons.

Set Custom Date and Time



Additionally you can define a completely custom date and time in this section.

Simulation Rate

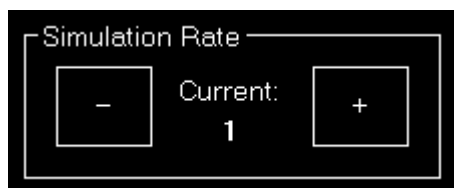

Beside a very detailed weather configuration system this module offers here also an easy way to change the current simulation rate of the simulator.

General Info



Additionally in the bottom right of the screen you always have an eye on the current frame rate and simulator time.

FS-FlightControl Steam Products Manual:

<https://www.fs-flightcontrol.com/en/steam/manual/>

PDF Generated on:

2025/08/20 14:51

