# FS-FlightControl

## Manual

**Instructor Operator Station**
for Microsoft Flight Simulator, Prepar3D and X-Plane

**FS-FlightControl · AB-Tools GmbH**
E-mail: info@fs-flightcontrol.com · Internet: www.fs-flightcontrol.com
Marsstraße 78, 80335 München, Germany · Phone: +49 89 38898588 · Fax: +49 89 38898589
Bank Account: Grenke Bank AG · IBAN: DE 49 20130400 0060270139 · BIC: GREBDEH1XXX
Register: Amtsgericht München, HRB 202859 · Finance Office: München für Körperschaften · VAT ID DE273587389


# Table of Contents

**VIEW/SLEW** ..... 1
***Camera View*** ..... 1
Back to Cockpit ..... 1
Horizontal View Change ..... 2
Rotation ..... 2
Zoom ..... 3
Reset and External Views ..... 3
***Slew Mode*** ..... 3
Enable/Disable, Stop and Reset ..... 4
Horizontal Slew ..... 5
Move Up/Down and Banking ..... 5
Pitching ..... 5

# VIEW/SLEW

Control the current camera view and zoom as well as use the aircraft slew mode to move your aircraft exactly to the position you need it.

## Camera View

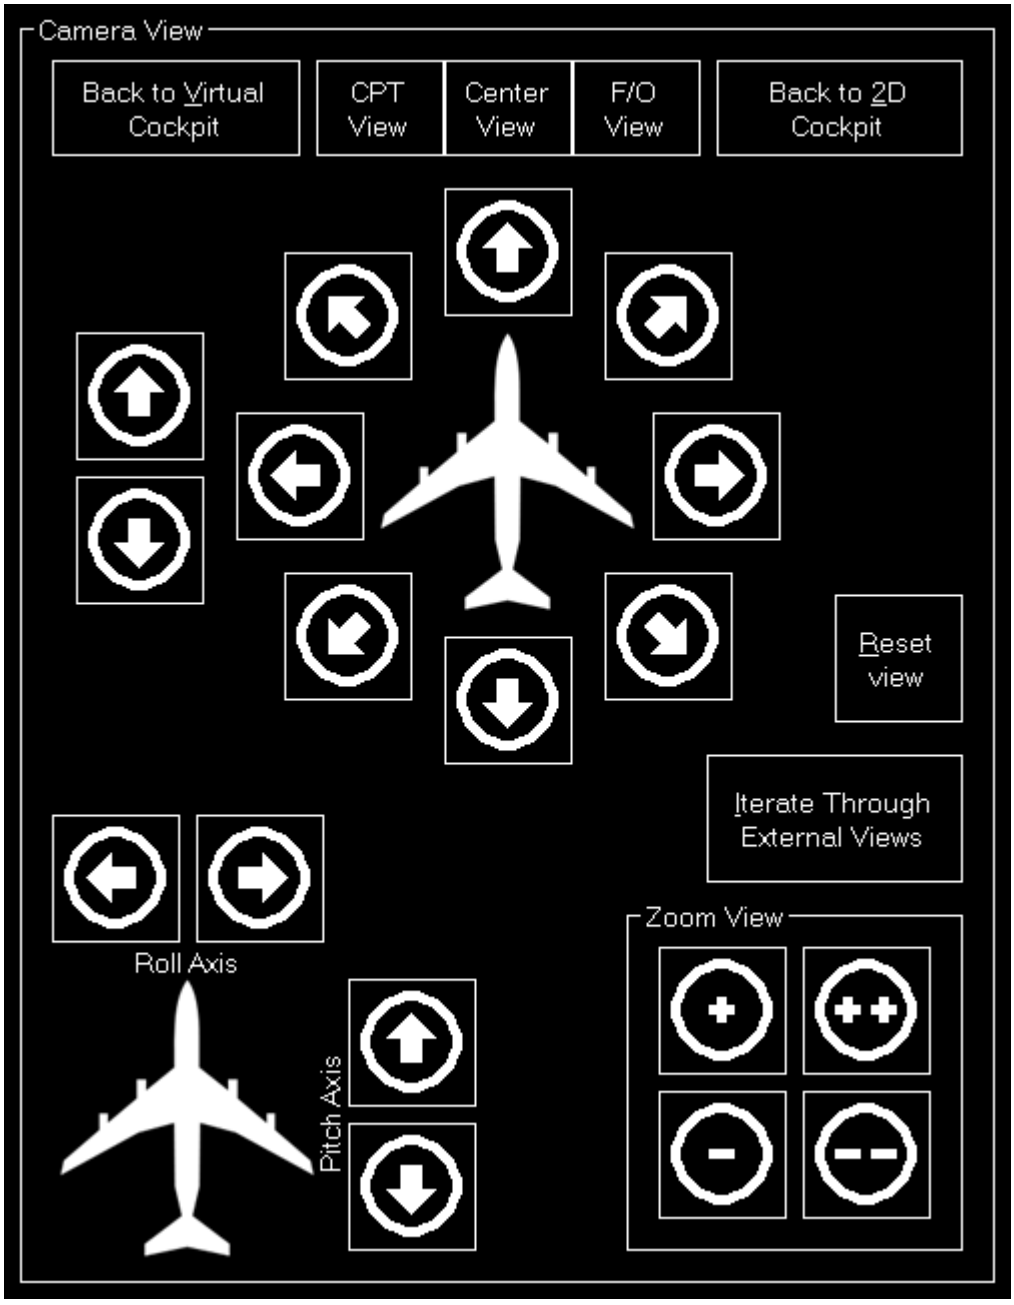


The left section in the screen controls the current camera view.


### Back to Cockpit




First there is an easy way to go back to the cockpit view: You can either go back to the virtual cockpit (3D) or the 2D cockpit.

Note: These buttons are only working if there is a 3D or 2D cockpit available for your current aircraft.

## Horizontal View Change

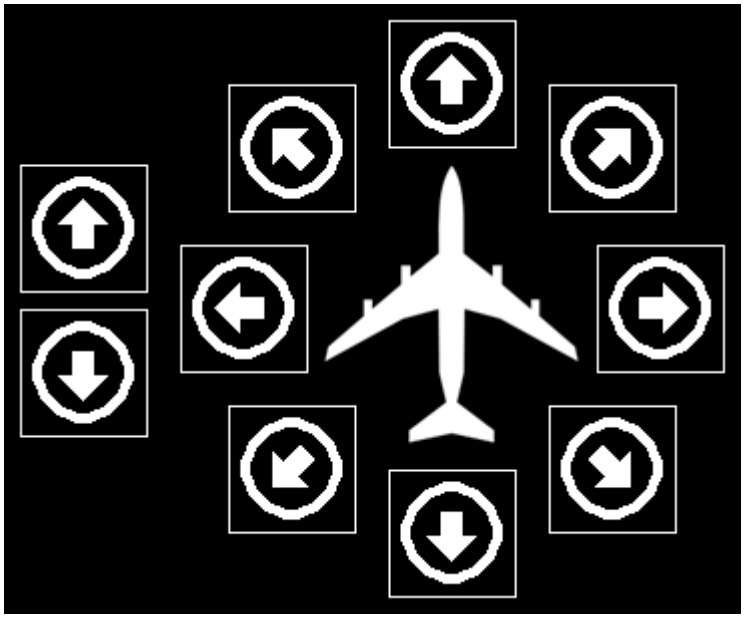


With the left two buttons you can move the view forward or backward.

The other buttons can be used to move the view to all directions.

Note: The arrows are displayed based on the virtual cockpit perspective.


## Rotation

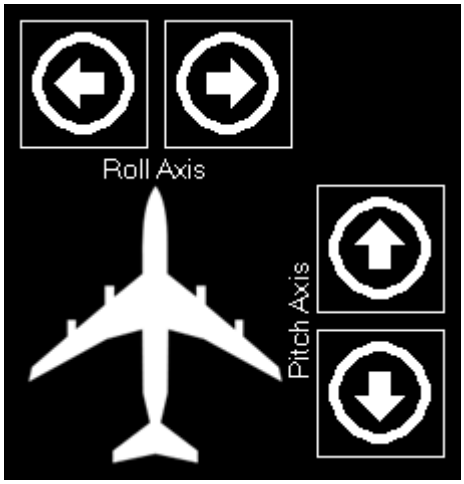


Use these buttons rotate the view left and right or up and down.

Note: This section is not available for X-Plane.

## Zoom

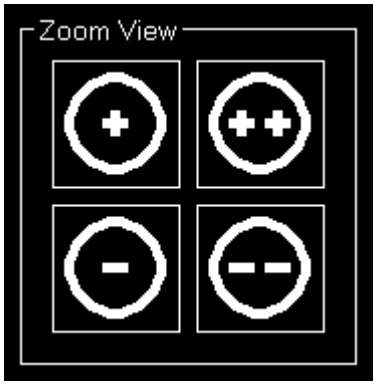



Here you can zoom the view in and out by using two different speed levels.

## Reset and External Views

Additionally you can reset the current view to its defaults or iterate through all external views defined by the currently loaded aircraft.

# Slew Mode

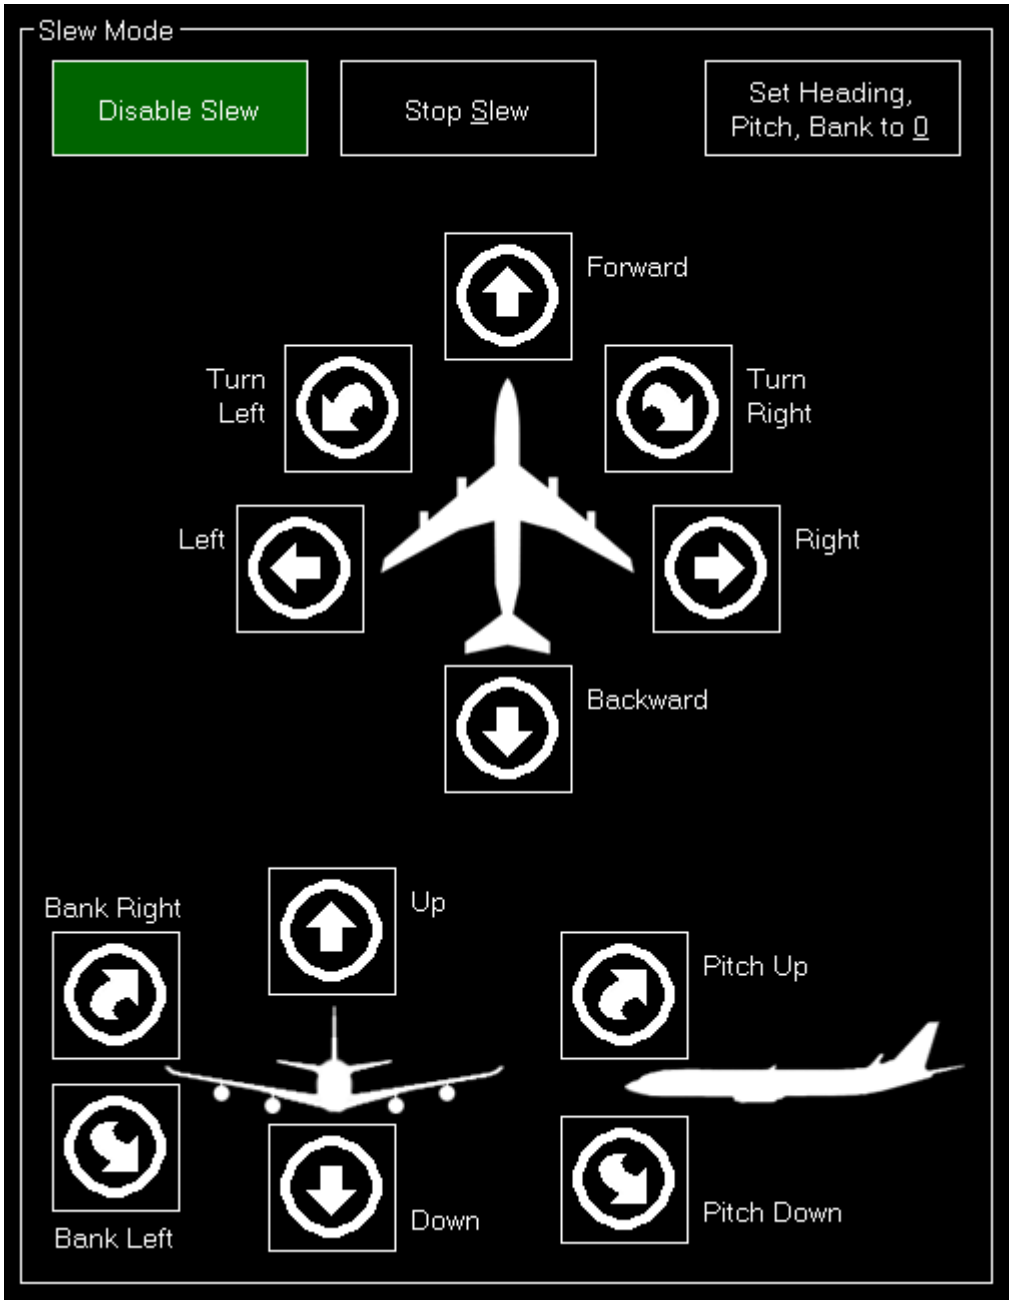


The right section in the screen controls the slew mode.

You can use this to move your aircraft exactly to the position where you need it.

## Enable/Disable, Stop and Reset





First you need to enable the slew mode with the corresponding button. You can disable it by clicking the same button again.

There is also an option to stop slew (without disabling it) and setting heading, pitch and bank to zero

with just one click.


Note: The button `Set Heading, Pitch, Bank to 0` is not available for X-Plane.

## Horizontal Slew

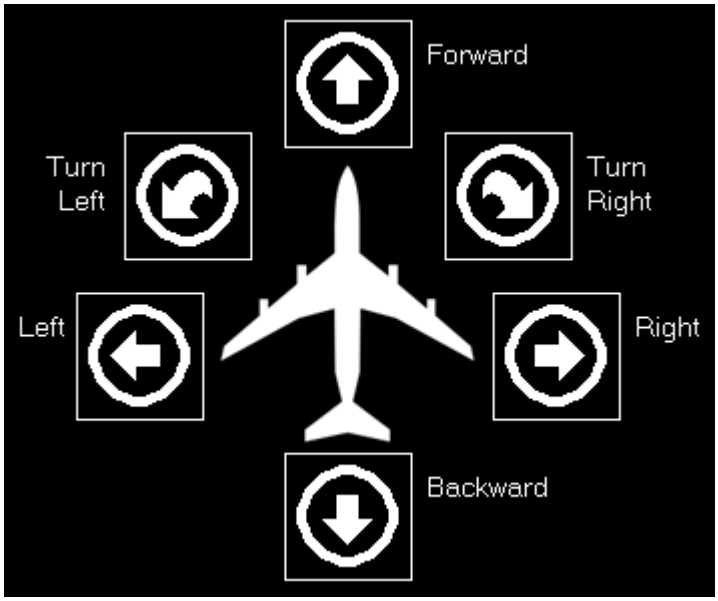



Here you can slew the aircraft forward and backward, left and right as well as turn it left and right.

## Move Up/Down and Banking

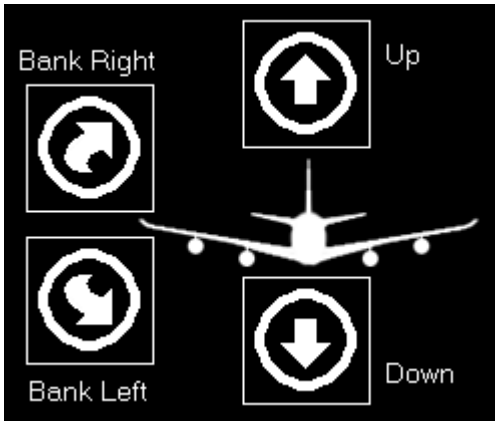


Next you can move the aircraft up and down as well as bank it left and right.

## Pitching

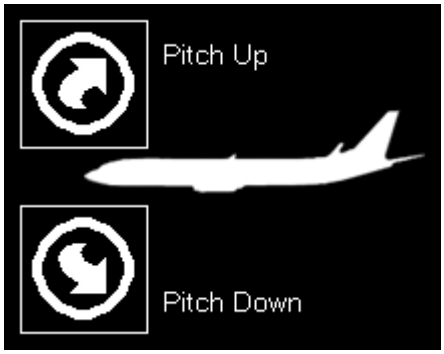


Finally you can pitch the aircraft up and down.

**FS-FlightControl Manual:**
***https://www.fs-flightcontrol.com/en/manual/***

**PDF Generated on:**
2026-11-09 08:02